


## CFC


Installatie, onderhoud en bedieningshandleiding

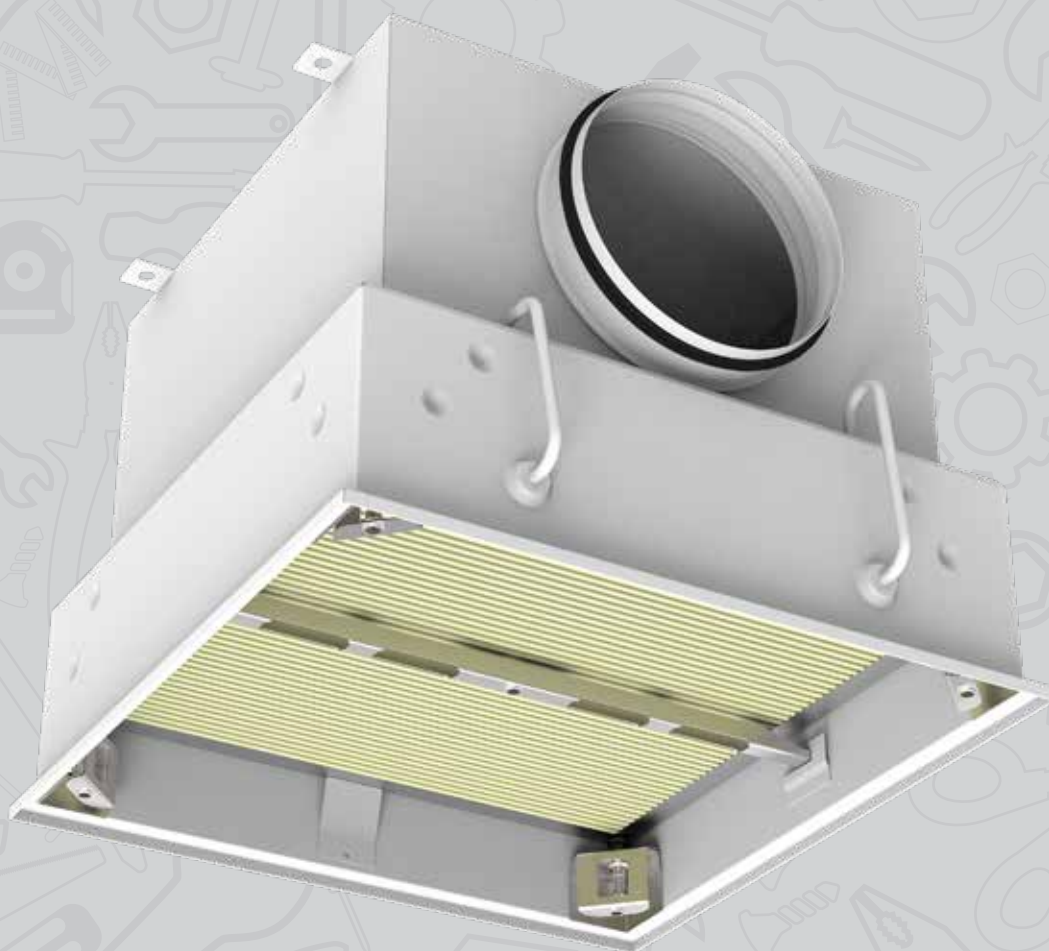


BURE-HC




CFC-C, -B, -G, -R

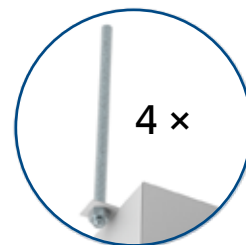


CFC-W

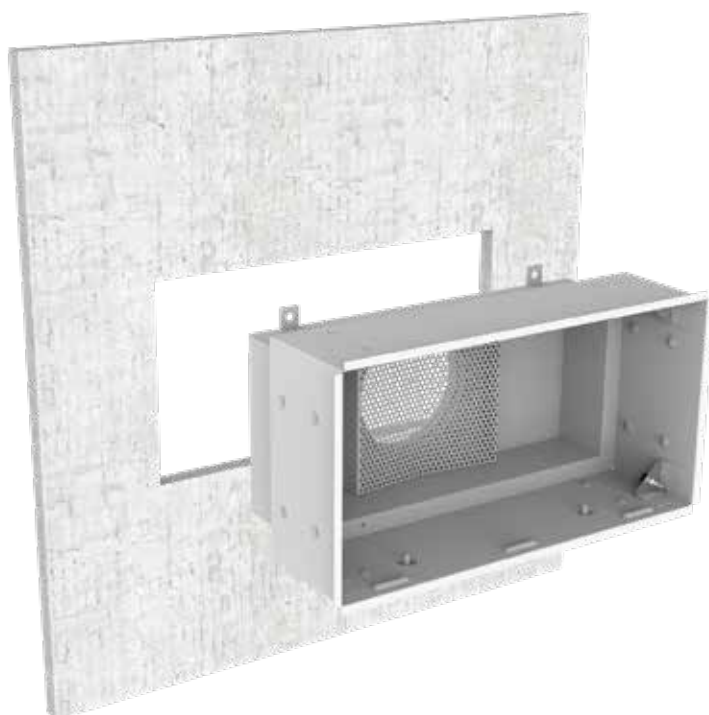


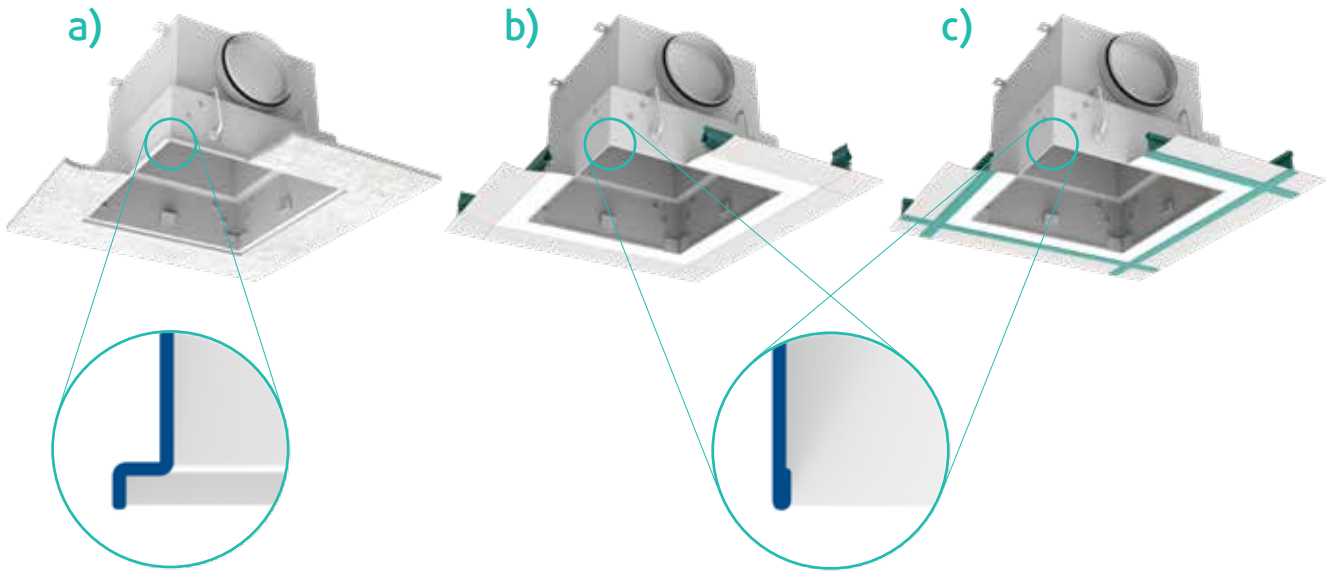


a) CFC-C, -B, -G, -R

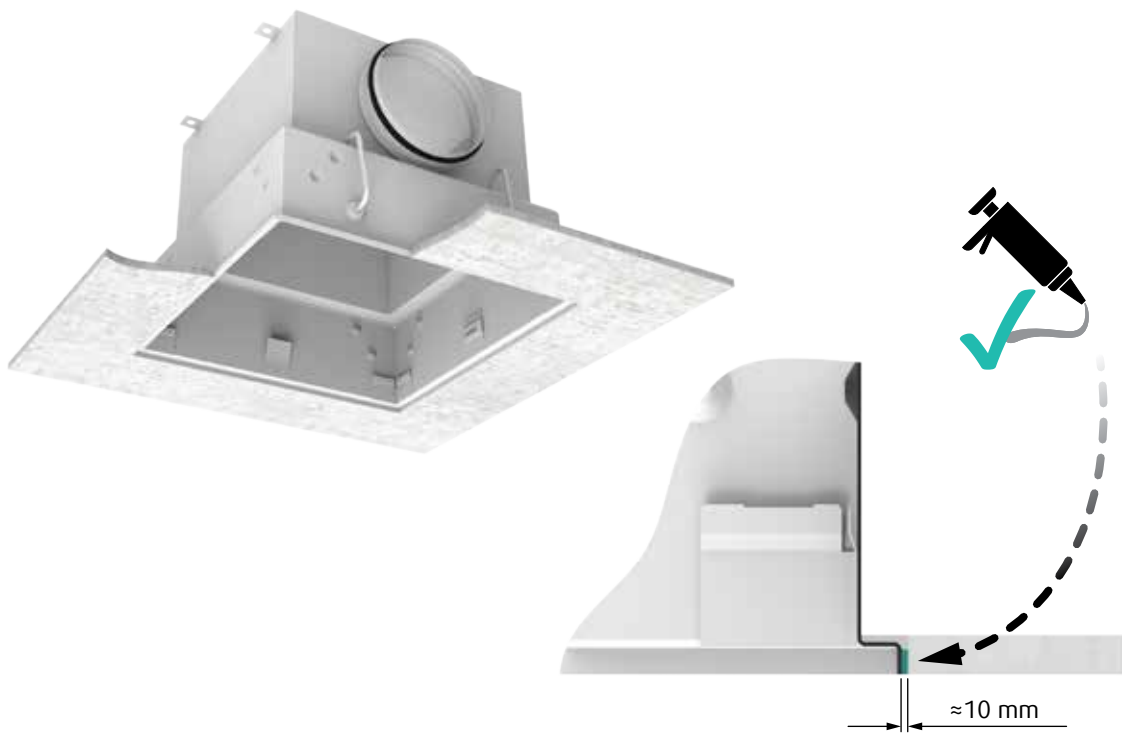

b) CFC-C, -B, -R

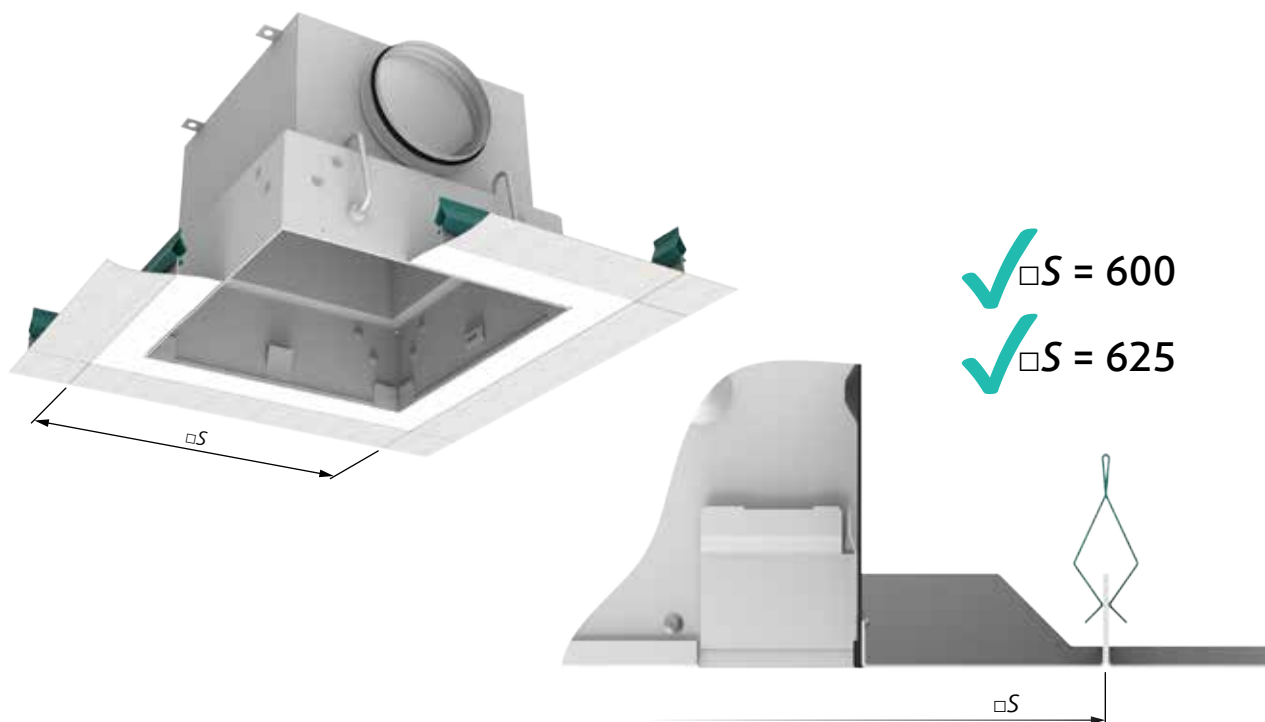


c) CFC-C, -B, -R

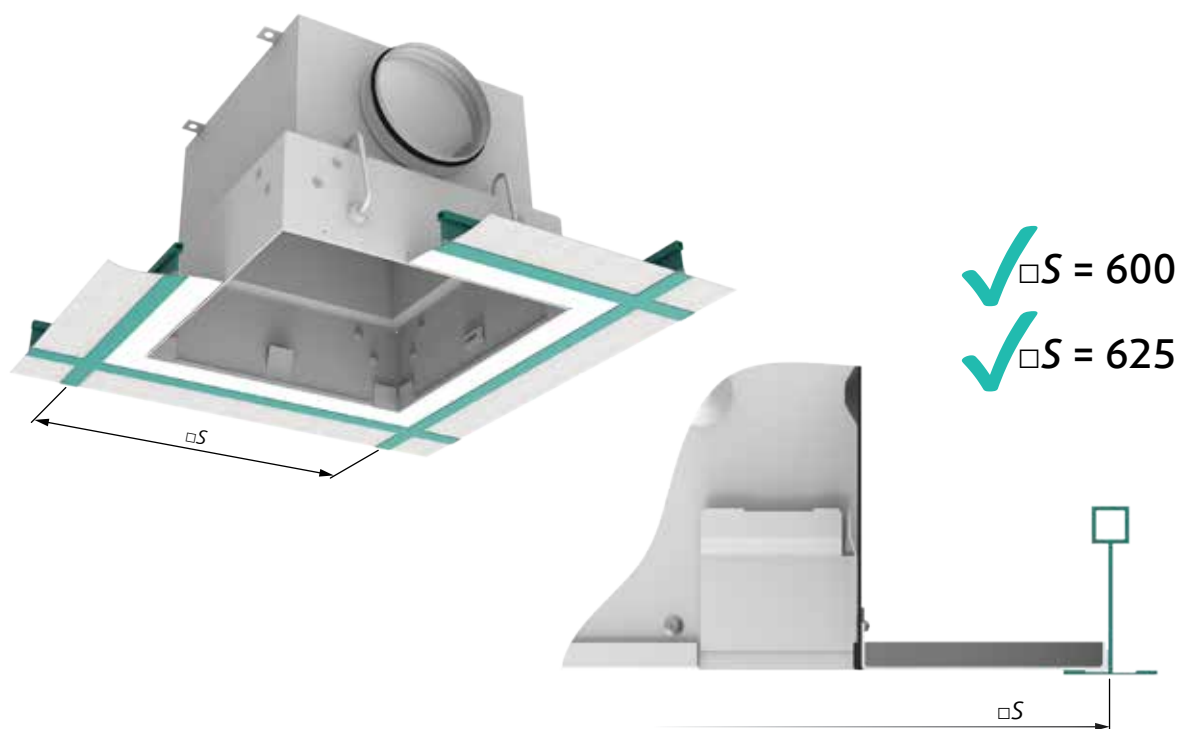




CFC-C, -B, -R


1.

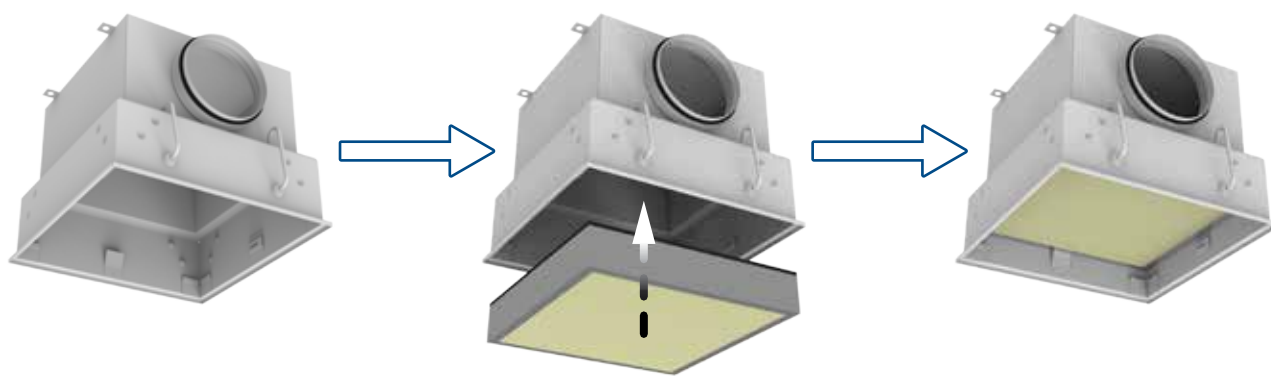


2.

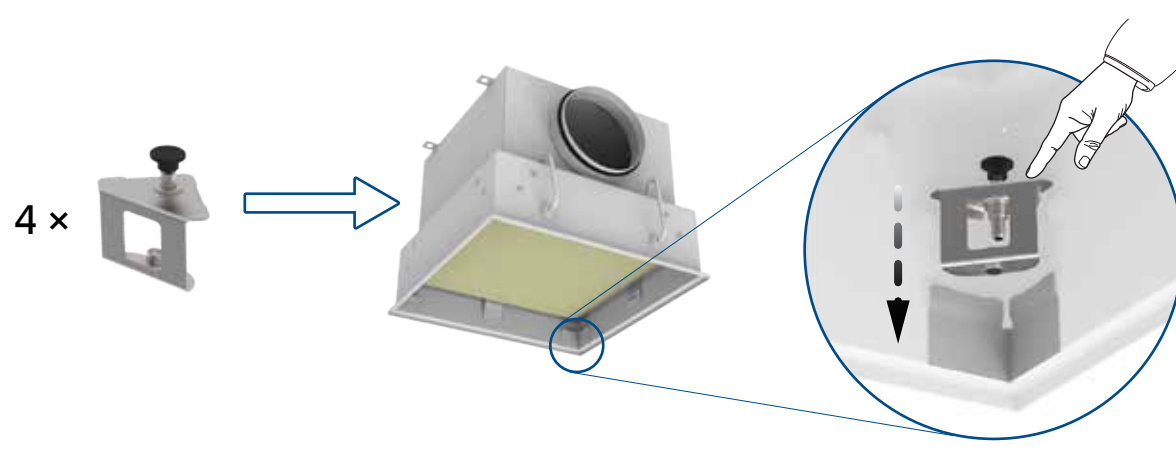


3.

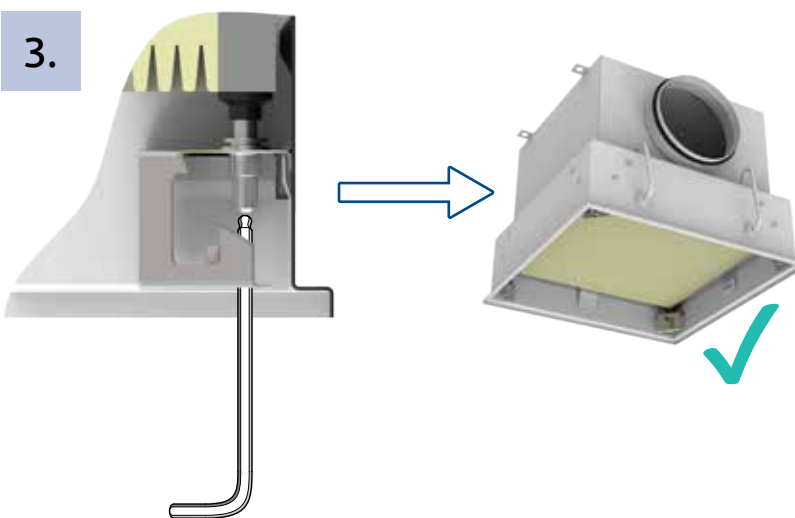

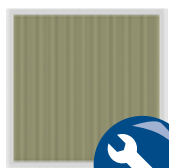


CFC-G

1.

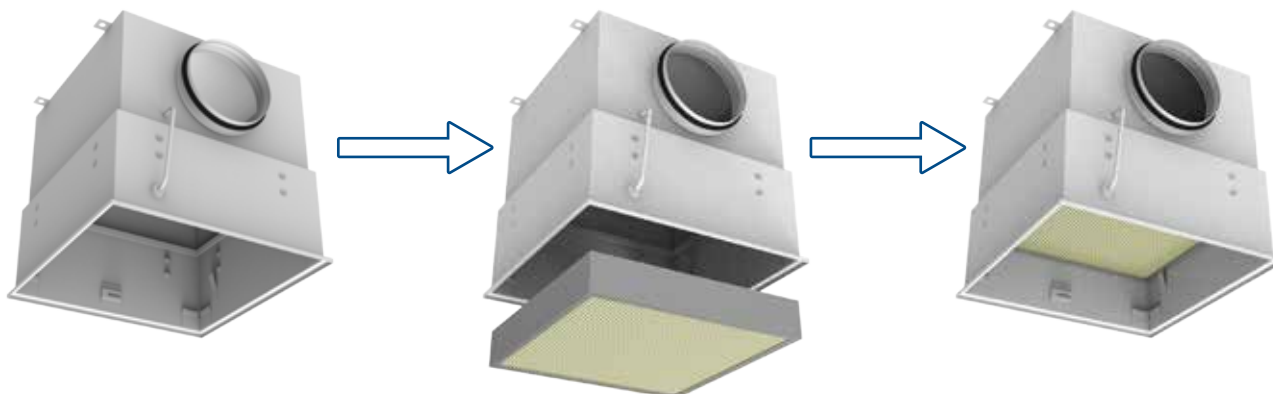


2.

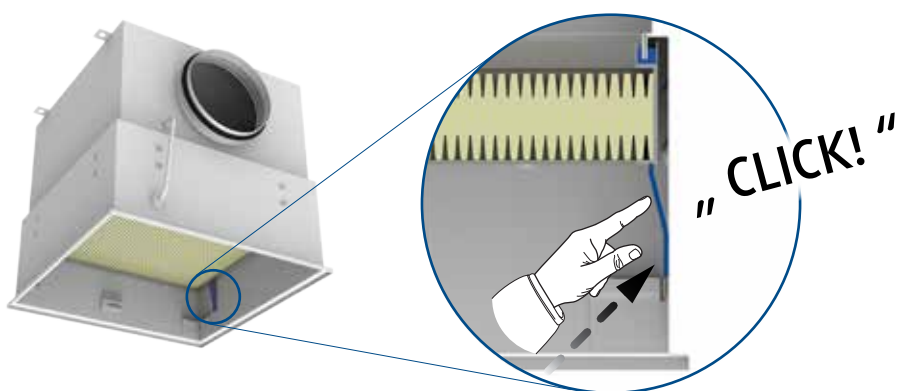





CFC-C, -B, -G, -R  
 +  
 CFC-AQ, -VR, -VN

1.

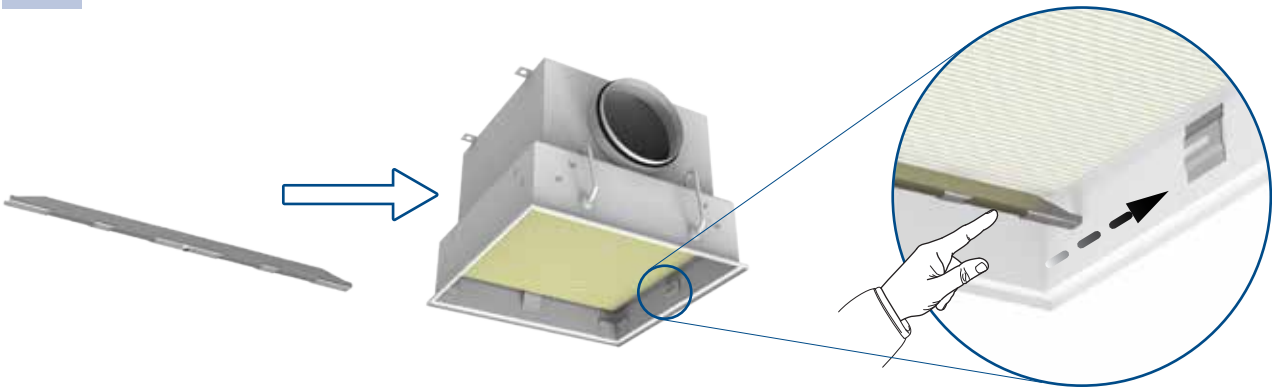


2.

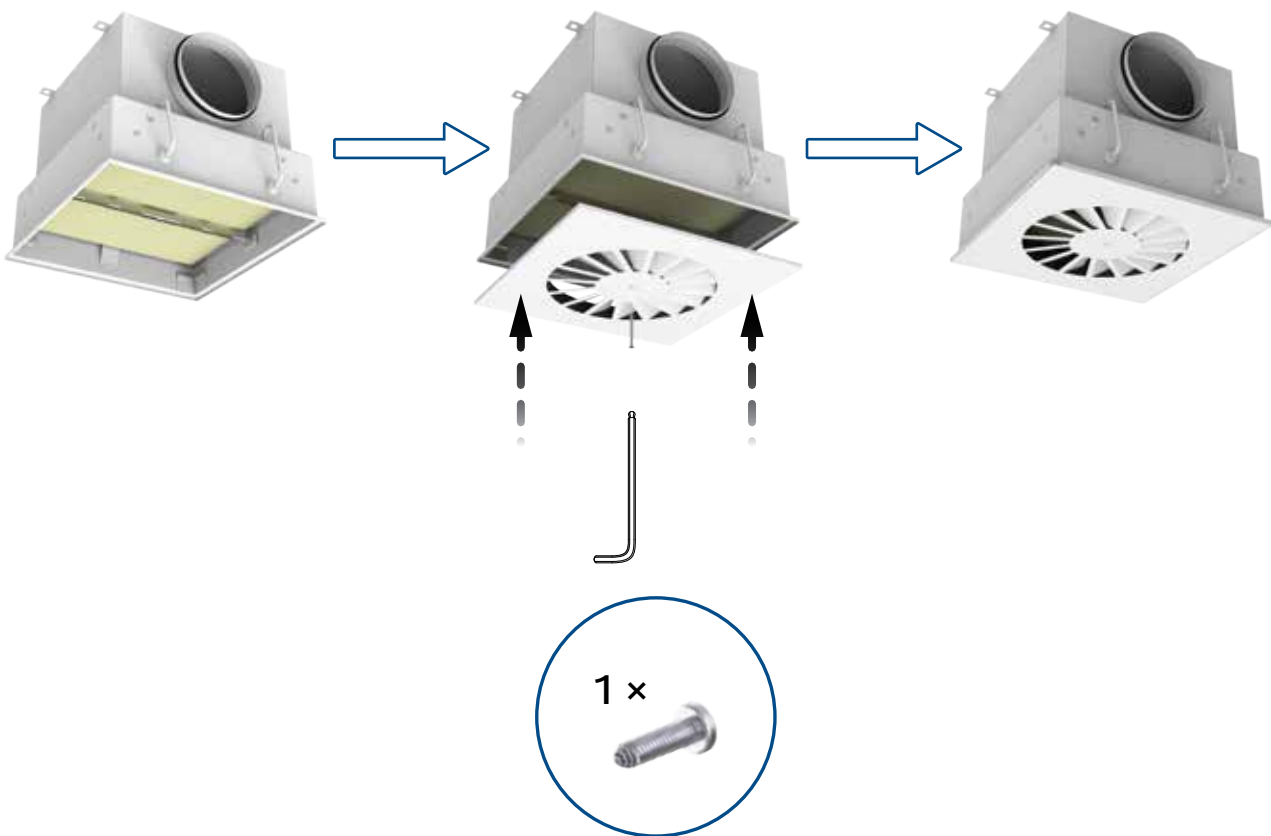

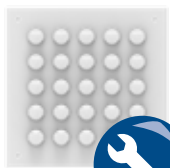


CFC-C, -B, -G, -R  
+  
CFC-PP, -SF


1.

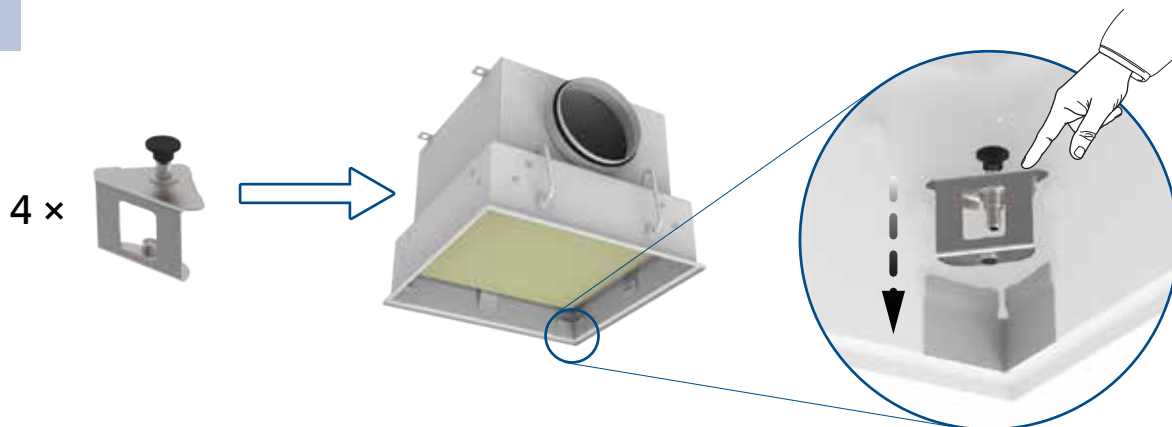



2.

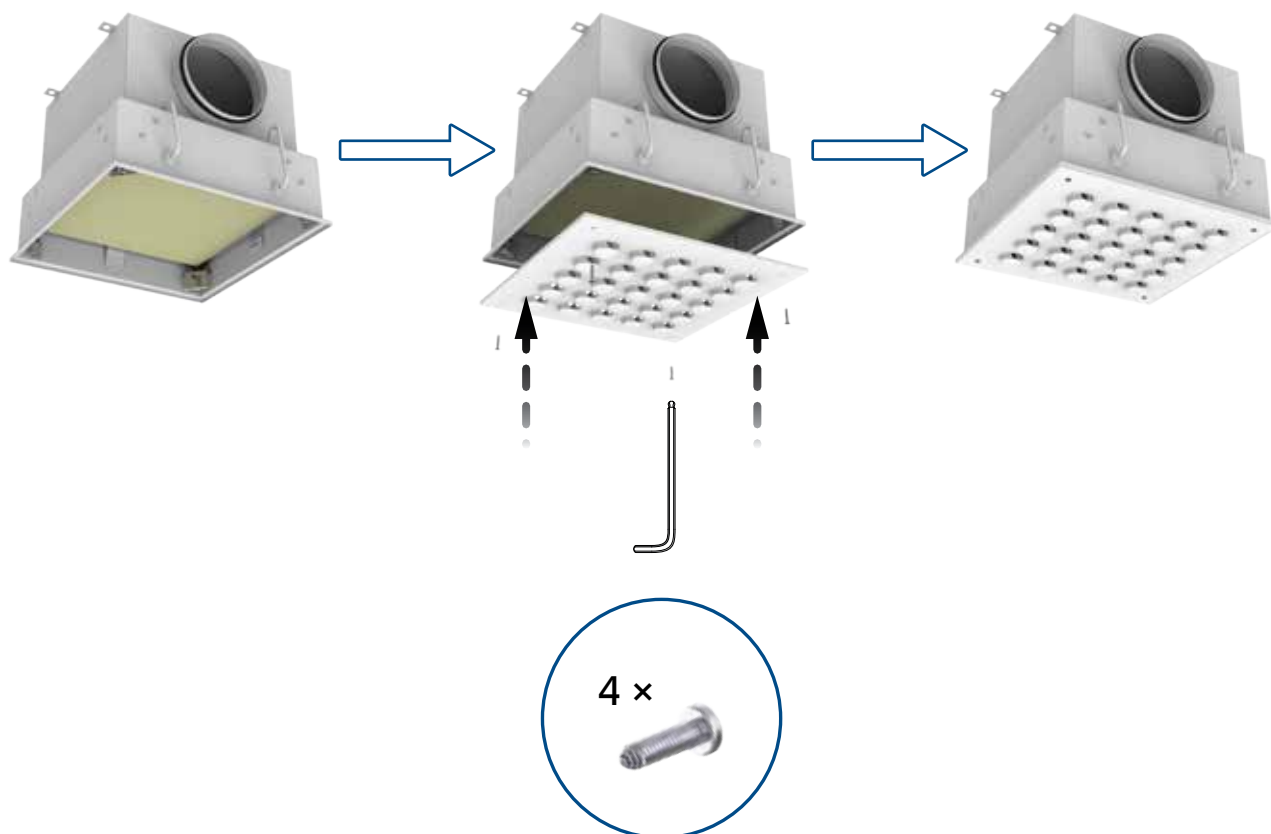




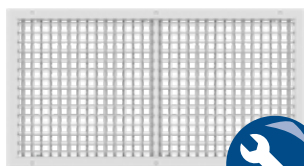




CFC-W + CFC-NA

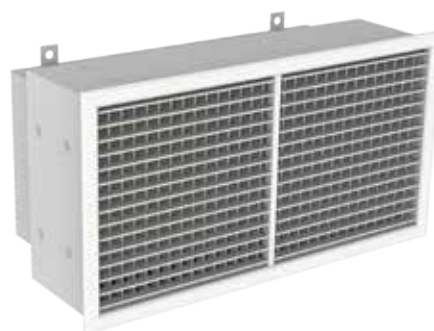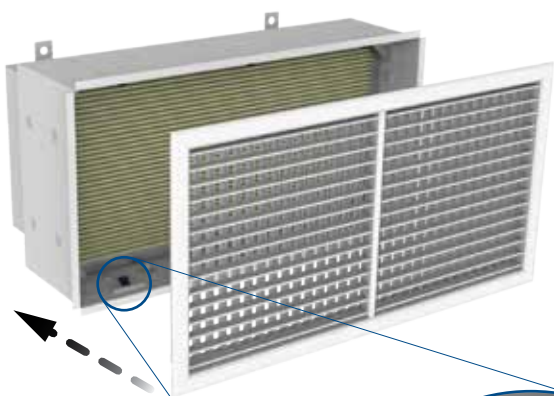




" CLICK! "

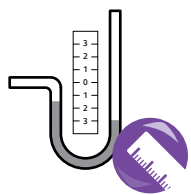


### CFC-C, -B, -G, -R, -W

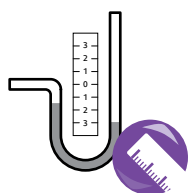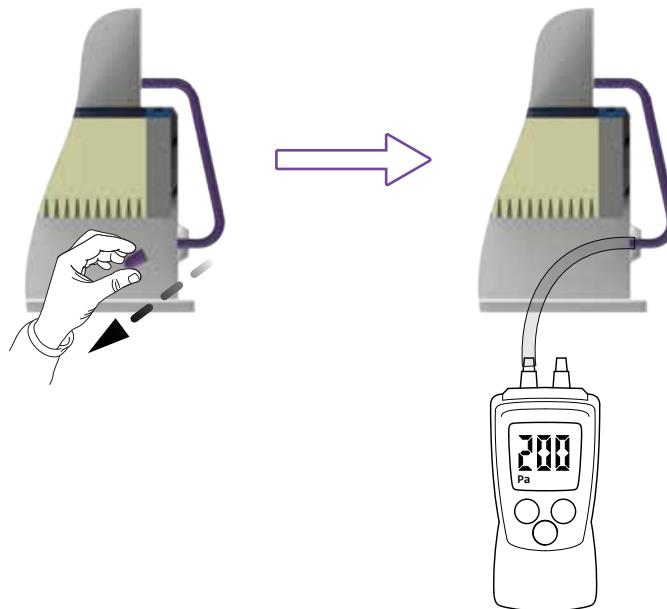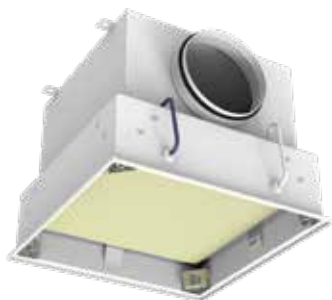


### CFC-C, -B, -R, -W

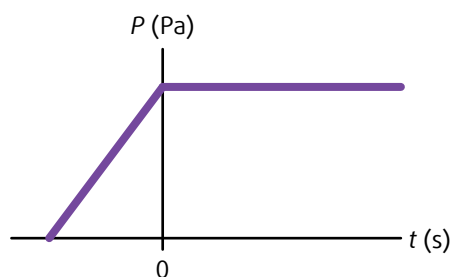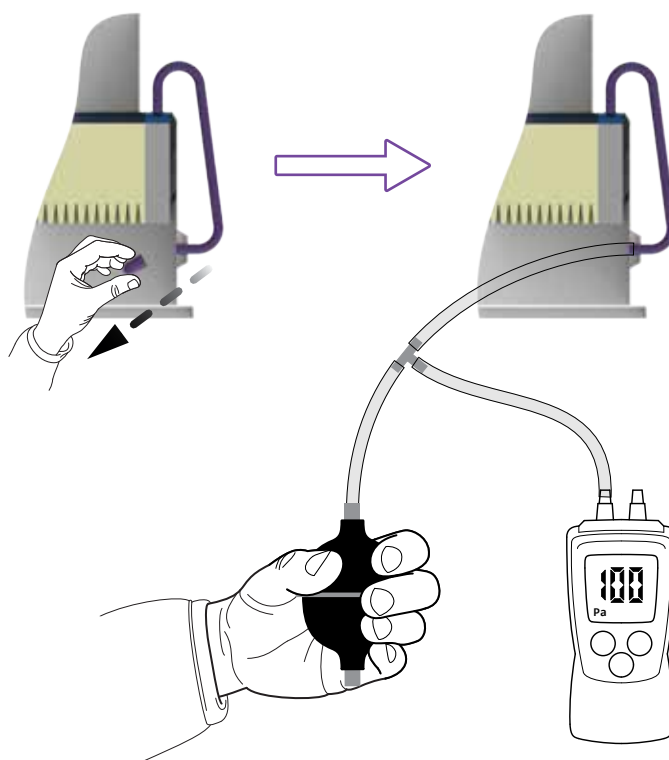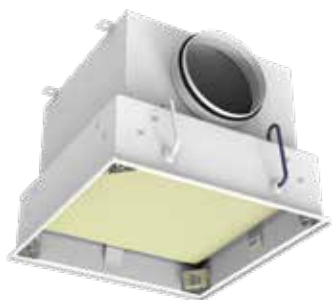

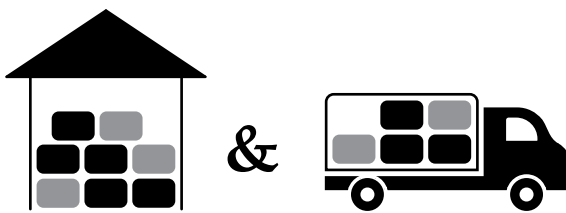

°C -20°C ... +50°C

% ≤ 95 %

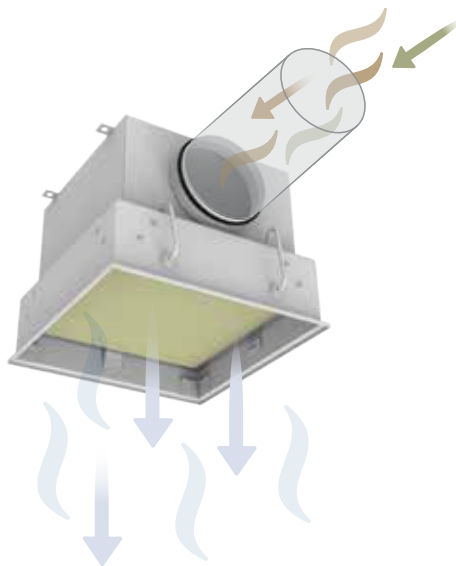

°C 0°C ... +50°C

% ≤ 95 %

