

# JSR


## Weitwurfdüse

Bedienungsanleitung







1.

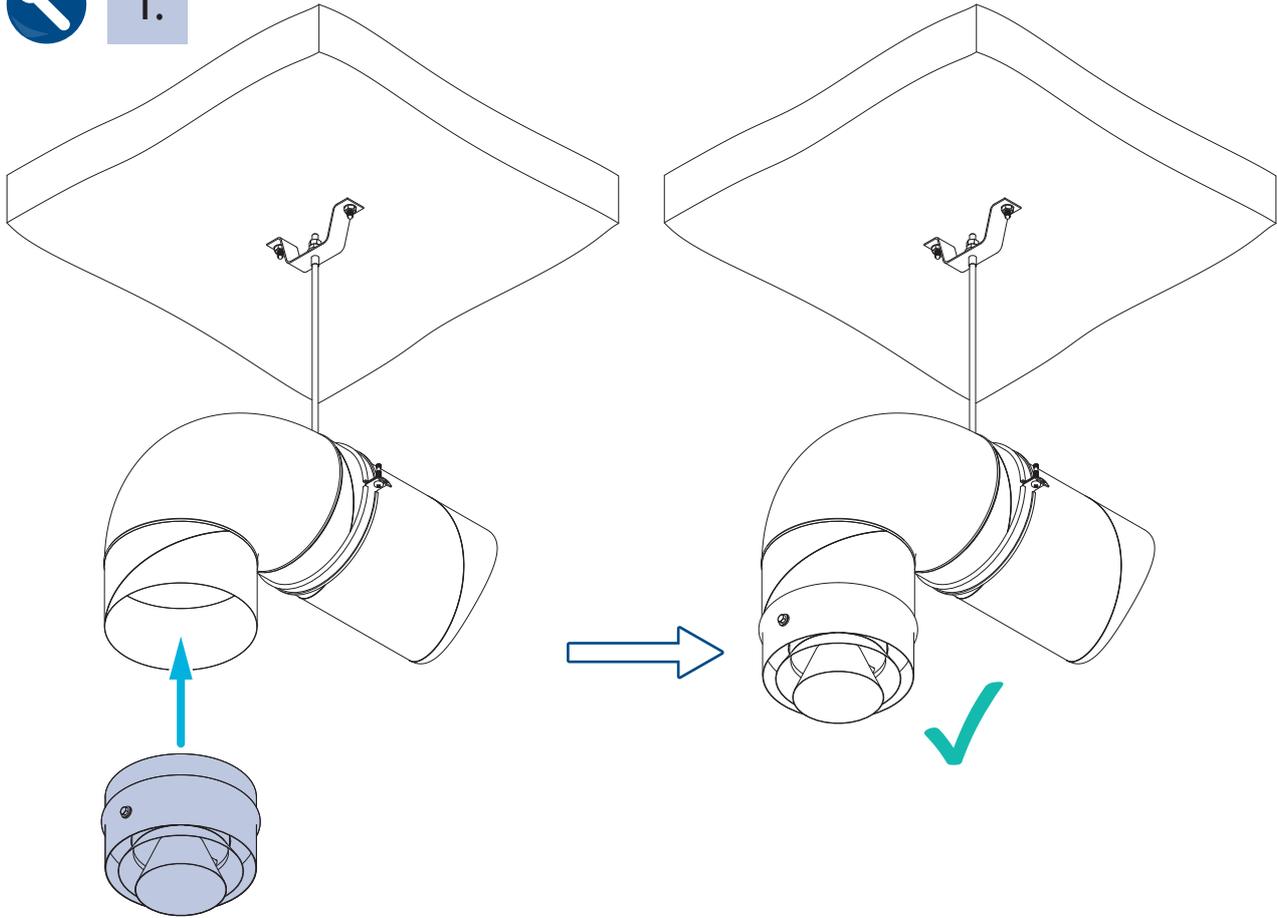


2.

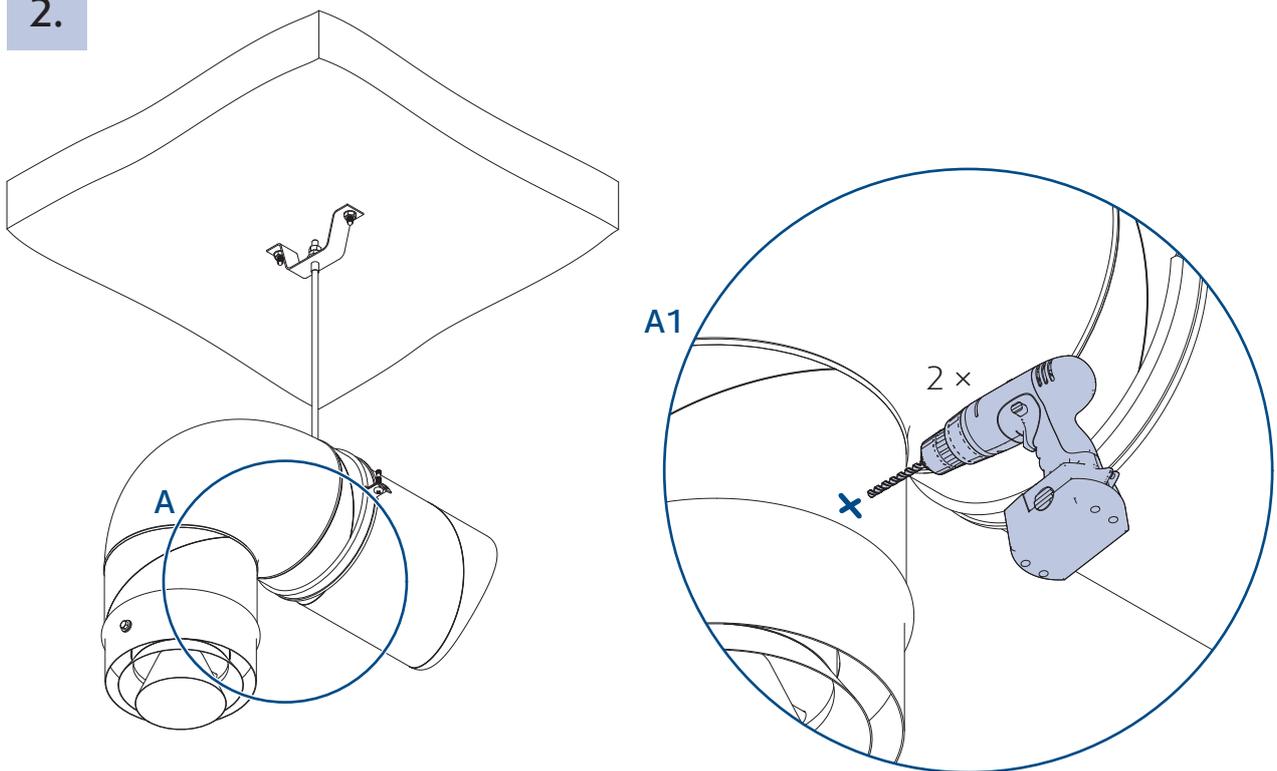

3.

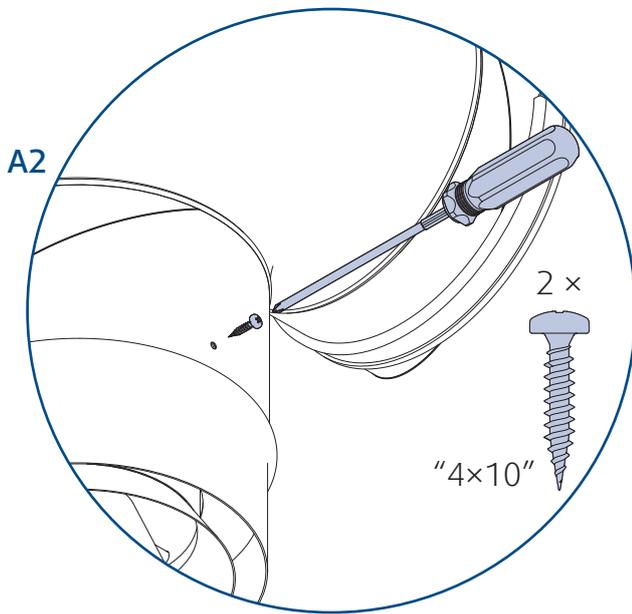

4.

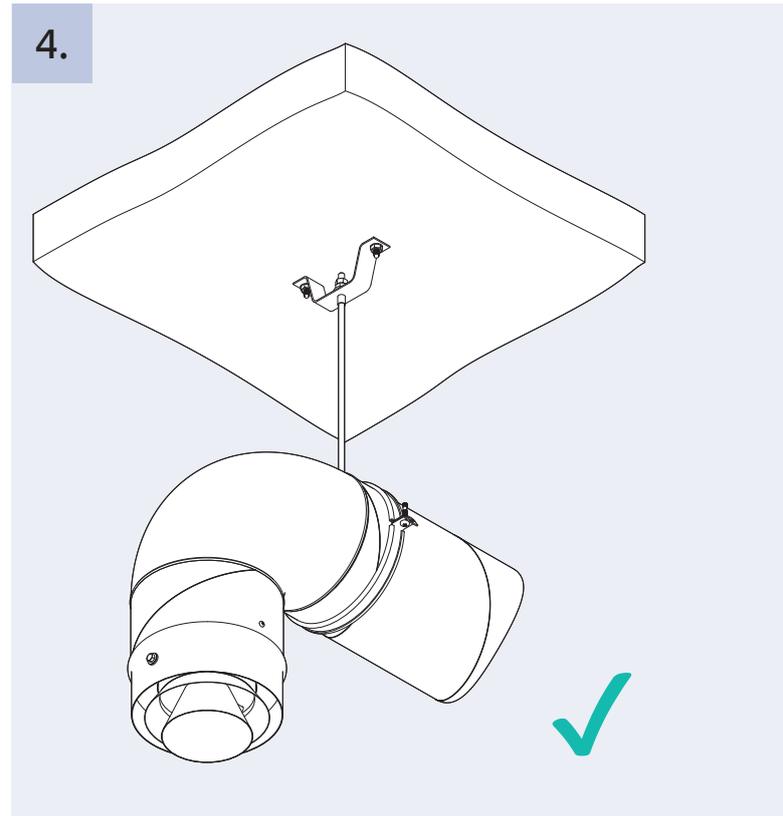

 °C -40°C ... +50°C

 % ≤ 95%



 °C -10°C ... +50°C

 % ≤ 95%

