

OPTIMA-RES-A


Residential VAV System Box

User Manual







1.

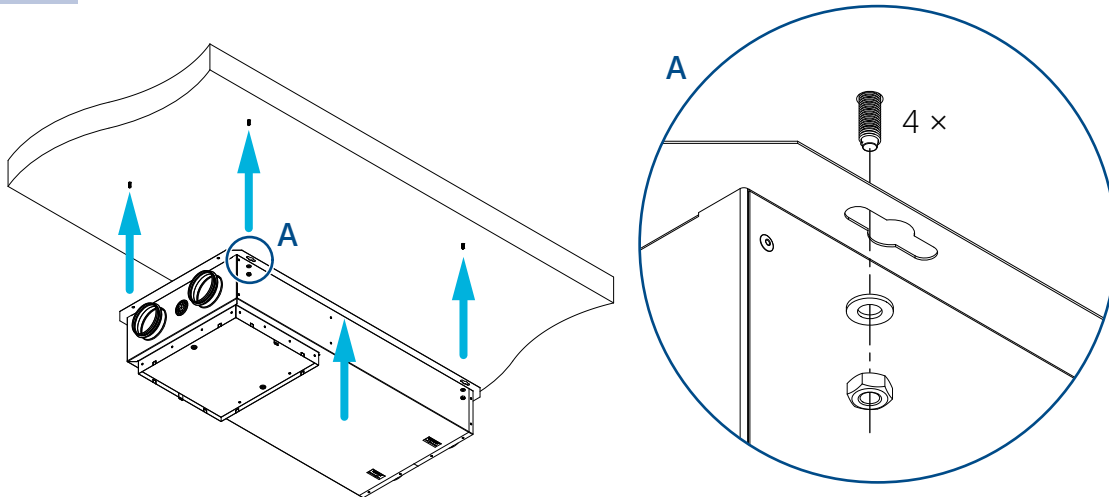


2.

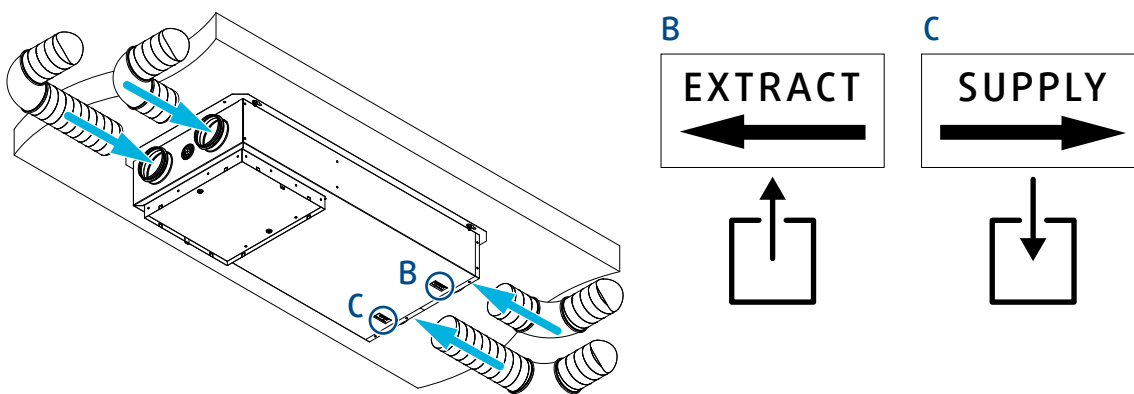


3.

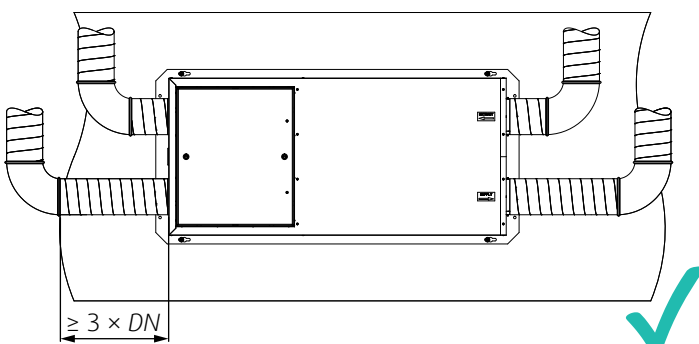


4.

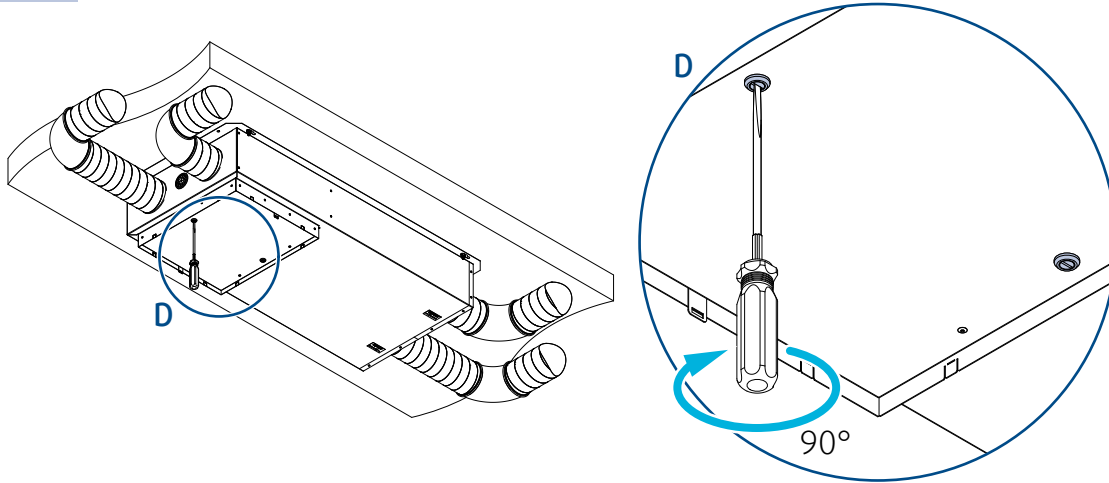


5.

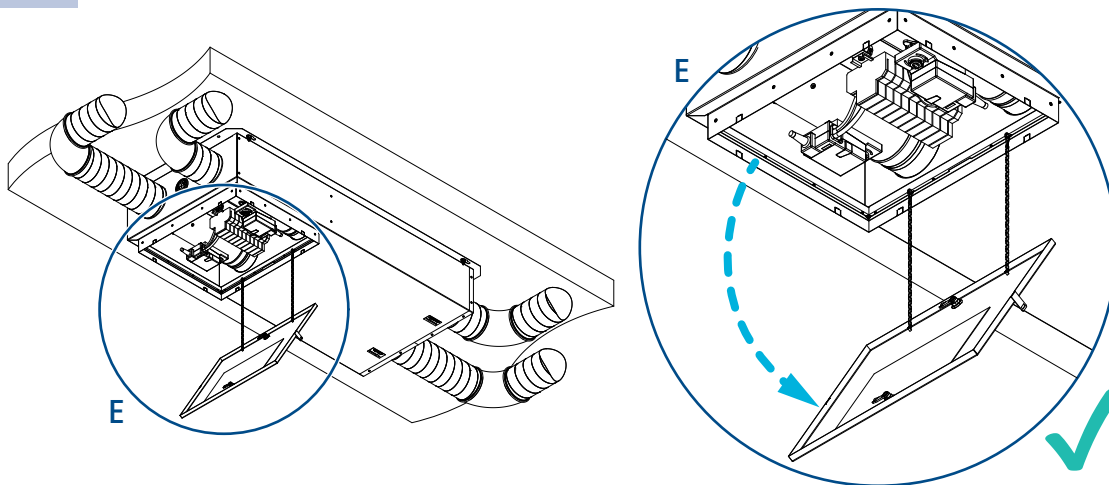






6.

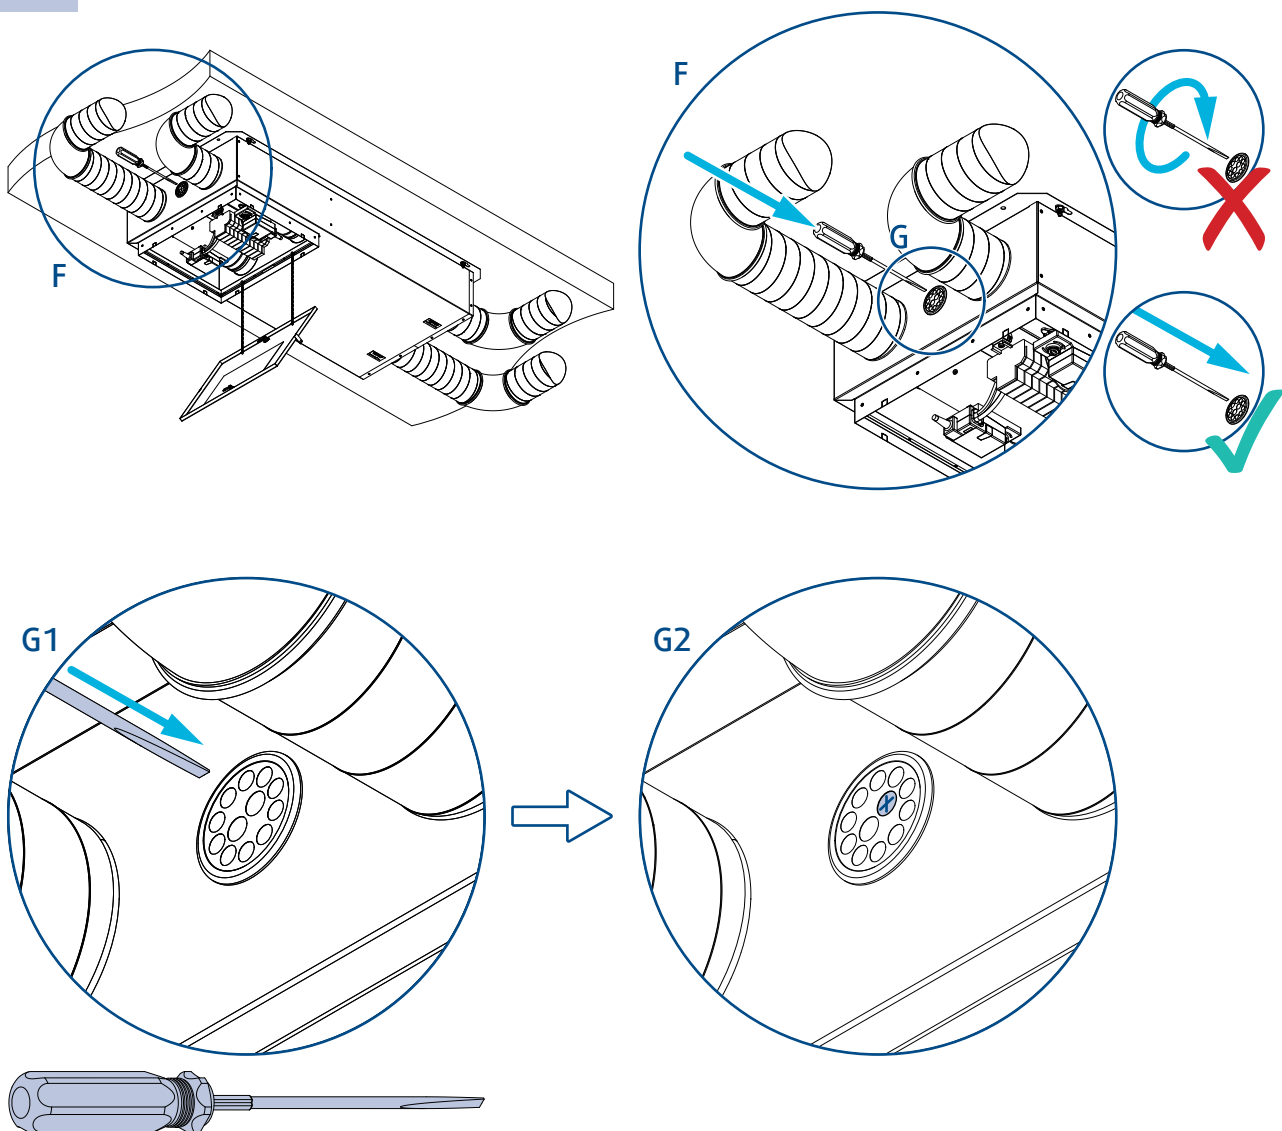


7.

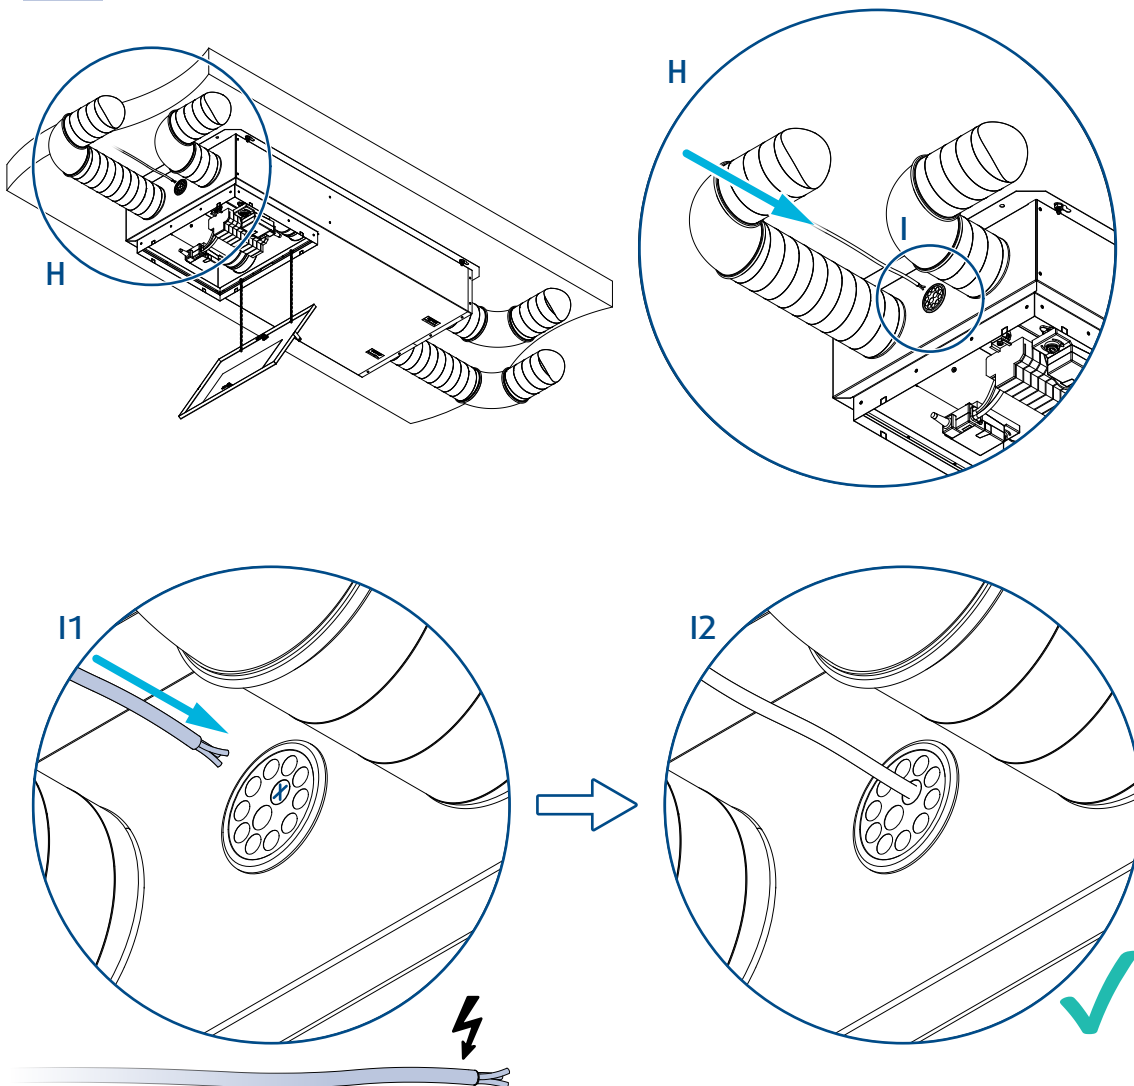

 
8.

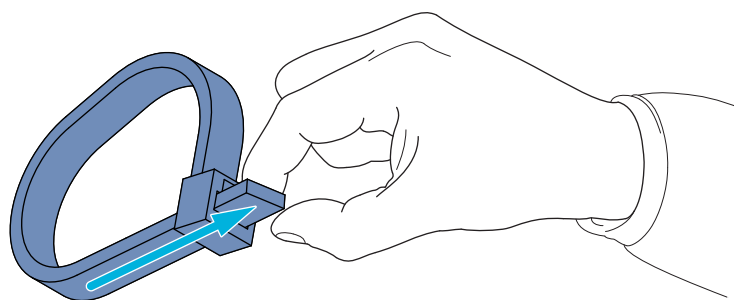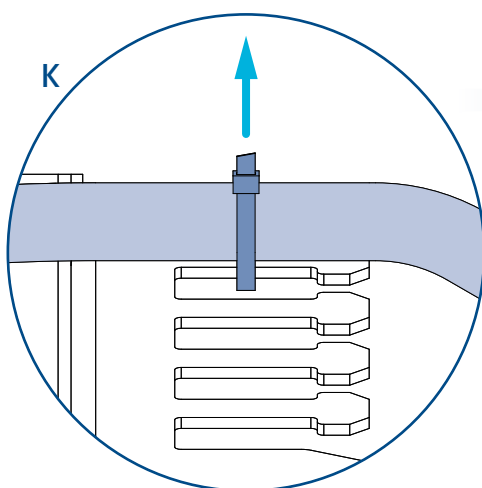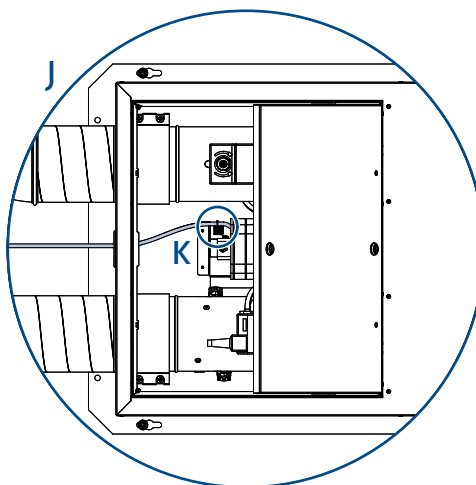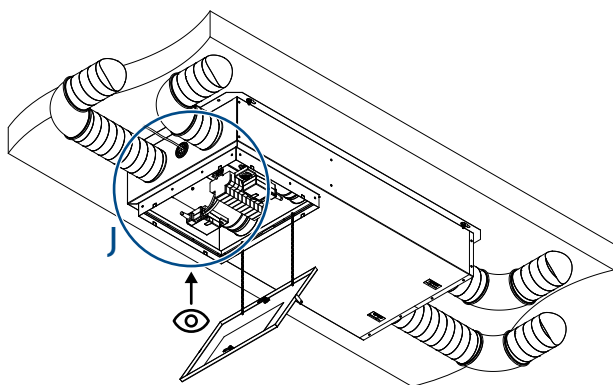


9.

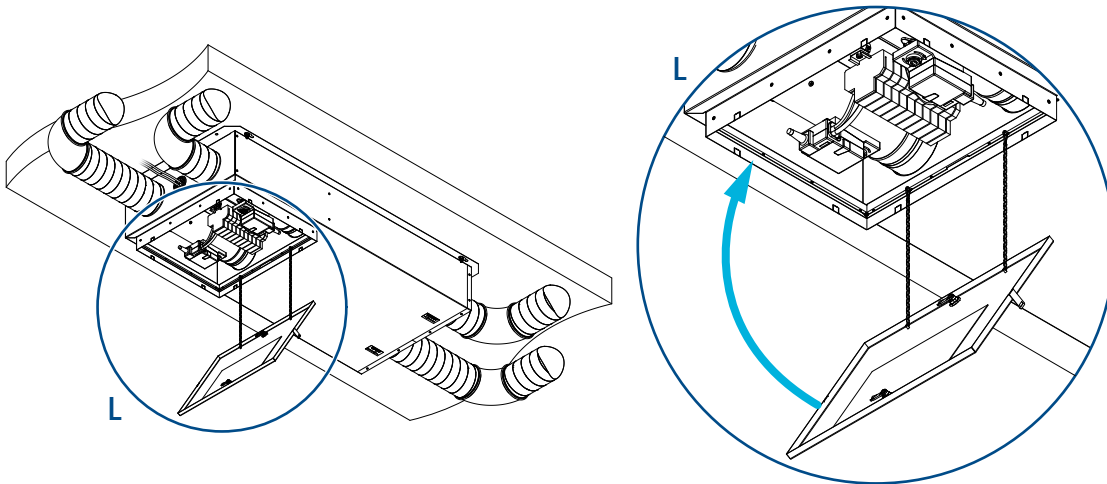


10.

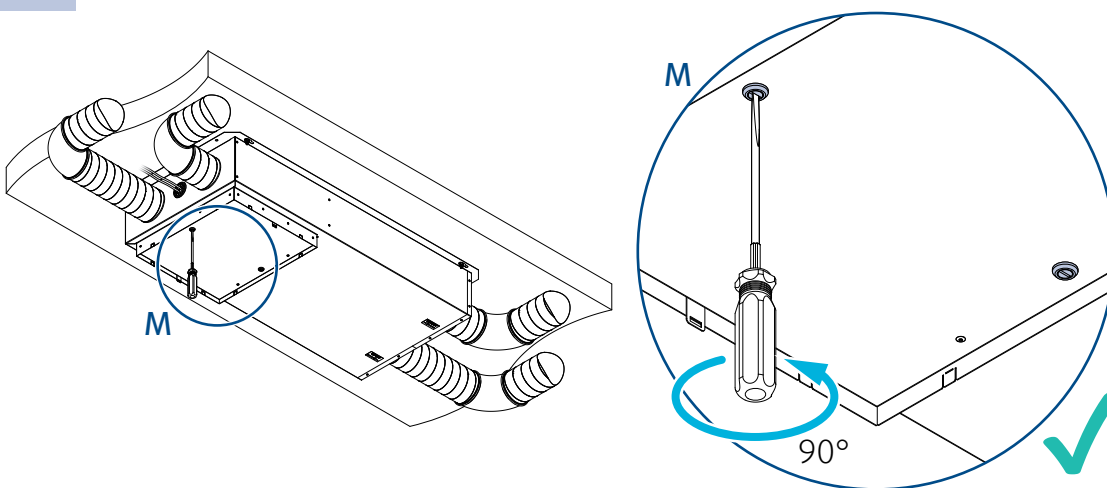


11.

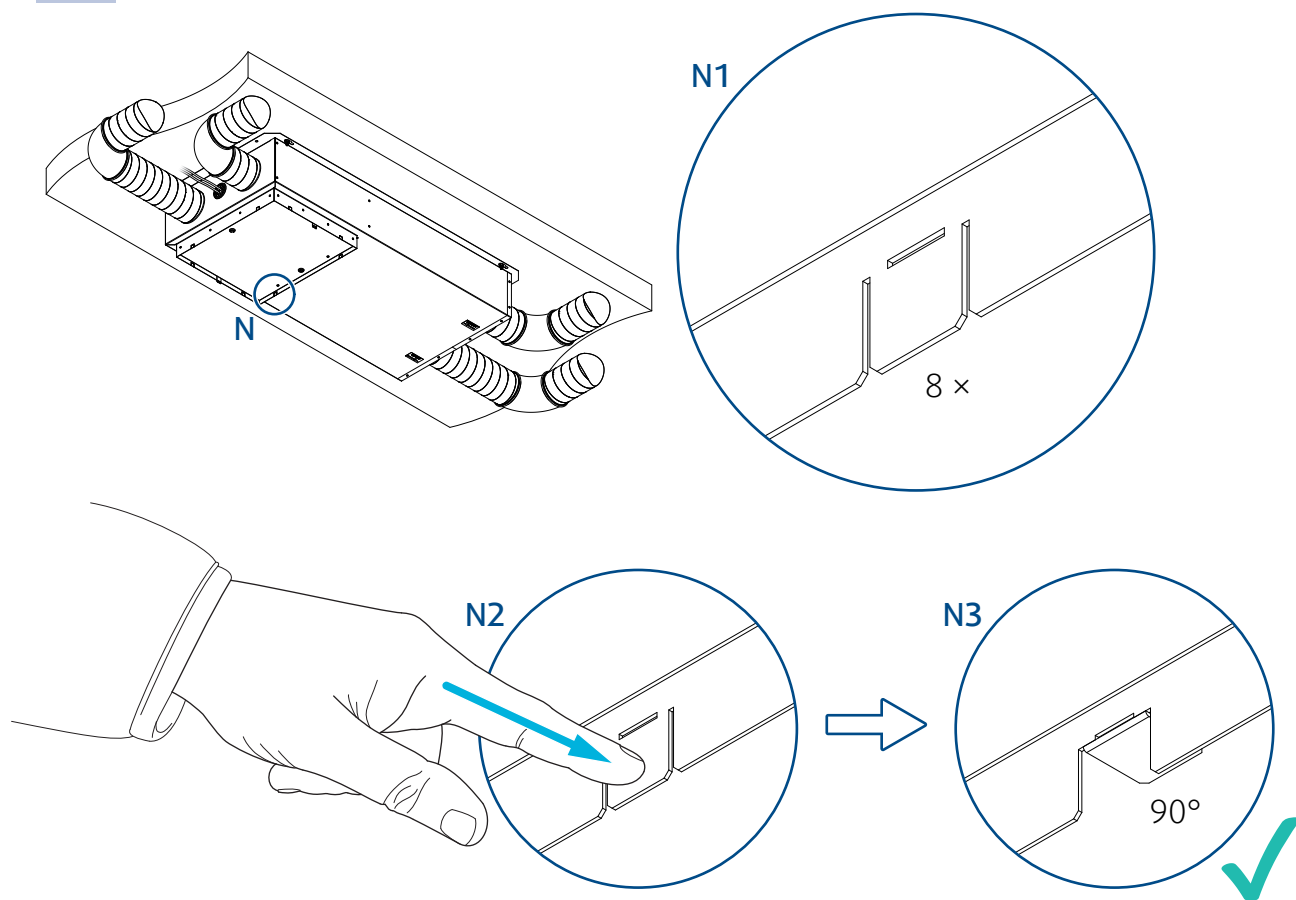


12.

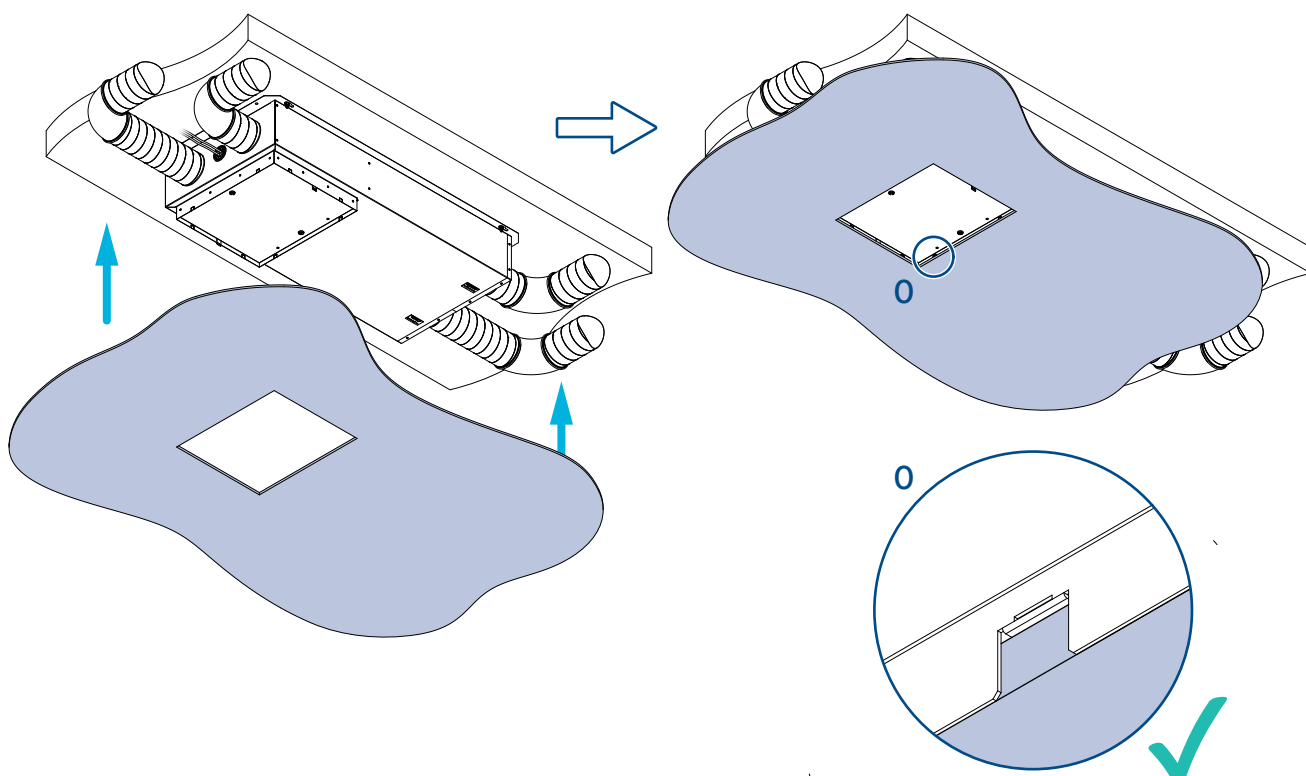


13.

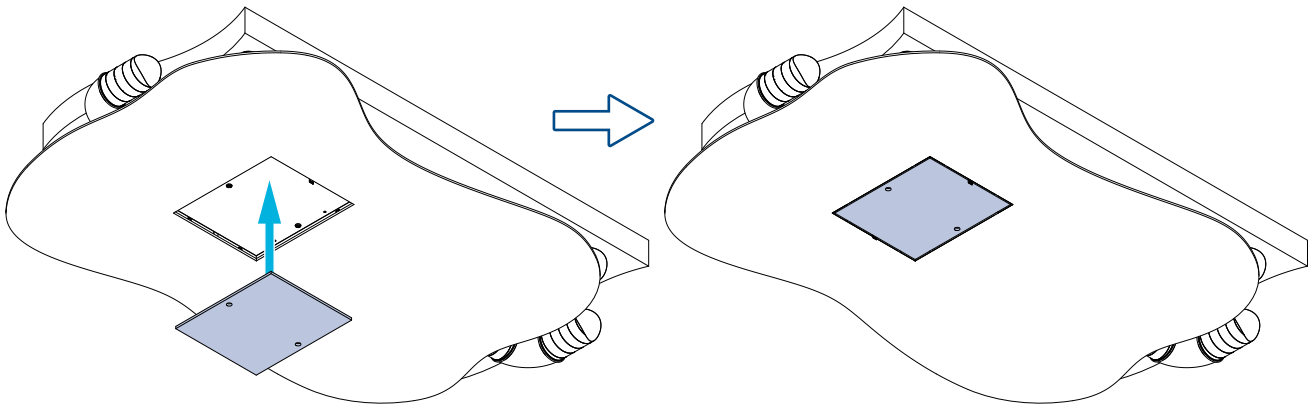





14.

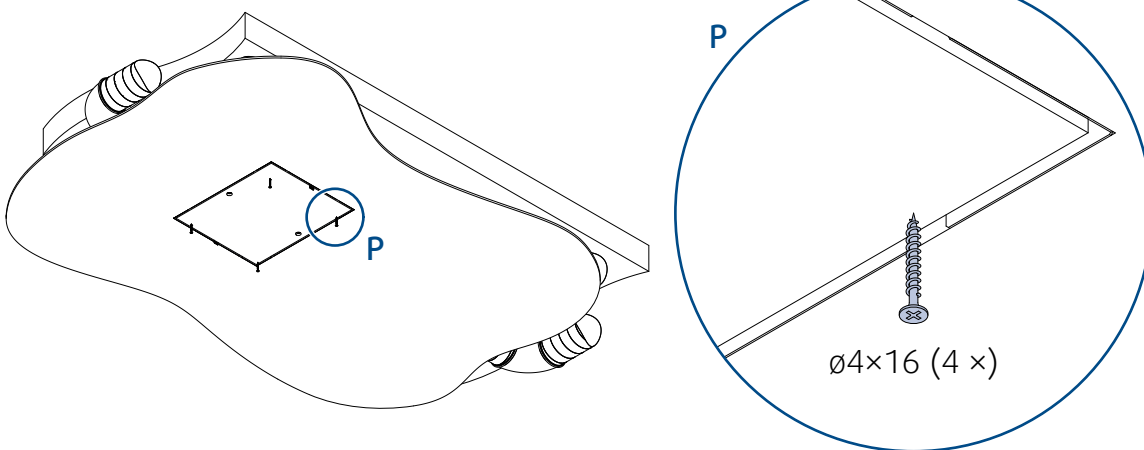


15.

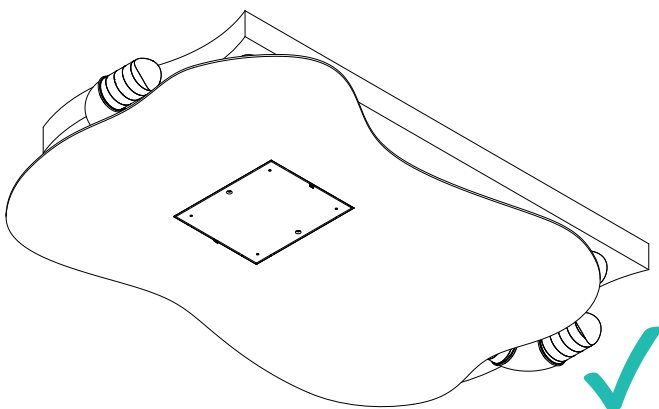

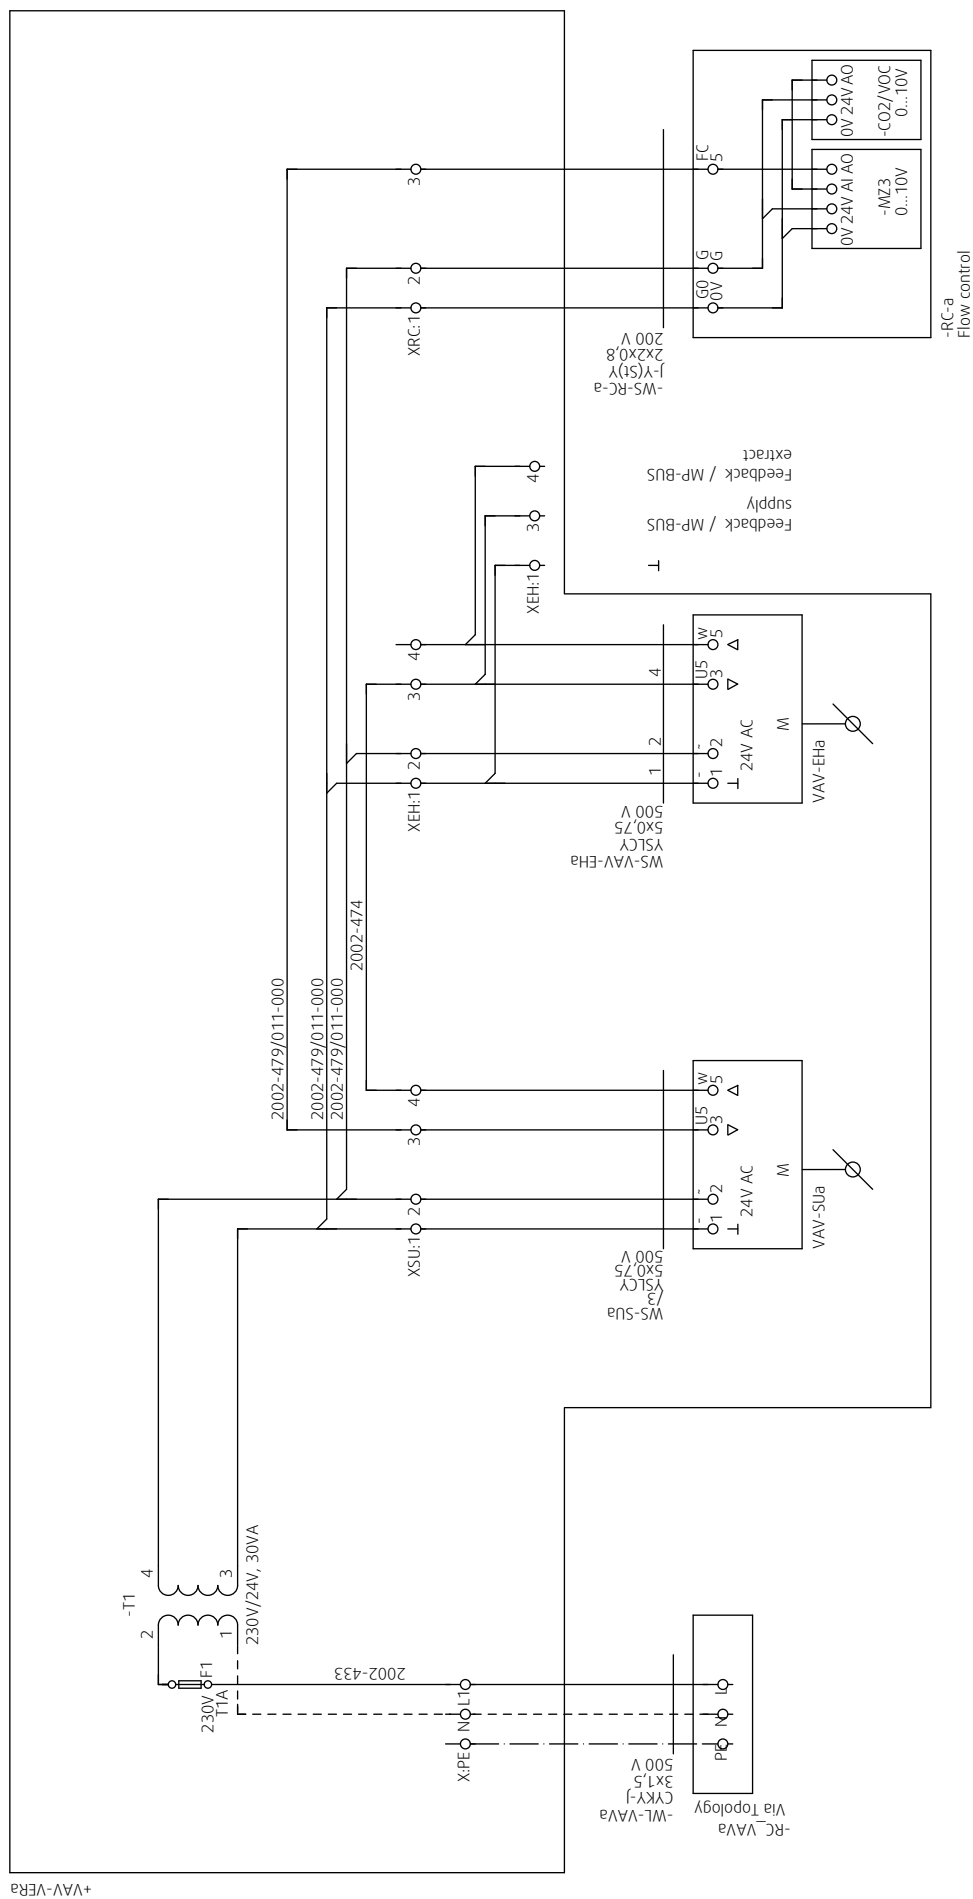


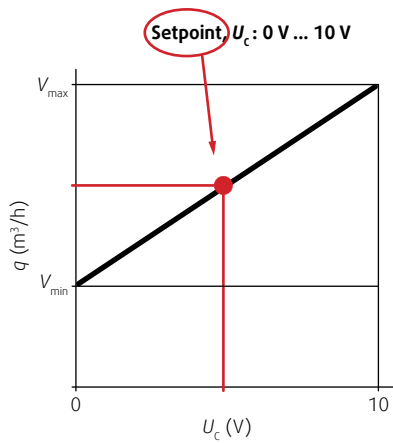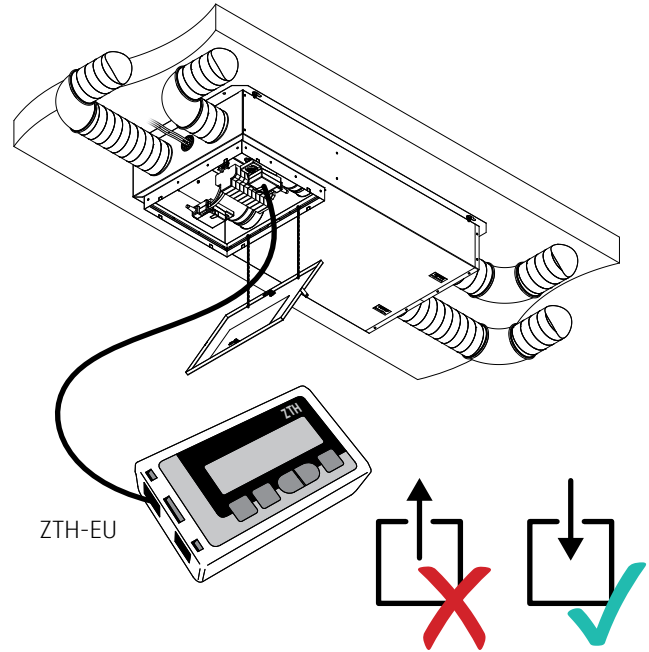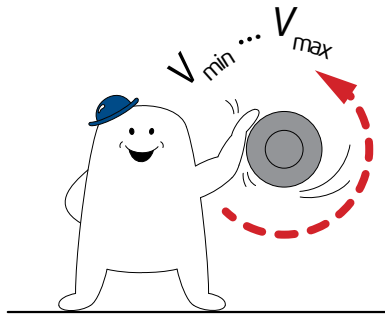

$$U_c = \frac{q - V_{\min}}{V_{\max} - V_{\min}} \cdot 10$$

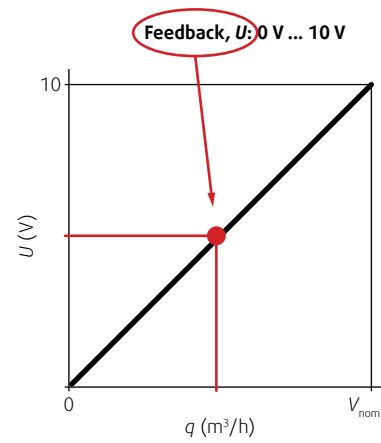


$$q = \frac{U}{10} \cdot V_{\text{nom}}$$

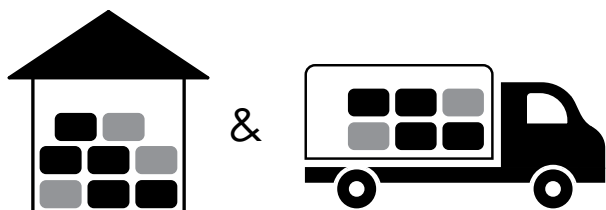

°C -40°C ... +50°C



% ≤ 95%

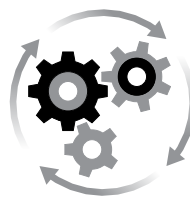

°C -20°C ... +50°C



% ≤ 95%



design.systemair.com

