

# Air Handling Control

## Home page

Touch on home symbol to return to home page.

## Read data & settings

1. Touch symbol
2. Select: Operation overview
3. Select: Control overview.

## Flow chart

Touch symbols in drawing to read settings.

## Stop and start

Touch to stop and start the air handling unit during the programmed running time.

## Extend running time

Touch to extend running time beyond the programmed running time.



## Alarm

Touch on bell to read alarm. Call service staff and inform about alarm in display.

## Adjust air temperature

Adjust the programmed temperature by +/- 2 degrees. Changes may last 30 minutes to take effect.