

# Geniox G0

## Air handling unit

User Manual

GB

Document in original language | Version v7.2

Part number of this manual 211728





## Detailed table of contents on the following pages

### General description

- A Manufacturer
- B Name of machines
- C Declaration of Conformity
- D General descriptions, dangers and warnings
- E The control panel for the control system.
- F Drawings, diagrams, guides and instructions for the use, maintenance and repair
- G Employees in charge of operation/control/maintenance
- H Unintended use and misuse – inappropriate applications for the machine

### Installation

- I Instructions for unloading and handling on site
- J Installation
- K Installation and assembly instructions for reduction of noise and vibration emissions

### Start-up, adjustments and operation

- L Start-up, adjustments, use and commissioning
- M Information about the residual risks
- N Instructions on the protective measures during repair and maintenance
- O The essential characteristics of tools which may be fitted to the machinery

### Machine stability

- P The conditions of stability during use, transportation, assembly, dismantling when out of service
- Q Instructions for machinery where these are regularly to be transported

### Breakdown

- R The operating method to be followed in the event of breakdown. Safe restart.

### Maintenance

- S Adjustment and maintenance operations
- T Instructions to enable adjustment and maintenance safely

### Noise

- U Information on airborne noise emissions exceeding 70 dB(A)

### Annexes

- 1 Technical data – unique data for every unit (in separate cover)
- 2 Assembly of base frame – height 118 mm for unit sizes 10 – 18
- 3 Assembly of base frame – height 118 mm for unit sizes 20 – 27
- 4 Assembly of base frame – height 218 mm for unit sizes 10 – 18
- 5 Assembly of base frame – height 218 mm for unit sizes 20 – 27
- 6 Installation of steel roof in the sizes 10 – 31
- 7 Speed control for rotor and assembly of divided rotor
- 8 Reversible heat pump unit (in separate cover, if heat pump was delivered)
- 9 Menu for internal controller in the heat pump unit (in separate cover, if heat pump was delivered)
- 10 Connection of fan motor and set-up manual for frequency converter
- 11 Commissioning protocol (in separate cover)
- 12 Report with data from final functional test on the Systemair factory
- 13 Short description of main components in the control system
- 14 Wiring diagram (in separate cover)
- 15 Operator's guide (How to use the Systemair control panel) (in separate cover)





# Contents

A	Manufacturer.....	1
B	Name of machines.....	1
C	Declaration of Conformity.....	2
D	General descriptions, dangers and warnings.....	3
D.1	Overview via pictograms on the inspection side of the unit.....	3
D.1.1	Available pictograms and their placing on the units.....	3
D.1.2	Warnings about dangers.....	6
D.1.3	Machine card with unique data on every unit.....	7
D.2	Dimensions of the units.....	7
E	The control panel for the control system.....	8
F	Drawings, diagrams, guides and instructions for the use, maintenance and repair.....	8
G	Employees in charge of operation/control/maintenance.....	8
H	Unintended use and misuse – inappropriate applications for the machine.....	8
H.1	Air handling unit in operation.....	9
I	Instructions for unloading and handling on site.....	9
I.1	Delivery types.....	9
I.2	Handling methods.....	9
I.3	Warnings.....	9
I.4	Handling examples.....	11
I.4.1	Handling sections which are delivered on pallets.....	11
I.4.2	Handling units/sections which are delivered on base frame.....	12
I.4.3	Additional information.....	15
J	Installation.....	16
J.1	Installation - mechanical.....	16
J.1.1	Free area in front of and above the unit.....	16
J.1.2	Supporting surface.....	16
J.1.3	Adjustable feet under legs or base frame and transport of sections.....	16
J.1.4	Base frame assembly.....	16
J.1.5	Base frames for outdoor units.....	17
J.1.6	Outdoor units – support under the base frame of the unit.....	17
J.1.7	Installation on the site of unit sections at the base frame when sections are delivered on pallets.....	17
J.1.8	Joining the unit sections.....	19
J.1.9	Fitting the ductwork.....	20
J.1.10	Risk of stack effect by vertical ducts and wind pressure on louvers.....	20
J.1.11	Door alignment.....	21
J.1.12	Lock the doors by using the key.....	21
J.2	Installation - electrical.....	22
J.2.1	Installation of cable sealing boxes (only in rotor sections of Geniox GO 27–31).....	22
J.3	Installation – Pipes for water – hot and chilled, valves and drains.....	22
J.3.1	Description.....	22
J.3.2	Pipe connections.....	22
J.3.3	Possibility of extracting components from the unit.....	23
J.3.4	Pipe connections to batteries.....	23
J.3.5	Draining condensate water.....	24
J.3.6	Draining condensate water from plate heat exchanger.....	25
J.3.7	Draining condensate water from cooling battery.....	25
K	Installation and assembly instructions for reduction of noise and vibration emissions.....	26
L	Start-up, adjustments, use and commissioning.....	26
L.1	Print-outs on paper.....	26
L.2	Start-up by installer.....	26
L.2.1	Remove rotor lock plate.....	27
L.2.2	Checklist, relevant values.....	27
L.3	Description of functions.....	28
L.4	Commissioning.....	28
M	Information about the residual risks.....	28
M.1	Unit casing.....	28
M.1.1	Design of the machine to make transport safe.....	28

M.1.2	Common for all unit sections .....	28
M.1.3	Common for all unit sections by insufficient lighting .....	29
M.1.4	Dampers.....	29
M.1.5	Attenuators.....	29
M.1.6	Filters .....	29
M.1.7	Plug fans .....	30
M.1.8	Batteries for heating and cooling.....	30
M.1.9	Heat pump units.....	31
N	Instructions on the protective measures during repair and maintenance .....	31
O	The essential characteristics of tools which may be fitted to the machinery .....	31
P	The conditions of stability during use, transportation, assembly, dismantling when out of service .....	31
P.1	Installed reliable to avoid units to be tilted or moved by storm .....	31
P.2	Transport of section with heat pump unit.....	32
P.3	Disposal of the heat pump system.....	32
P.4	General disassembly – sharp edges.....	32
Q	Instructions for machinery where these are regularly to be transported .....	32
R	The operating method to be followed in the event of breakdown. Safe restart. ....	32
S	Adjustment and maintenance operations .....	32
S.1	Shutdown of the unit to a safe state .....	32
S.2	Recommended maintenance intervals.....	33
S.3	Filters – always replace filters with new filters with the same characteristics to maintain SFP value .....	33
S.3.1	Bag filters – the number of filters and sizes of frames .....	34
S.3.2	Panel filters – the number of filters and the sizes of the frames .....	34
S.3.3	Bag filters .....	35
S.3.4	Panel filters.....	37
S.4	Changing the Internal Battery in the controller .....	37
S.5	Other functions to maintain .....	39
S.5.1	The unit.....	39
S.5.2	Dampers.....	40
S.5.3	Rotary heat exchanger .....	40
S.5.4	Cross flow and counter flow exchanger .....	41
S.5.5	Run-around heat exchanger.....	42
S.5.6	Coils/batteries for heating and/or cooling .....	42
S.5.7	Plug fans .....	43
S.5.8	Silencer .....	43
S.5.9	Outdoor air section .....	43
S.5.10	Heat pump unit .....	43
T	Instructions to enable adjustment and maintenance safely.....	44
T.1	Protective measures and additional protective measures.....	44
T.1.1	Necessary protection measures prior to start-up .....	44
T.1.2	Safe adjustment and maintenance .....	44
T.1.3	Personal protective equipment for maintenance staff – health and safety.....	44
U	Information on airborne noise emissions exceeding 70 dB(A) .....	45
Annex 1	Technical data – unique data for every unit (in separate cover) .....	48
Annex 2	Assembly of base frame – height 118 mm for unit sizes 10 – 18.....	48
2.1	Base frame length 482 – 2564 [mm] Unit size 10 – 18 .....	48
2.2	Base frame length 2582 – 4964 [mm] Unit size 10 – 18 .....	49
2.3	Base frame length 4982 – 6164 [mm] Unit size 10 – 18 .....	51
Annex 3	Assembly of base frame – height 118 mm for unit sizes 20 – 27 .....	51
3.1	Base frame length 482– 2564 [mm] Unit size 20 – 27 .....	52
3.2	Base frame length 2582 – 4964 [mm] Unit size 20 – 27 .....	53
3.3	Base frame length 4982 – 6164 [mm] Unit size 20 – 27 .....	54
Annex 4	Assembly of base frame – height 218 mm for unit sizes 10 – 18 .....	55
4.1	Base frame length 482– 2564 [mm] Unit size 10 – 18.....	56
4.2	Base frame length 2582 – 4964 [mm] Unit size 10 – 18 .....	57
4.3	Base frame length 4982 – 6164 [mm] Unit size 10 – 18 .....	58
Annex 5	Assembly of base frame – height 218 mm for unit sizes 20 – 27 .....	59
5.1	Base frame length 482– 2564 [mm] Unit size 20 – 27 .....	60
5.2	Base frame length 2582 – 4964 [mm] Unit size 20 – 27 .....	61
5.3	Base frame length 4982 – 6164 [mm] Unit size 20 – 27 .....	62
Annex 6	Installation of steel roof in the sizes 10 – 31.....	63
6.1	Warnings.....	63
6.1.1	Components.....	63
6.1.2	Mounting rails and roof sheets .....	64

6.1.3	Mounting roof side profiles and corners .....	68
Annex 7	Speed control for rotor and assembly of divided rotor .....	68
7.1	Speed control type NOVA drive 370 delivered after February 2021 .....	68
7.1.1	Selection of correct signal via the 5 DIP switch levers in NOVA drive 370 .....	69
7.2	Speed control RHC 200 delivered before March 2021 .....	75
7.2.1	Selection of correct signal via the 8 DIP switch levers .....	75
7.2.2	Indication of operation mode via red and green LED as well as test of motor.....	75
7.2.3	Copy of the label with information about connection of cables.....	76
7.3	Assemble of split rotor for Geniox GO 27, Geniox GO 29 and Geniox GO 31 .....	77
7.3.1	Dimensions of split rotor sections .....	77
7.3.2	Assemble of rotor casing.....	78
7.3.3	Installation of rotation sensor, rotor magnet and belt.....	80
Annex 8	Reversible heat pump unit (in separate cover, if heat pump was delivered) .....	81
Annex 9	Menu for internal controller in the heat pump unit (in separate cover, if heat pump was delivered) .....	82
Annex 10	Connection of fan motor and set-up manual for frequency converter.....	82
Annex 11	Commissioning protocol (in separate cover).....	82
Annex 12	Report with data from final functional test on the Systemair factory.....	82
Annex 13	Short description of main components in the control system .....	82
13.1	Geniox units delivered in one or several sections .....	82
13.1.1	External components.....	82
Annex 14	Wiring diagram (in separate cover) .....	82
Annex 15	Operator's guide (How to use the Systemair control panel) (in separate cover).....	82



## **A      Manufacturer**

This User Manual covers all air handling units with control system delivered by Systemair A/S.

### **Manufacturer and supplier data:**

Systemair UAB

Liny st. 101

LT-20174 Ukmergė, Lithuania

## **B      Name of machines**

This manual is about Systemair air handling units called Geniox GO 10, Geniox GO 11, Geniox GO 12, Geniox GO 14, Geniox GO 16, Geniox GO 18, Geniox GO 20, Geniox GO 22, Geniox GO 24, Geniox GO 27, Geniox GO 29, and Geniox GO 31.

## C Declaration of Conformity

### Manufacturer



Systemair UAB  
 Linų st. 101  
 LT-20174 Ukmergė, Lithuania  
 Office: +370 340 60165 Fax: +37034060166  
 www.systemair.com

hereby confirms that the following products:

Geniox: 10DR, 11DR, 12DR, 14DR, 16DR, 18DR, 20DR, 22DR, 24DR, 10SR, 11SR, 12SR, 14SR, 16SR, 18SR, 20SR, 22SR, 24SR, 27SR, 29SR, 31SR, 10DRR, 11DRR, 12DRR, 14DRR, 16DRR, 18DRR, 20DRR, 22DRR, 24DRR, 27SR, 29SR, 31SR, 10MRR, 11MRR, 12MRR, 14MRR, 16MRR, 18MRR, 20MRR, 22MRR, 24MRR, 27MRR, 29MRR, 31MRR, 10.05/10.05TR, 11.055/11.055TR, 12.06/12.06TR, 14.07/14.07TR, 16.08/16.08TR, 18.09/18.09TR, 20.10/20.10TR, 22.11/22.11TR, 24.12/24.12TR, 27.13/27.13TR, 29.14/29.14TR, 31.15/31.15TR, 10.05IR, 11.055IR, 12.06IR, 14.07IR, 16.08IR, 18.09IR, 20.10IR, 22.11IR, 24.12IR, 27.13IR, 29.14IR, 31.15IR, 10DL, 11DL, 12DL, 14DL, 16DL, 18DL, 20DL, 22DL, 24DL, 10SL, 11SL, 12SL, 14SL, 16SL, 18SL, 20SL, 22SL, 24SL, 27SL, 29SL, 31SL, 10DLL, 11DLL, 12DLL, 14DLL, 16DLL, 18DLL, 20DLL, 22DLL, 24DLL, 27SLL, 29SLL, 31SLL, 10MLL, 11MLL, 12MLL, 14MLL, 16MLL, 18MLL, 20MLL, 22MLL, 24MLL, 27MLL, 29MLL, 31MLL, 10.05/10.05TL, 11.055/11.055TL, 12.06/12.06TL, 14.07/14.07TL, 16.08/16.08TL, 18.09/18.09TL, 20.10/20.10TL, 22.11/22.11TL, 24.12/24.12TL, 27.13/27.13TL, 29.14/29.14TL, 31.15/31.15TL, 10.05IL, 11.055IL, 12.06IL, 14.07IL, 16.08IL, 18.09IL, 20.10IL, 22.11IL, 24.12IL, 27.13IL, 29.14IL, 31.15IL

Serial No: "YYMM-000XXXXX-XX"

Geniox GO 10-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 11-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 12-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 14-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 16-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 18-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 20-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 22-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 24-RDR/RDL/XDR/XDL/RADR/RADL/CXDR/CXDL/DXRDR/DXRDL, Geniox GO 27.13-RSR/RSL/XSR/XSL/RASR/RASL, Geniox GO 29.14-RSR/RSL/RASR/RASL, Geniox GO 31.15-RSR/RSL/RASR/RASL.

(The declaration applies only to product in the condition it was delivered in and installed in the facility in accordance with the included installation instructions. The insurance does not cover components that are added or actions carried out subsequently on the product)

**Comply with all applicable requirements in the following directives**

- Machinery Directive 2006/42/EC
- Ecodesign Directive 2009/125/EC
- EMC Directive 2014/30/EU
- Low Voltage Directive 2014/35/EU
- Pressure equipment directive 2014/68/EC
- RoHS Directive 2011/65/EU, 2015/863/EU

**The following regulations are applied in applicable parts:**

327/2011	Requirements for fans
1253/2014	Requirements for ventilation units

**The following harmonized standards are applied in applicable parts:**

EN ISO 12100:2010	Safety of machinery - General principles for design - Risk assessment and risk reduction.
EN 13857	Safety of machinery - Safety distances to prevent hazard zones being reached by upper and lower limbs.
EN 60 335-1	Household and similar electrical appliances - Safety - Part 1: General requirements.
EN 60 335-2-80	Household and similar electrical appliances - Safety - Part 2-80: Particular requirements for fans.
EN 62233	Measurement methods for electromagnetic fields of household appliances and similar apparatus with regard to human exposure.
EN 50 106:2007	Safety of household and similar appliances – Particular rules for routine tests referring to appliances under the scope of EN 60-335-1 and EN 60967.
EN 60 529	Degrees of protection provided by enclosures (IP Code).
EN 60 204-1	Safety of machinery - Electrical equipment of machines - Part 1: General requirements.
EN 61000-6-2	Electromagnetic compatibility (EMC) - Part 6-2: Generic standards - Immunity for industrial environments.
EN 61000-6-3	Electromagnetic compatibility (EMC) - Part 6-3: Generic standards - Emission standard for residential, commercial and light-industrial environments.

The complete technical documentation is available.

Ukmergė, 23-10-2020

 

 
 
Nerijus Lapackas  
 Technical Manager

D General descriptions, dangers and warnings


Geniox GO air handling units are order specific machines available in many different configurations. Only a few examples of machine configurations are described below.

- The air handling units are intended for the transport and treatment of air between -40 °C and + 40 °C.
- The units are exclusively for comfort ventilation.
- Maintenance of the units must be carried out by skilled technicians.

On the drawing below, a right hand unit is shown because the inspection doors are mounted on the right hand side of the unit when looked in direction of **SUPPLY** airflow. The unit below is with rotary heat exchanger.

Position	Description	Symbol
A	Connection, supply air (to the rooms)	
B	Connection, exhaust air	
C	Connection, outdoor air in	
D	Connection, extract air (from the rooms)	

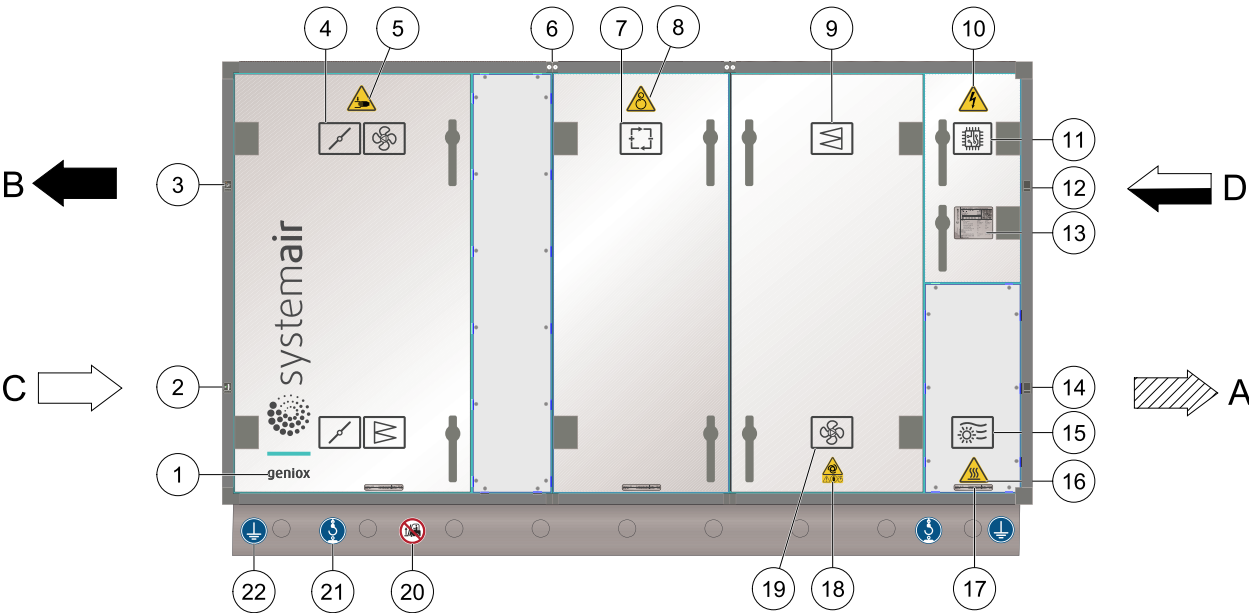


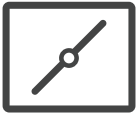 


 



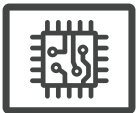 

D.1 Overview via pictograms on the inspection side of the unit



The unit above is a right version, because the supply air (C) from the outside flows to the right.

D.1.1 Available pictograms and their placing on the units

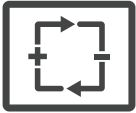Example (Symbols and descriptions of functions for fast identification)

Position	Description	Symbol
1.	Branding sticker	
2.	Outdoor air duct connection sticker	
3.	Exhaust air duct connection sticker	
4.	Damper sticker	
5.	Risk of crushing sticker	
6.	Assembly number sticker	
7.	Energy recovery section sticker	
8.	Risk of moving parts sticker	
9.	Filter with an airflow direction sticker	
10.	Electricity warning sticker	
11.	Controller sticker	
12.	Extract air duct connection sticker	



Position	Description	Symbol
13.	Machinery card	
14.	Supply air duct connection sticker	
15.	Heater sticker	
16.	Hot surface warning sticker	
17.	Section ID sticker	
18.	Fan run down warning sticker	
19.	Fan with an airflow arrow sticker	
20.	Prohibited lifting sticker	
21.	Lifting point sticker	
22.	Grounding sticker	

Position	Description	Symbol
Other labels	Cooler sticker	
	Reversible heat pump sticker	
	Silencer sticker	
	Inspection sticker	
	Humidifier sticker	
	Mounting point sticker	
	Informative installation sticker	
	Component stickers	   

### D.1.2 Warnings about dangers

Pictograms according to EN1886



 
#### Warning

Warning about danger by rotating parts



#### Warning

Warning about danger by electricity

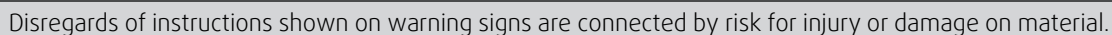

Machine card contains an important information about the unit. An example of a machine card is shown below.

Systemair UAB  
Linu 101  
LT-20174 Ukmerge  
Lithuania  
[www.systemair.com](http://www.systemair.com)

See Annex 1 with information about the exact dimensions.

## E The control panel for the control system.

The control panel is delivered in a cardboard box containing the other external control components. This cardboard box is usually placed in the section with the supply air fan. The Operator's Guide (also called The User's Guide) is one of the annexes delivered with this – User Manual.

This is the NaviPad control panel for the Access control system from Systemair.

The control panel is connected by a cable to the controller in the cabinet. The control panel is delivered with 3 meters of cable and up to 100 meters of cable of the same type can be added.



## F Drawings, diagrams, guides and instructions for the use, maintenance and repair

All Geniox GO units with integrated control system are manufactured in compliance with the EC Declaration of Conformity and they are CE marked as machines. Declaration is an integral part of the machine – enclosed as *C Declaration of Conformity* to this manual. If the buyer carries out changes or adds components in or on the machine, the buyer must issue a new *EC Declaration of Conformity* and a new CE marking of the machine.

To promote correct use of the machines, the below-mentioned instructions are an integral part of the machine:

- Unique drawings, data and description of functions for the delivered unit – Annex 1
- Wiring diagrams – Annex 14
- Operator's Guide – Annex 15
- Instructions for use of the machine – chapter L in this manual
- Instructions about adjustment and maintenance – chapter S in this manual
- Safety during adjustment and maintenance – chapter T

## G Employees in charge of operation/control/maintenance

The units are constructed and built with a fully integrated control system. After start-up and hand-over from installer to operators, the unit operates fully automatically.

Skilled technicians must carry out maintenance as well as repairs.

## H Unintended use and misuse – inappropriate applications for the machine

Units for outdoor installation must be specified and ordered for outdoor installation. The units must not be used in environments that exceed corrosion class C4 according to EN ISO 12944-2, and for transport of solid particles.

Examples of not intended use:

- Kitchen extraction
- swimming pools
- off-shore
- Ex-areas
- drying of washed clothes.
- Do not use the unit with partly finished duct systems.
- Do not use the unit for ventilation of the building site until the unit is properly provided with guards.

## H.1 Air handling unit in operation

The pressure difference between interior and exterior of the unit must not exceed 2000 Pa.

Before start-up of the unit all ducts, safety guards and all protective devices must be mounted to prevent any access to rotating fan impellers. All inspection doors must be closed and locked when the unit is in operation.

Do not use the unit without filters.

## I Instructions for unloading and handling on site

### I.1 Delivery types

The air handling unit (AHU) could be delivered attached to the base frame or split into separate sections which are delivered on pallets. If AHU is delivered in sections, it must be assembled on site. Loading and unloading as well as transport on the site is possible by forklift trucks, manual forklifts or crane. Systemair does not provide lifting equipment.

### I.2 Handling methods

Possible (✓) and not possible (✗) handling methods are described in the table below.

Delivery type	Handling option					
	Forklift	Straps	Brackets (optional)	Hoist holes	Side baseframe holes	Lifting corners
Sections placed on pallet	✓	✓	✗	✗	✗	✓
Sections attached onto base frame	✓	✓	✓	✓	✓	✓
Whole unit attached onto base frame	✓	✓	✓	✓	✓	✗

### I.3 Warnings




#### Danger

Do not walk, stay or work under suspended loads!



#### Caution


When unloading and transporting with forklift trucks, use forks which go fully underneath the unit. Only transport units on the base frame or on the pallet.

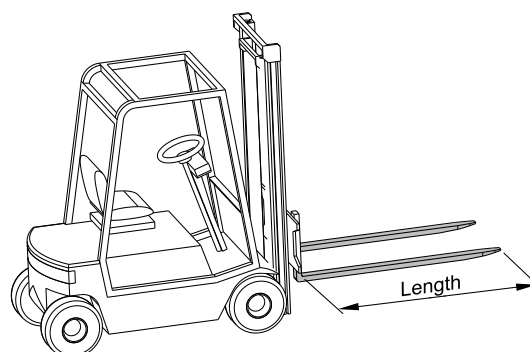




### Caution

It is strictly forbidden to lift a section under the top of the section. The plastic corners and brackets are not at all reinforced for lifting the unit under the top. There is serious danger that the bottom with the heavy components will fall down with the risk of serious injury and damage to property.

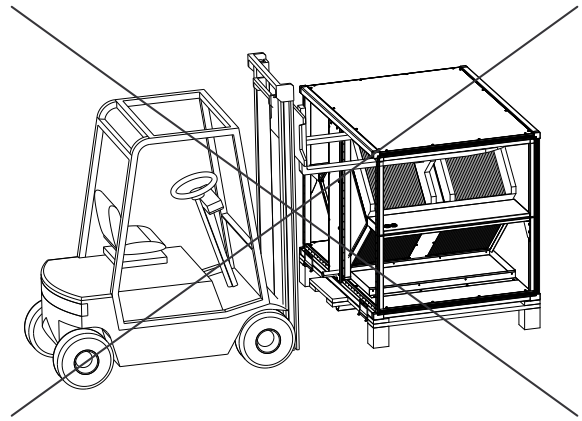

### Caution

If base frame has 4 forklift holes section must be lifted evenly using two forklifts. There is a risk of overturning resulting serious injury and damage to property if section is lifted unevenly or only by one forklift.

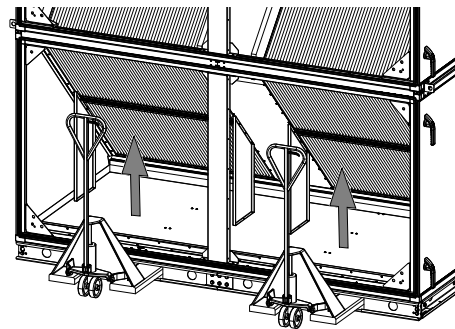

### Important

- Transportation must be performed by specialised personnel (truck operators, hook-up personal), equipped with the necessary protection equipment.
- The AHU must be transported and stored in such a way that it is protected against physical damage.
- During transportation the unit must always be in the upright position and tilted less than 15°.
- If sections must be tilted more than 15 degrees, sections with fans or rotating exchangers that can be drawn out for service must be secured carefully.
- During transportation, suction pipe of the compressor must always point upwards to prevent the leakage of oil from the compressor pump.
- Doors of the units must always be closed during transport.

### Important


- Only approved hoisting equipment with sufficient load capacity must be used for lifting.
- All lifting devices, ropes, straps etc, must be selected by someone with the required knowledge and be fully responsible for the use.
- The hoisting equipment must be in perfect condition.
- Lifting gear must be checked for load capacity and damage before use.
- The overhanging drip edges must be safeguarded by additional measures during crane transport (e. g. traverses or wooden spacer beams).
- Even lifting of the unit/section must be assured.
- Lifting may only be performed using permitted attachment points.
- Ensure that the method of lifting does not allow the unit to slip from chains and slings and does not allow the unit to turn over or slide from lifting devices.

The manufacturer will not accept any responsibility in case of possible accidents due to the non-observance of these warnings

## I.4 Handling examples


### I.4.1 Handling sections which are delivered on pallets

#### I.4.1.1 Forklift

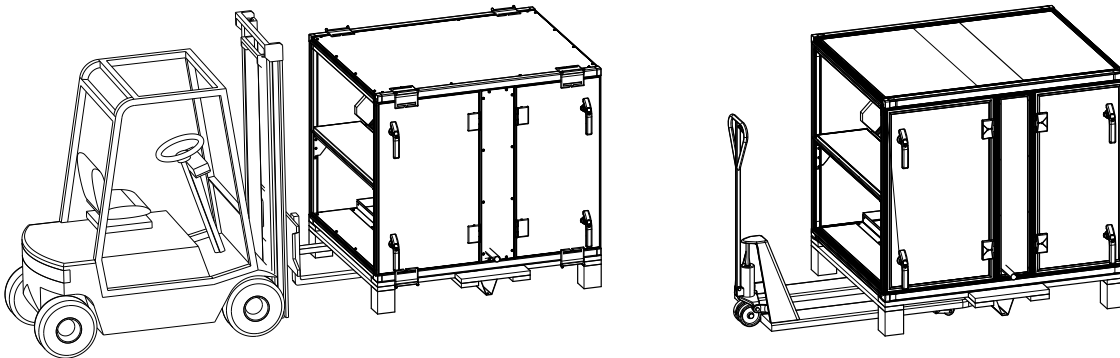

Sections on a pallets could be lifted and transported on site by a forklift truck or manual forklift.

#### I.4.1.2 Straps

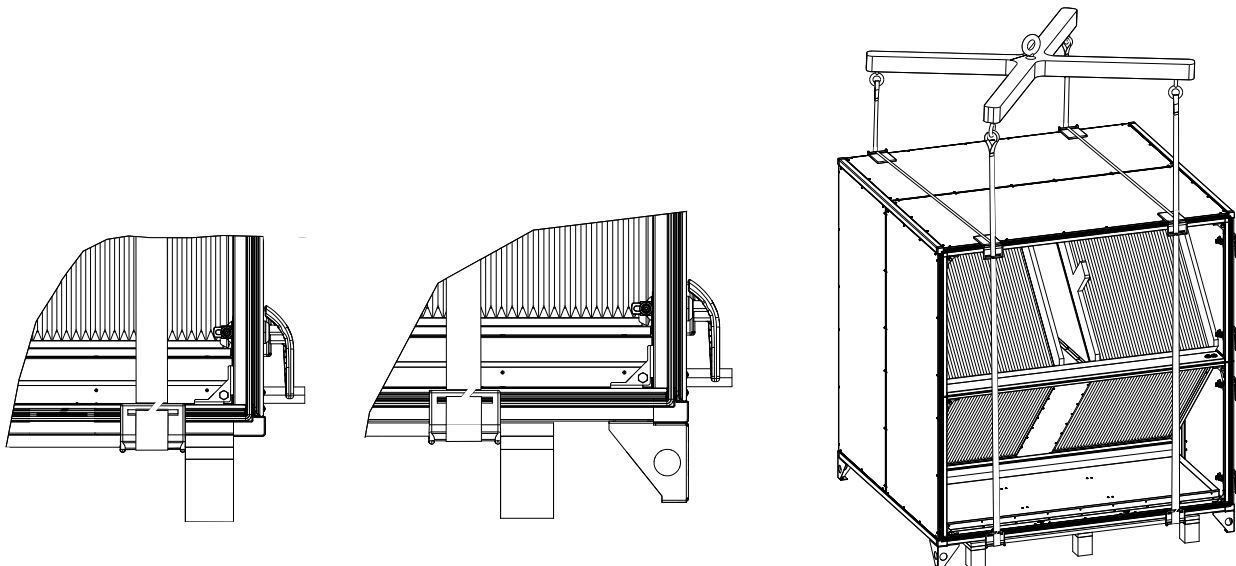

Lifting straps must be directed through the plastic corners. To avoid slipping, straps must be obtruded in notches of the plastic corners.




#### Caution

Use an appropriate lifting beam with a sufficient span to avoid that the straps touch and damage the drip nose profiles and the inspection side with handles, pipes and accessories – for example manometers, cabinets, tabs for measuring the pressure. Lifting brackets, beams and straps are not included in the delivery.

#### I.4.1.3 Lifting corners

Lifting corners are marked with informative stickers. Mount a shackle in each of the four corners as shown in picture below. Ensure that lifting straps are directed upwards and upper profiles are safeguarded by additional measures during crane transport (e. g. traverses or wooden spacer beams).

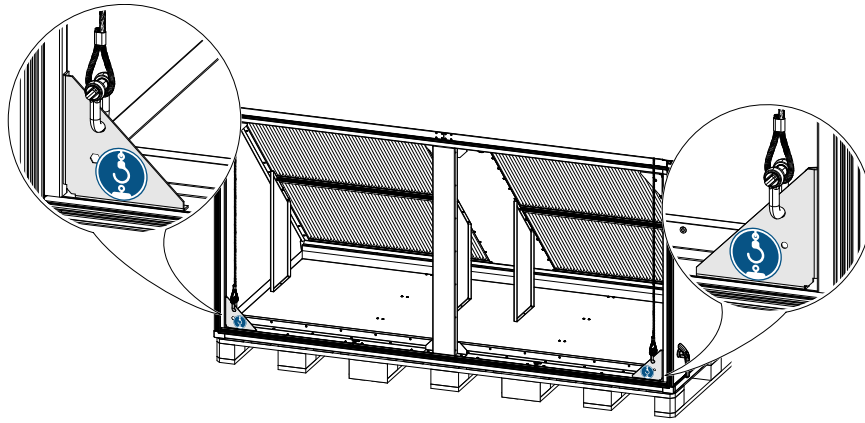


### Danger

Do not lift the section using corners at the top as they are not designed to withstand the weight of the section. There is a potential risk that the bottom with the heavy components may fall down with serious risk of injury and damage to property.


## I.4.2 Handling units/sections which are delivered on base frame

### I.4.2.1 Forklift

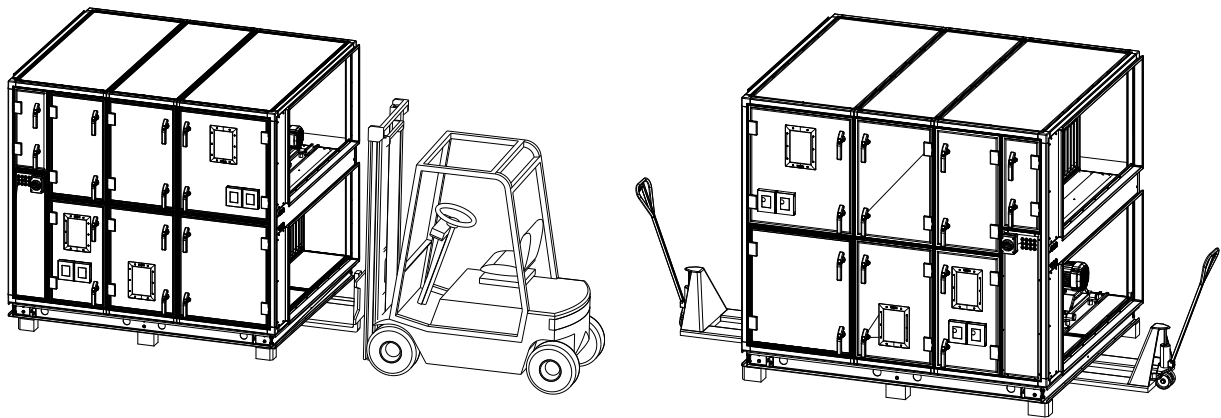

Unit or section placed on a base frame could be lifted and transported by a forklift truck or manual forklift.

Larger Geniox units have 4 holes for forklifts in base frame.

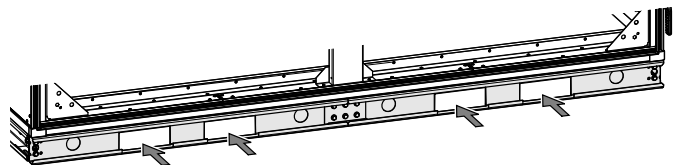




### I.4.2.2 Straps




#### Caution


Use an appropriate lifting beam with a sufficient span to avoid that the straps touch and damage the drip nose profiles and the inspection side with handles, pipes and accessories – for example manometers, cabinets, tabs for measuring the pressure. Ensure that lifting straps are directed upwards and upper profiles are safeguarded by additional measures during crane transport (e. g. traverses or wooden spacer beams). Lifting beams and straps are not included in the delivery.

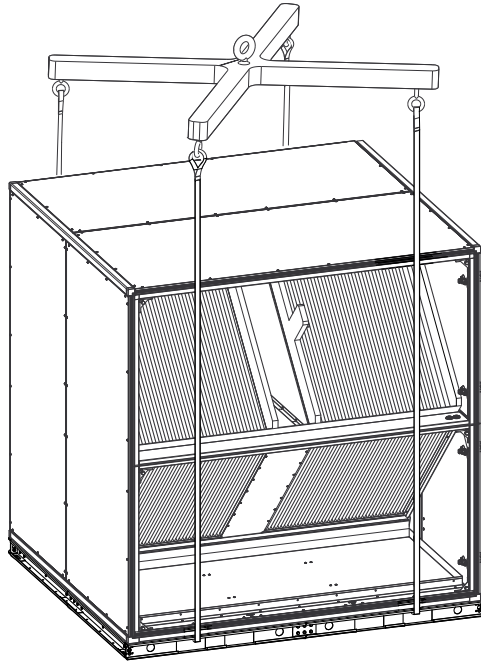

### I.4.2.3 Brackets

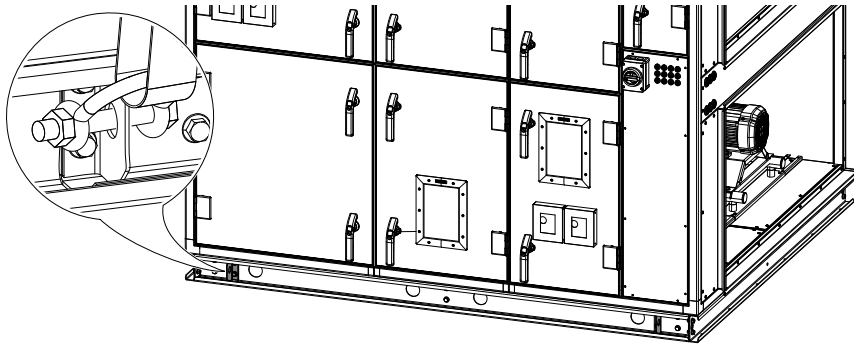


Brackets must be attached firmly to the base frame in places where steel corners are installed and fixed with M10 bolts. Mount a shackle in each bracket as shown in picture above.

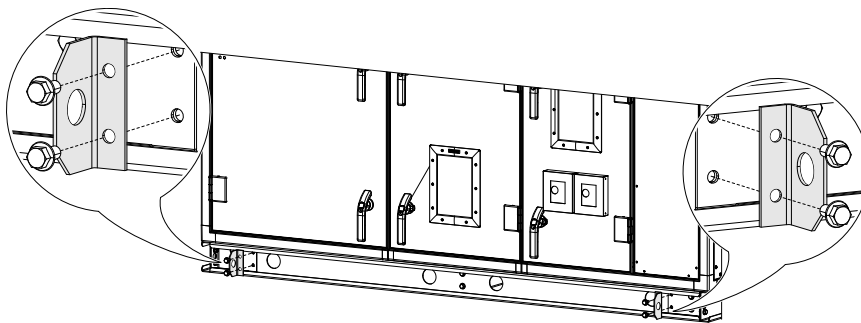

#### Caution


Use an appropriate lifting beam with a sufficient span to avoid that the straps touch and damage the drip nose profiles and the inspection side with handles, pipes and accessories – for example manometers, cabinets, tabs for measuring the pressure. Ensure that lifting straps are directed upwards and upper profiles are safeguarded by additional measures during crane transport (e. g. traverses or wooden spacer beams). Lifting brackets, beams and straps are not included in the delivery.

#### I.4.2.4 Hoist holes

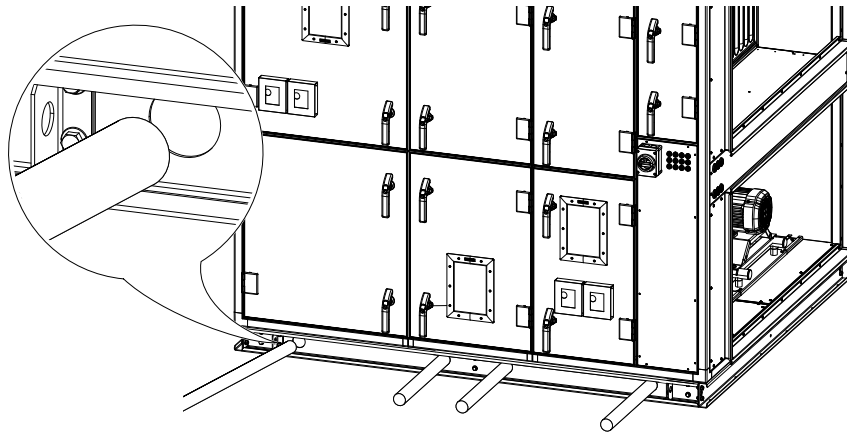

Hoisting pipes must be entered to a hoist holes and pushed all the way through the section. Ensure that lifting straps are directed upwards and upper profiles are safeguarded by additional measures during crane transport (e. g. traverses or wooden spacer beams). Hoisting equipment is not provided by Systemair.

#### I.4.2.5 Base frame side holes

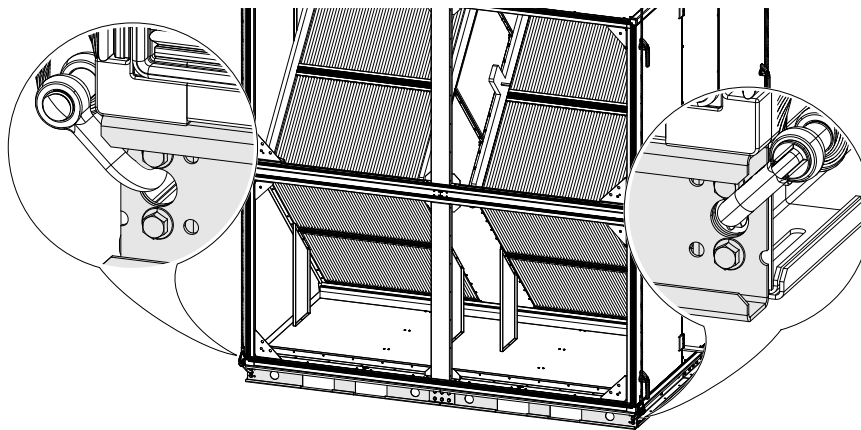

Unit or section placed on a base frame could be lifted using 4 base frame side holes. Mount a shackle in each as shown in picture above. Ensure that lifting straps are directed upwards and upper profiles are safeguarded by additional measures during crane transport (e. g. traverses or wooden spacer beams).

### I.4.3 Additional information


#### I.4.3.1 Available corners

Corner inside the unit for assembly of Geniox GO units in the sizes 16 – 20.



#### Caution

This type of corner is not reinforced and cannot be used for lifting the section.

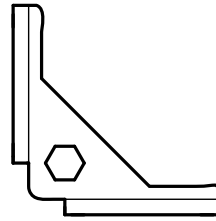


Corner inside the unit for assembly of Geniox GO units in the sizes 22 – 24. Top Corner inside the unit for assembly of Geniox GO units in sizes 27 – 31.




#### Caution

This type of corner is not reinforced and cannot be used for lifting the section.


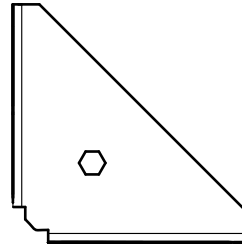


Bottom corner inside the unit for assembly of Geniox GO units in the sizes 27 – 31. This type of corner is reinforced and can be used for lifting the section.

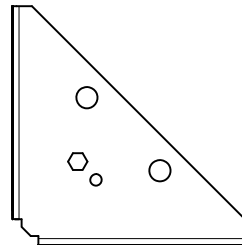

#### I.4.3.2 Roof unit with PVC roof

Avoid damaging the drip nose profiles along the PVC roof. Keep the protection profiles of Styrofoam on the unit until the installation has been completed. If the unit is lifted by straps, the straps must be kept away from the drip nose profiles by traverses or wooden spacer beams to avoid damage to roof profiles.

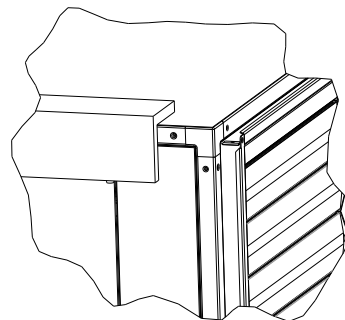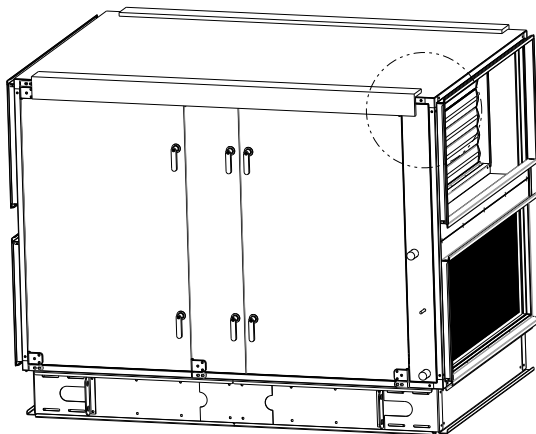

#### I.4.3.3 Roof unit with steel roof



#### Caution

For units with steel plate roof, the steel plates are delivered uninstalled on a separate pallet. Do **not** step or walk on the plates.

#### I.4.3.4 Pre-assembly storage

The unit must be protected from the weather and accidental impact. Plastic packaging **must** be removed and the unit covered with tarpaulin or similar materials. In order to minimize condensation, sufficient air circulation must be ensured between the covering and the unit.

#### I.4.3.5 Tilt less than 30° during transportation of the section with heat pump

During transportation, the unit section **must** always be in the upright position or tilted less than 30°. If it is necessary to tilt the unit more than 30°, the suction pipe of the compressor must point upwards to prevent the leakage of oil from the compressor pump.

## J Installation

### J.1 Installation - mechanical

#### J.1.1 Free area in front of and above the unit

##### Important

When positioning the unit on the site, it must be ensured that an area with the same width as the unit is kept free for service and inspection and also for replacement of fans and exchanger, if needed. The width of the free area must be at least 900 mm.

##### Important

For safe access to the cabinet with electrical components, if the cabinet is placed on top of the unit, the free area from the upper edge of the cabinet to the ceiling must be at least 700 mm.

#### J.1.2 Supporting surface



##### Caution

Duct work must be sound insulated and must not be mounted directly on beams, trusses or other critical building parts.




##### Caution

The surface beneath the unit must be level, horizontal and vibration-free. The surface must be able to withstand the load of the unit. Weights of the sections are presented in AHU selection software and also printed on section ID labels attached to the unit sections.

#### J.1.3 Adjustable feet under legs or base frame and transport of sections

Adjustable feet are provided in a carton box placed inside the unit. Adjustable feet are delivered both for indoor and outdoor units.

Sections can be transported on the site by hand manual forklifts or similar. The frame profiles in the edges of the sections have carrying capacity for lifting by the hand manual forklifts.

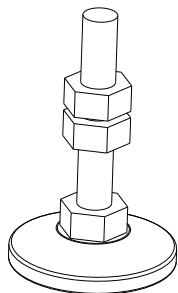

#### J.1.4 Base frame assembly

Depending on the order, base frame could be factory attached to the unit or delivered unassembled.

Assembly of the base frame is available in this user manual in Annex 2, 3, 4 or 5.

There are two types of base frames:

1. 118 mm high base frames
2. 218 mm high base frames

There are 4 different manuals and each of them illustrates the assembly of the 4 different types of base frames:

1. Manual about the 118 mm high base frames for AHUs in the sizes from Geniox GO 10 to Geniox GO 18. The name of this manual is – **Base frame 118 sizes 10 - 18**
2. Manual about the 118 mm high base frames for AHUs in the sizes from Geniox GO 20 to Geniox GO 27. The name of the manual is – **Base frame 118 sizes 20 - 27**
3. Manual about the 218 mm high base frames for AHUs in the sizes from Geniox GO 10 to Geniox GO 18. The name of the manual is – **Base frame 218 sizes 10 - 18**
4. Manual about the 218 mm high base frames for AHUs in the sizes from Geniox GO 20 to Geniox GO 27. The name of the manual is – **Base frame 218 sizes 20 - 27**

In Geniox GO sizes 29 to 31 each section has a separate base frame.

Adjustable feet with a distance of maximum 1500 mm between each feet must be fitted under the base frame. The base frame can be levelled by the adjustable feet.

### J.1.5 Base frames for outdoor units

Outdoor units can be installed on both 118 mm and 218 mm high base frames. Hot-dip galvanized base frames are recommended for outdoor units. Systemair delivers these base frames with the above mentioned adjustable feet.

### J.1.6 Outdoor units — support under the base frame of the unit

The installer must provide a frame that supports the base frame of the unit under the inspection side and under the back side of the unit. The frame must support the base frames of the unit under the entire length of the unit.




#### Caution

To avoid that the unit may tilt during storm the base frame of the unit must be properly fastened to the frame provided by the installer

### J.1.7 Installation on the site of unit sections at the base frame when sections are delivered on pallets


1. Lift up the section by **hand manual forklifts** to the level where the underside of the section is even with the overside of the base frame.
2. Pull the section to the correct position on the base frame by lifting straps – it is maybe necessary to support the section by heavy duty furniture trolleys (see the photos below)

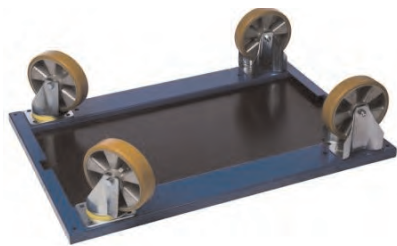

Example of heavy duty furniture trolley turned with the wheels upwards. Placed in this way on the forks of the hand manual forklifts the heavy duty furniture trolleys are suitable for safe and careful rolling of the unit sections over to the base frames.

Example of very heavy duty furniture trolleys. Turned with the wheels upwards and placed on the forks of hand manual forklifts these heavy duty furniture trolleys are very suitable for safe and careful rolling of the unit sections over to the base frames.

3. Pull sections together with straps. We recommend the shown type of straps because this type is not damaging the bottom frame profiles of the units. Place the strap on the bottom profiles of the unit to avoid any load and stress on the plastic corners created by the tensioner when sections are pulled together.

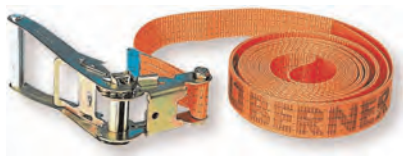

**Note!** Do not place the strap on the vertical profiles because the plastic corners and the profiles are not at all reinforced for the heavy load and stress that is created by the tensioner. To avoid any load and stress on the plastic corners the strap must be carefully placed on the bottom profiles of the unit when sections are pulled together.



Place the strap on the bottom profiles of the unit to avoid any load and stress on the plastic corners created by the tensioner when sections are pulled together.




The sections must be pulled fully and tight together with the strap is placed on the bottom profiles. Do not pull and slide a section unless the strap is placed on the bottom profile.



When the sections are pulled fully together it may be helpful to place the strap halfway up on the unit to press the sections fully together so that the rubber seals are closing 100% tight. Only gentle tension is allowed because the vertical profiles are not reinforced for brutal stress in this direction and they may be bent. Instal delivered brackets before the strap is removed.

4. Sections are mounted to base frames with self-drilling screws. In the base frame you will find a sufficient number of 5 mm holes that are prepared for the self drilling screws.

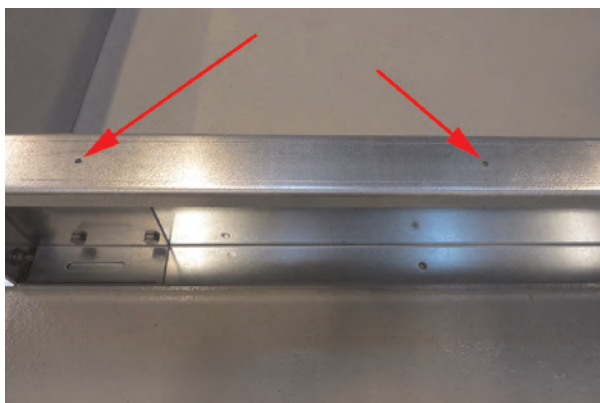




In this picture you are watching the assembled base frame from above.

In this picture you are looking upward under the base frame. The screws will not be visible while looking on the unit.

5. Use self-drilling screws – 4,8 X 25 mm – to be screwed upward through the holes into the bottom profile of the air handling unit. **Note! A screw must be placed in every hole to achieve the necessary strength.**

### J.1.8 Joining the unit sections

1. Ensure that the internal factory-fitted rubber sealing is undamaged

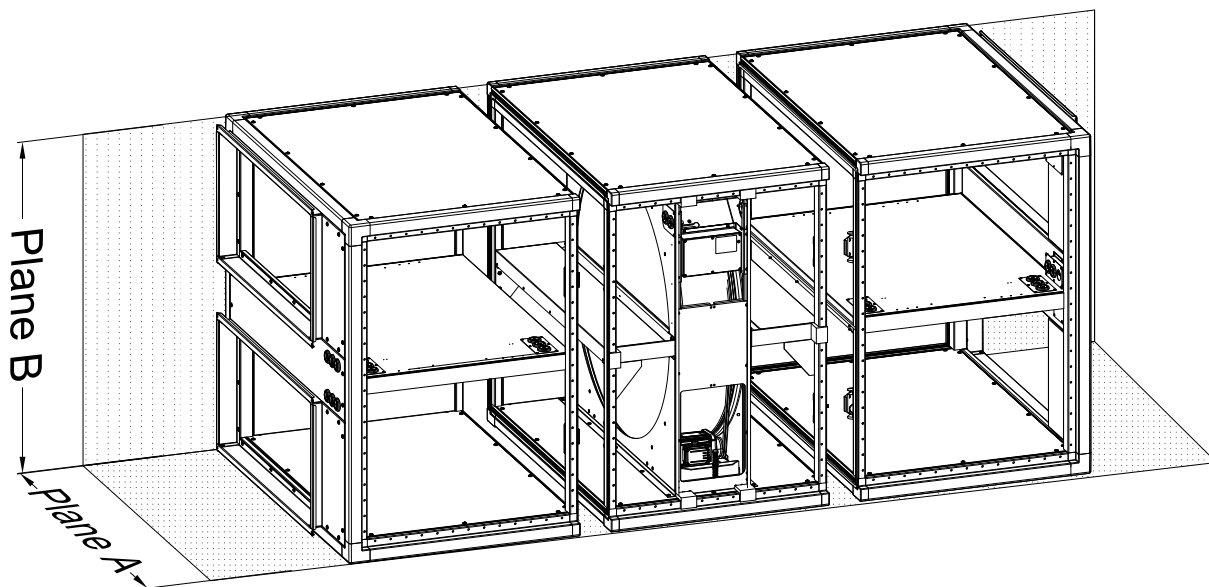



2. Sections must be positioned directly opposite each other and aligned by two planes. The height of each section can be adjusted by adjustable feet.



#### Note:

To achieve the best results, pull no more than two sections at a time!

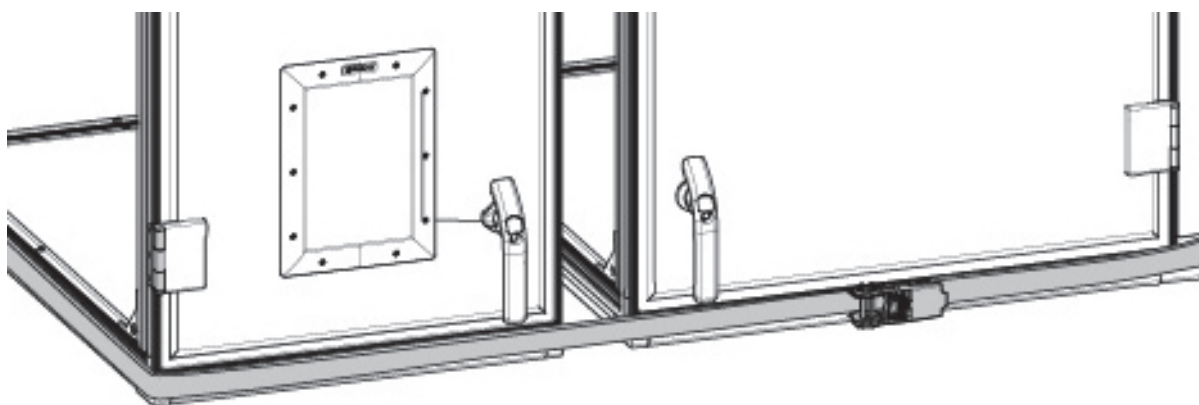

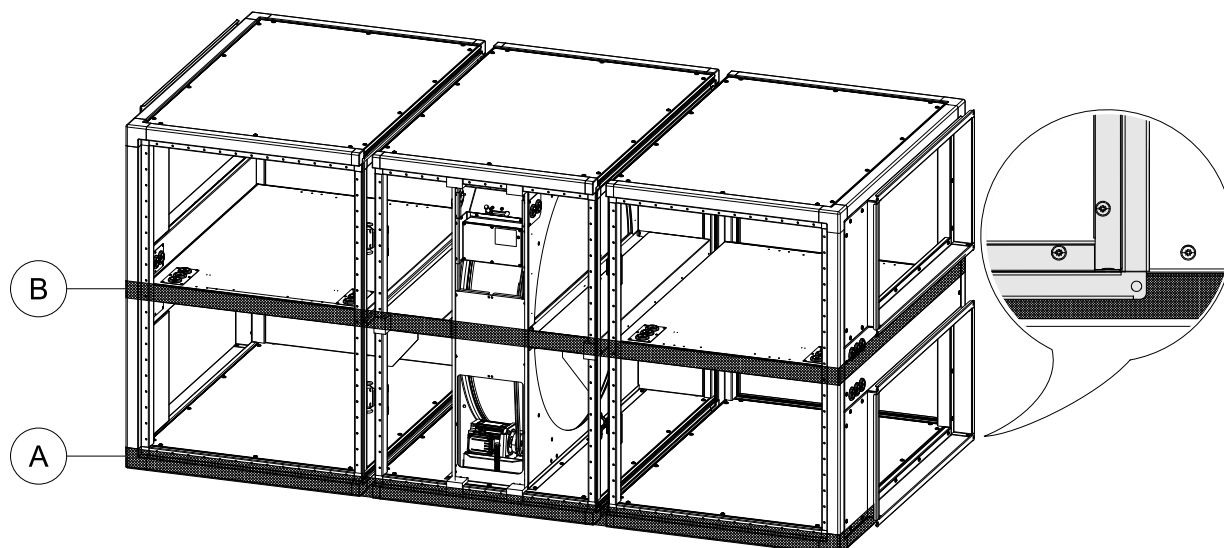

3. Press the sections hard together so that the rubber profiles are so flat that the iron frames of the two sections are joined. Straps with tensioner are suitable for pressing the sections hard together. Place the strap on the bottom profiles (pos. A) and pull sections together. When sections are pulled fully together it may be helpful to place the strap halfway up on the unit (pos. B) to press the sections fully together so that the rubber seals are closing 100% tight.



#### Caution



Only gentle tension is allowed on vertical profiles because they are not reinforced for brutal stress in this direction and profiles may get bent.



#### Caution

Do not place the strap on the duct connectors !

4. Geniox GO units have clamp locking system. Ensure that sections are aligned before trying to pull sections together. If there is a gap between the two clamps (fig. A), try pulling the sections further until both clamps get fully locked together and fix them with 8 mm bolts (fig. B). Bolts are delivered.

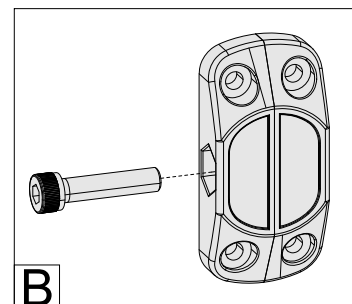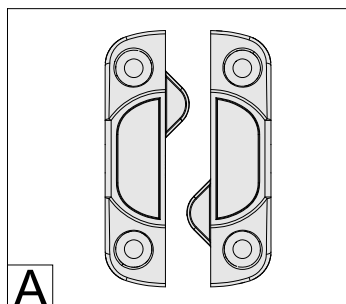

### J.1.9 Fitting the ductwork

Flexible duct connections between unit and ductwork must always be installed. Be sure that flexible duct connections are almost fully stretched. (Flexible connections are ordered as accessories and they are packaged placed near the unit). At the fan outlet on a centrifugal fan, the duct size should be as close to the outlet size as possible. Avoid blockage and turbulence at the fan outlet.

### J.1.10 Risk of stack effect by vertical ducts and wind pressure on louvers

#### Important

The Systemair air handling units can be ordered and delivered without dampers, and the installer/user must check that duct systems with the described risk of stack effect (chimney effect) will be provided with dampers and spring return motors.




On special occasions stack effect – also called chimney effect – in the ducts create airflows that drives the impellers by turned off motors.


A rotating impeller is a potential hazard during cleaning and maintenance of the unit. Eliminate this airflow by dampers with spring return motors for automatic closing of the dampers - even by power failure.

### J.1.11 Door alignment

During transportation the doors can tilt and have to be aligned.

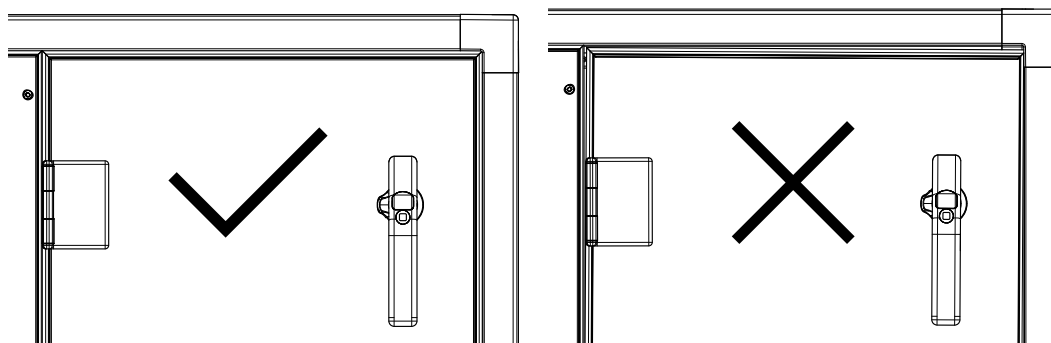

1. Remove plastic covers from hinges.
2. Loosen the 4 screws on the upper and lower hinges.
3. Align the door. Gaps have to be the same on all sides.
4. Tighten the screws. Make sure the door opens freely.
5. Place back the plastic covers.

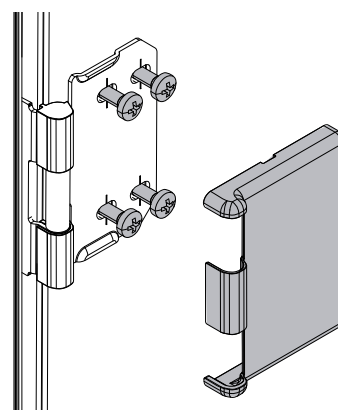

### J.1.12 Lock the doors by using the key

Use the key to lock the doors. The doors are not locked automatically by turning the handle to the vertical position.



#### Note:



Handles are included in a separate box and must be attached during installation.



## J.2 Installation - electrical

### J.2.1 Installation of cable sealing boxes (only in rotor sections of Geniox GO 27–31)

In rotor sections of Geniox GO 27 –31 installers must assemble 4 cable sealing boxes. All required parts are included in accessories.

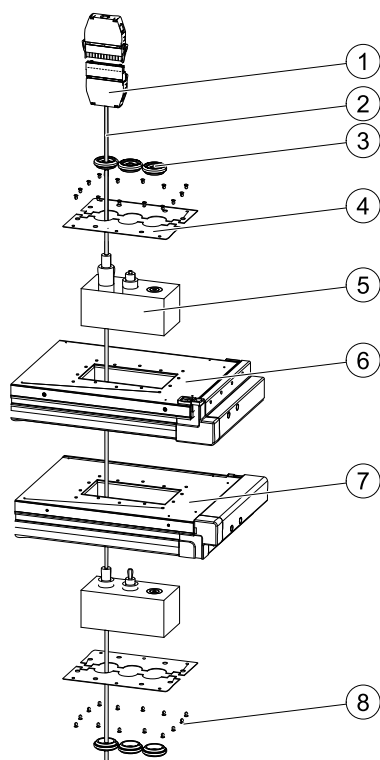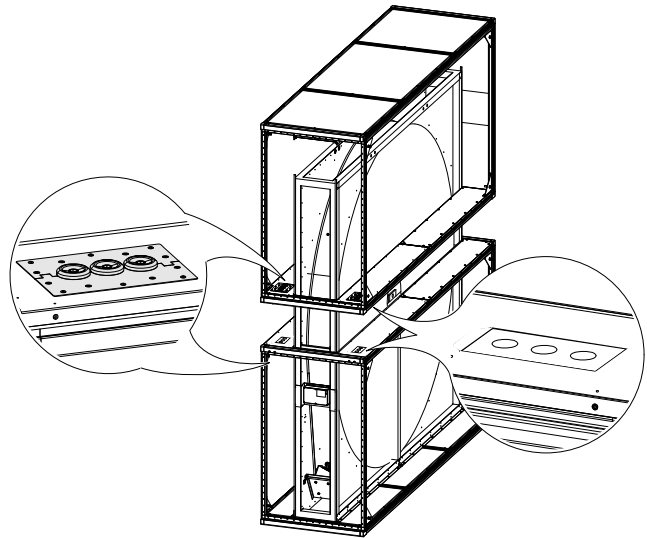

Part. No.	Name	Notes
1.	Cable connector	Connectors are factory preinstalled.
2.	Cable	Cables are factory preinstalled. During installation, cables must be routed through lower and upper section panels (pos. 6) .
3.	Cable-through sealing element	Cable-through sealing elements are factory preinstalled.
4.	Seal holding plate	Seal holding plates hold cable sealing blocks (pos. 5) in place. Those plates must be fixed to the panels using screws (pos. 7).
5.	Cable sealing block	Foam sealing blocks are used to enclose cables (pos. 2) and prevent air leakage between lower and upper sections. To enclose a cable, first remove a required thickness inner block tube. Ensure that there is no gap between the sealant and the cable before fixing it into the panel.
6.	Bottom panel of upper section	Cable sealing blocks must be installed into the panels (pos. 6 and pos. 7) and fixed with seal holding plates (pos. 4).
7.	Upper panel of bottom section	
8.	Screws	Screws are used to fix seal holding plates (pos. 4).

## J.3 Installation – Pipes for water – hot and chilled, valves and drains

### J.3.1 Description

If ordered with the unit, valves and valve motors are packed in a separate box. Water traps are optional. Water traps are necessary to prevent outside air coming into AHU via drainage.

### J.3.2 Pipe connections

Connection pipes on heating- and cooling coils are provided with external thread.

### J.3.3 Possibility of extracting components from the unit

Pipes and cables must not obstruct the inspection doors and components which can be extracted from the unit. Potential components for extraction are filters, fans and rotary heat exchanger.

### J.3.4 Pipe connections to batteries

#### J.3.4.1 Heating coils

Pipes for hot water must be protected by insulation against frost and loss of heat. Further protection against frost can be obtained by installing electrical heating wires around the pipes and under the insulation combined with temperature sensors and a control system. Pipes, insulation, electrical heating wires, control system for heating wires and circulation pump are not delivered by Systemair.

#### J.3.4.2 Cooling coils

If ordered with the unit, the valves and valve motors are stored in a carton box placed inside the unit. Pipes for cooling must be protected by insulation against condensation on the pipes and loss of cooling in the summer. Pipes and insulation are not delivered by Systemair.

#### J.3.4.3 Rigid pipe mounting brackets for valves, circulation pumps and pipe system

The coil and pipes from the coil are not constructed to withstand the weight and stress from valves, circulation pumps, long pipes and insulation of pipes. The system must be supported carefully in rigid pipe mounting brackets to roof, floor and walls.

##### J.3.4.3.1 Pipe connection to heating coils

The heating capacity of the coil with only 2 rows is independent of the connection of the hot water in equal flow or in counter flow to the direction of the air, but connection of the hot water to the pipe marked for inlet and the return water to the pipe marked for outlet is very important to ensure that the sensor for transmission of the water temperature really will be placed in a return circuit of the coil (Screw-joint for the water temperature sensor is welded in the main collection pipe for return water).

**For the frost protection of heating coil**, the water temperature in the coil is transmitted to the controller. The controller always generates a signal to the valve motor that keeps a sufficient flow of hot water to protect the coil against frost. This frost protection is also activated when the running mode is "off".

Coils with 3 rows or more must always be connected in counter flow to the airflow.




#### Note:


If glycol is added, the glycol must be without additives and auto glycol must not be used. Automatic bleeding has to be installed at the highest point of the 2 pipes – supply or return pipe.

If the heating battery is built with 3 or more rows, the water flow must be in counter flow to the direction of the air.


To protect against frost a temperature sensor for the transmission of an analog signal to the controller is placed in a pipe on the collection pipe for return water. The sensor must be fitted water tight with a cap in the pipe before water under pressure is in the battery. The pipe for the sensor is soldered on the collection pipe and it is important to hold contra on the pipe, when the cap is tightened.

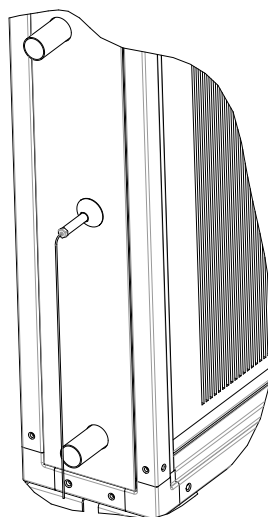

**Battery seen from above.** The sensor measures the water temperature of the water inside one of the small pipes for return water in the battery. The sensor reduces the area in this pipe and hereby also the flow of warm water in this pipe. The temperature in this pipe is reduced more than the temperature in all other pipes by the air-flow through the battery. Because the lowest temperature in the battery probably is measured here, this system creates early and safe warning of frost.

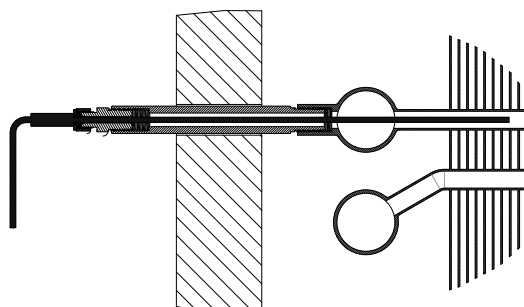

It is important that the cap is tightened sufficient to keep the sensor system fully water tight.

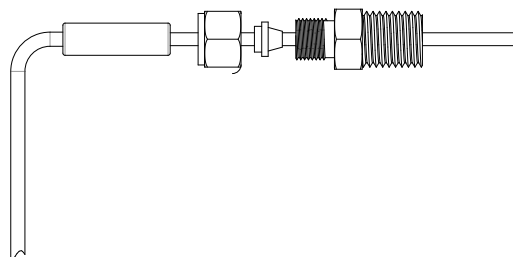

#### J.3.4.3.2 Pipe connection to cooling coils for chilled water

Coils with 3 rows or more must always be connected in counter flow to the airflow.



#### Caution

The glycol must be without additives and auto glycol must not be used. Automatic bleeding has to be installed at the highest point of the 2 pipes – supply or return pipe

#### J.3.4.3.3 Valve motor and valve for heating

The valve and valve motor are not installed. 2-way or 3-way valve is available.

#### J.3.4.3.4 Valve motor and valve for cooling

The valve and valve motor are not installed. 2-way or 3-way valve is available

### J.3.5 Draining condensate water

Drip trays for collection of condensate water are installed under plate heat exchanger and cooling coil. Each drip tray is provided with a drainage outlet. A water trap is always necessary. To avoid freeze ups and frost bursts of water trap and pipes, sufficient insulation is recommended and installation of heating between the insulation and water trap/pipes could even be necessary (insulation, heating and controller for the heating are not delivered by Systemair).

### J.3.6 Draining condensate water from plate heat exchanger


Condensate from the plate heat exchanger is collected in the drip tray. Heavy negative air pressure in this section prevents the water from flowing out of the drainpipe. A water trap with sufficient closing level of the water is essential to ensure that condensate water flows out of the unit. The closing level of the water trap must be estimated correctly to ensure safe escape of the water (see the illustration and estimate the minimum closing level according to the table). The pipe diameter of the water trap and sewage system must be identical to the pipe diameter of the drainage outlet from the tray.

A water trap is optional and installation of the water trap is not included.

**Remember to check that there is water in the water trap.**


**Table 1 Negative pressure P (Pa)**

P, Pa	H1 Minimum, mm	H2, mm
500	100	40
750	150	55
1.000	190	70

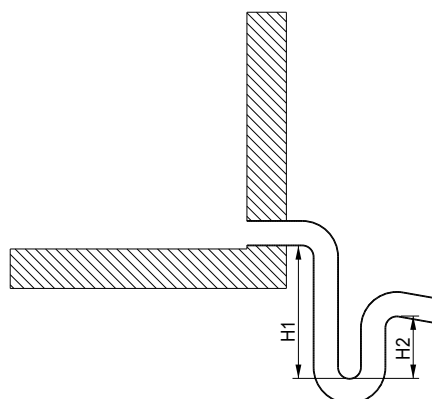

This type of water trap for sections with negative pressure and a ball that is sucked down into its seat for blockage of air flow into the section is available from Systemair. The above mentioned heights — H1 and H2 — are also valid for this type of water trap. The great advantage of this type of water trap for sections with negative pressure is that this type does not require water in the bottom to close for air flow backwards into the section. Condensate water will escape through this type of water trap — even after long periods without any water to close for air flow backwards through the trap.

This water trap is optional and must be ordered separately. Installation of water trap is not included.

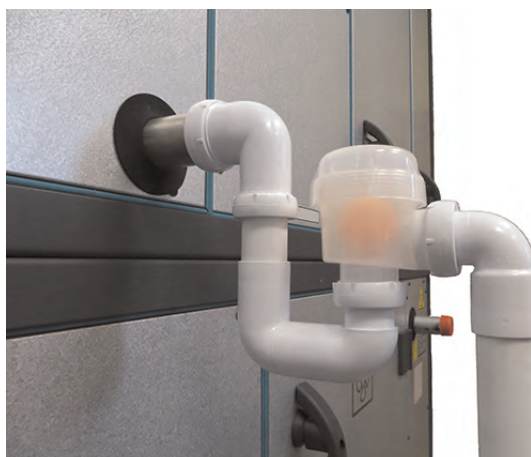


### J.3.7 Draining condensate water from cooling battery

If the cooling battery and the drip tray are placed in the unit where negative pressure (underpressure) occurs, the closing level of the water trap must be estimated correctly. See the above-mentioned information in J.3.6 *Draining condensate water from plate heat exchanger*. If the cooling battery and the drip tray are placed in the unit where positive pressure (overpressure) occurs, the closing level of the water trap must be estimated correctly as shown on the illustration below. A water trap is optional and installation of the water trap is not included.

Remember to check that there is water in the water trap.

**Table 2 Positive pressure P(Pa)**

P, Pa	H1, mm	H2, mm
500	90	65
750	120	90
1.000	150	120

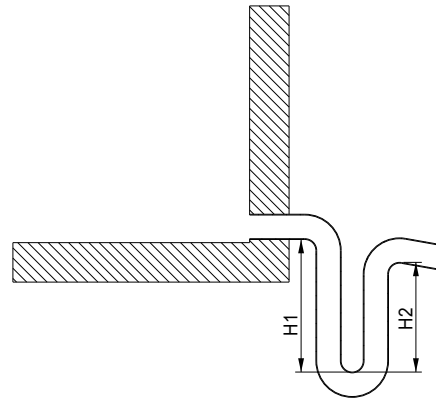

## K Installation and assembly instructions for reduction of noise and vibration emissions

Due to the design and construction of the units the (A) weighed sound pressure level from fans and other components do not exceed 70 dB (A) outside the units.

Installation of the units on rubber anti-vibration elements will reduce the transmission of noise and vibrations to the building. Systemair does not deliver anti-vibration elements for this purpose.

Flexible connections between the units and the ducts are available as accessories.

## L Start-up, adjustments, use and commissioning

### L.1 Print-outs on paper

The documents listed below are always printed on paper and delivered together with the units according to the Machinery Directive and the related national laws


This User Manual with:

- Declaration of incorporation – *C Declaration of Conformity*, page 2
- The unique technical data for this unit - Annex 1
- Installation instructions including instructions for the Danfoss frequency converter
- Short description about the main components in the control system – Annex 13
- Wiring diagrams - Annex 14
- Operator's guide for the Systemair control panel - Annex 15

### L.2 Start-up by installer

All protection and safety measures must be met before start-up of the unit. The mains supply voltage must also be checked too. The mains supply voltage must be measured at the supply terminals in the cabinet.

## L.2.1 Remove rotor lock plate

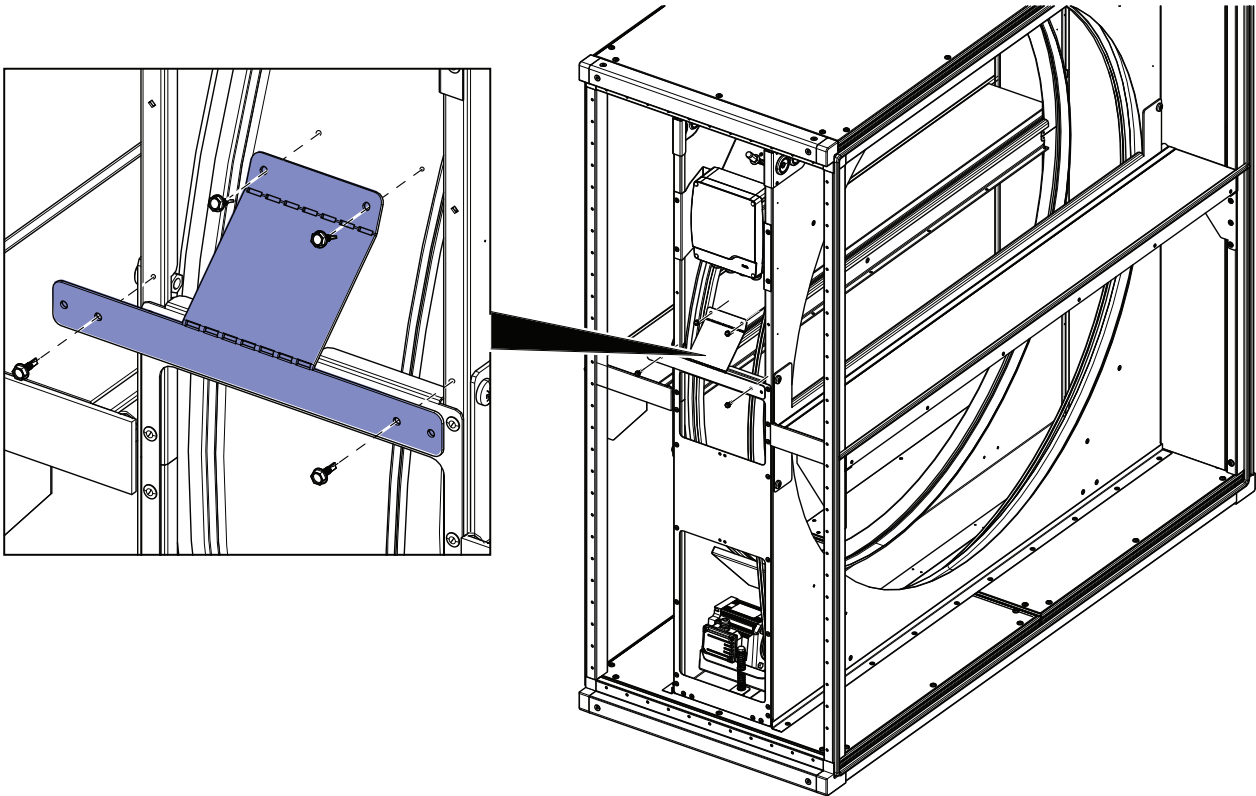

Before starting the unit remove the rotor wheel lock plate.

## L.2.2 Checklist, relevant values

### L.2.2.1 Checklist prior to start-up

- Is the unit assembled correctly with its functions in the correct order?
- Are the sections and ducts assembled correct?
- Check that fans and anti-vibration mounts are not damaged after transportation and installation.
- Is the rotary exchanger turning freely?
- Are doors locked?
- If the unit includes integrated heat pump, check whether it is installed and supervised by qualified service personnel.
- If the unit contains Electric air heater, make sure that the supply isolator disconnects with the unit.
- Are valves and valve motors installed correctly?
- Is the circulation pump installed correctly?
- Is water under pressure in the coil and circulation pump?
- Are the pressure transmitters installed and connected correctly? (If this is a system with pressure transmitters in the ducts)
- Main power supply:
  - Connected correctly?
  - Test of supply voltage for actuators and control signal!
  - Are control signals for actuators connected correctly?

### L.2.2.2 Switch on power



#### Warning

Do not start until all safety procedures have been completed and ensure that inspection doors are closed and locked.

Switch on power and the unit should be ready for the start-up.

For start-up see the Operator's guide for the Systemair control panel - Annex 15 (this manual is delivered with the unit - printed on paper).

### L.3 Description of functions

Description of functions and components can be found in the print-out. More detailed descriptions are available online.

### L.4 Commissioning

When the installer has completed the installation and wants to hand over the finished installation to his customer for payment, the commissioning protocol can be the written receipt for the full ended job. Fill in the blank spaces and sign the proposed commissioning protocol.

## M Information about the residual risks

### M.1 Unit casing

#### M.1.1 Design of the machine to make transport safe

**Hazards/dangerous area:**

- Incorrect handling during transportation may cause that the unit is dropped.

**Dangerous incident:**

- If a person is hit by a unit that is dropped, this could in unfortunate circumstances lead to irreversible injury or death.

**Claim for reduction of danger:**

- Correct handling during transportation is described in this manual. If lifted by **fork-lift truck** the forks of the truck must be sufficiently long. Safety measures are also described in this manual by use of crane. Information about weight of each section is also visible.

#### M.1.2 Common for all unit sections

##### M.1.2.1 Risk caused by lightning strike

**Hazards/dangerous area:**

- Lightning strike close to the machine.

**Dangerous incident:**

- Lightning strike can create flash over between phases and conductive parts. This can cause fire or the overvoltage can make injury on persons

**Claim for reduction of danger:**

- Installer and user must be aware of the fact that lightning makes a risk that requires installation of overvoltage protection devices to lead the lightning overvoltage to an earth lead on a safe way. The need for overvoltage protection devices depend on where the unit is placed in and on the building.
- Installer and user must take care of this according to local statutory requirements.

##### M.1.2.2 Risk caused by surfaces, edges and corners

**Hazards/dangerous area:**

- Sharp edges on plates might occur inside the machines as well as sharp edges on frames of dampers. No sharp edges on the outside of the units.

**Dangerous incident:**

- Cut fingers/hands.

**Claim for reduction of danger:**

- Risk only exists during maintenance and cleaning. This takes place at least once every year. Use of gloves and helmet is described in this manual. Cut-resistant gloves for protection against injury from sharp metal plate edges. Use CE-marked gloves for this purpose. If ordered, lamps are mounted or packed inside the unit. Sufficient lighting reduce the risk of injury.



### **M.1.3 Common for all unit sections by insufficient lighting**

#### **M.1.3.1 Risk caused by insufficient lighting inside sections**

**Hazards/dangerous area:**

- On the floors of the units there are handles to hold filters, profiles for the carrying of fan motors. Cables are between fan motors and frequency converters.

**Dangerous incident:**

- By insufficient lighting, the above-mentioned obstacles are not visible with the risk of stumbling that becomes a fall, leading in unfortunate circumstances to irreversible injury or death.

**Claim for reduction of danger:**

- Risk only exists during maintenance and cleaning. This takes place at least once every year. According to this manual and in the SystemairCAD software for configuration and selection of accessories, lamps for sufficient lighting inside the units are mandatory according to the latest interpretations of the Machinery Directive by the authorities. Use of helmets reduces the risk of injury.

### **M.1.4 Dampers**

#### **M.1.4.1 Risk caused by maintenance and cleaning of dampers**

**Hazards/dangerous area:**

- Are between the damper blades and the system of bars and links between motor and damper blades.

**Dangerous incident:**

- Crushing of fingers.

**Claim for reduction of danger:**

- Examination is still under preparation in our own laboratory. Still no voluntary test persons are available.

### **M.1.5 Attenuators**

#### **M.1.5.1 Risk caused by maintenance and cleaning of attenuators**

**Hazards/dangerous area:**

- High concentration of dust on the surface of the baffles might be harmful to the health.

**Dangerous incident:**

- To breathe in particles that is harmful to the health.

**Claim for reduction of danger:**

- Risk only exists during maintenance and cleaning. This takes place at least one time every year. Use of particulate respirator is described in this manual. Particulate respirator – maintenance free including foam face-seal and adjustable pre-threaded headbands (same particulate respirator as recommended for change of filters).

### **M.1.6 Filters**

#### **M.1.6.1 Risk caused by missing change of filters**

**Hazards/dangerous area:**

- Missing change of filters and missing maintenance decrease the capacity and final consequence will be breakdown.

**Dangerous incident:**

- By extensive lack of filter change and maintenance the machine can break down.

**Claim for reduction of danger:**

- In the manual is the method and schedule for change of filters and maintenance specified.

### M.1.6.2 Risk caused by the execution of filter change

**Hazards/dangerous area:**

- Filter panels and filter bags

**Dangerous incident:**

- To breathe in particles that is harmful to the health.

**Claim for reduction of danger:**

- Use of particulate respirator – maintenance free including foam face-seal and adjustable pre-threaded headbands (same particulate respirator as recommended for cleaning of attenuators).

### M.1.7 Plug fans

#### M.1.7.1 Risk caused by permanent magnet motor

**Hazards/dangerous area:**

- Rotation of the shaft generates electricity. This danger is always visualized by a yellow warning label on the inspection door where permanent magnet motors are installed.



**Dangerous incident:**

- Persons touching conductive parts get electric shock, burns, heart flicker and so on.

**Claim for reduction of danger:**

- By installation or repairs of conductive components, the shaft must be blocked to prevent any rotation.

#### M.1.7.2 Risk of rotating impeller caused by stack effect (chimney effect).

**Hazards/dangerous area:**

- On special occasions stack effect – also called chimney effect – in the ducts create airflows that drives the impellers by turned off motors.

**Dangerous incident:**

- Injury of fingers, hands and arms.

**Claim for reduction of danger:**

- Eliminate this airflow for supply air and exhaust air by dampers with spring return motors for automatic closing of the dampers by turned off fan motors and by power failure.

### M.1.8 Batteries for heating and cooling

#### M.1.8.1 Extreme temperatures - heating

**Hazards/dangerous area:**

- Electrical heating elements can achieve surface temperature of 500 degree Celsius.
- Batteries and pipes for hot water can achieve 95 degree Celsius.

**Dangerous incident:**

- According to ISO 13732-1:2006, here is no direct risk of burns. (short-time contact – lesser than 2,5 sec).

**Claim for reduction of danger:**

- No.

### M.1.8.2 Extreme temperatures - cooling

#### Hazards/dangerous area:

- Evaporator batteries and pipes connected to cooling compressor can achieve minus 10 degrees Celsius.

#### Dangerous incident:

- According to ISO 13732-1:2006, here is no direct risk of burns. (short-time contact – lesser than 2,5 sec).

#### Claim for reduction of danger:

- No.

### M.1.9 Heat pump units

#### M.1.9.1 Risk of high temperature

#### Hazards/dangerous area:

- Condenser batteries and pipes can achieve temperature of 60 degree Celsius.

#### Dangerous incident:

- According to ISO 13732-1:2006, here is no direct risk of burns. (short-time contact – lesser than 2,5 sec).

#### Claim for reduction of danger:

- No

## N Instructions on the protective measures during repair and maintenance

Use the below-mentioned personal protective equipment for maintenance:

- Cut-resistant gloves for protection against injury from sharp metal plate edges. Use CE-marked gloves for this purpose.
- Helmet
- Particulate respirator – maintenance free including foam face-seal and adjustable pre-threaded headbands – for replacing filters.
- Permanent magnet motor. The shaft must be blocked during repairs and maintenance of the electric system (the motor generates electricity by rotation – for example that the wind and thermic drives the fan/motor).
- Lighting inside the units. According to the latest interpretations of the Machinery Directive by the authorities sufficient lighting inside the units is mandatory.
- Tools to block the impeller during repairs and maintenance if stack effect – also called chimney effect – in the ducts create airflows that drives the impellers by turned off motors

## O The essential characteristics of tools which may be fitted to the machinery

The subject in the Machinery Directive about tools on the machine does not exist for the Geniox GO air handling units, because those tools does not exist.

## P The conditions of stability during use, transportation, assembly, dismantling when out of service

The unit must always be handled in an upright position. Never tilt any section more than 15 degrees. If sections must be tilted more than 15 degrees, sections with fans or rotating exchangers that can be drawn out for service must be secured carefully.

During transportation, installation, dismantling or other handling, it must be secured that all components in the unit are properly fastened and with additional attention to the control of anti-vibration mounts under the fans that they are undamaged. The mounting and smooth running of the fans must be controlled and handled with great care.

### P.1 Installed reliable to avoid units to be tilted or moved by storm

Units installed on roofs and other places with the risk of heavy winds must be installed reliable to avoid that they can be tilted or moved by the any storm. The base frame is provided with holes that are intended for fastening by sufficient bolts and fittings supplied by the installer.

## P.2 Transport of section with heat pump unit



### Warning

During transportation, the unit section with heat pump **must** always be in the upright position or tilted less than 30°. If it is necessary to tilt the unit more than 30°, the suction pipe of the compressor must point upwards to prevent the leak of oil from the compressor pump.

## P.3 Disposal of the heat pump system

Prior to the disposal of the heat pump unit section, the refrigerant in the heat pump system must be drained off by a skilled technician from a certified company. After correct evacuation of the refrigerant, the disposal of the heat pump unit section is similar to the disposal of the rest of the air handling unit.

## P.4 General disassembly – sharp edges

Pay attention to several sharp edges during dismantling and disposal of the unit. To avoid injury, CE-marked cut-resistant gloves as well as helmet must be used. The measures are described further in the Maintenance, Dismantling and Disposal Manual.

## Q Instructions for machinery where these are regularly to be transported

The subject in the Machinery Directive about machinery that are regularly to be transported does not exist for the Geniox GO air handling units, because those units are for specially made for one intended application.

## R The operating method to be followed in the event of breakdown. Safe restart.

Use the below mentioned procedure in the event of breakdown or blockage:

- Switch off the power and turn the main power switch to off position.
- Remove the reason for breakdown or blockage.
- Follow the start-up procedure described in chapter L.


## S Adjustment and maintenance operations

Must be performed by skilled technicians.

In connection with demands for compensation, Systemair must have full and unhindered access to all relevant reporting on service, repair, modification and use since the unit was transferred from Systemair to a transport company at the Systemair factory. It is a condition for compensation that maintenance outlined on the following pages has as a minimum been performed.

### S.1 Shutdown of the unit to a safe state

Switch the unit OFF on the Systemair Control Panel. Turn off the power by rotating the main unit power switch handle to OFF position.

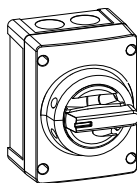

Use the start-up procedure described in chapter L, when the maintenance activities are completed.

## S.2 Recommended maintenance intervals

Function	Maintenance	Number per year
Unit casing	Cleaning of the unit casing.	1
	Control of rubber seals on doors and between sections.	1
Filters	Change on demand by alarm and always minimum twice a year.	2
	Control of rubber seals.	2
Fans	Cleaning of all parts.	1
	Check motors and bearings	1
	Check that the impellers are rotating without dissonance.	1
	Check that anti-vibration mounts are intact.	1
	Check that the unit is operation without vibrations after the cleaning, overhaul and maintenance.	1
Rotary heat exchanger	Check that leakage and dirt accumulation is insignificant	1
	Check that the rotor can turn freely and easily manually with a hand when the belt is removed from the drive	1
Plate heat exchanger	Check bypass function and sequence for de-icing	1
Run-around heat exchanger	Check the exchanger function and test the frost protection. The glycol must be without additives and auto glycol must not be used.	1
Dampers	Test the operation.	1
	Visual inspection of seals and tightness when closed.	1
Hot water battery	Check the dirt accumulation and clean, if needed.	1
	Bleeding, if needed.	1
	Test of frost protection sequence	1
	Test of circulation pump	1
Electric heating battery	Check dirt accumulation and clean, if needed.	1
	Test the function of the system with the fuses for the safety.	1
Cooling battery	Check dirt accumulation and clean, if needed.	1
	Test the frost protection (glycol)	1
Heat pump unit	Mandatory annual control of the heat pump system. Must be done by certified technician from a certified company.	1
Condensate drain	Cleaning of tray, water trap and outlet. Check the electrical heating between insulation and pipes, if installed.	1
Saving- and comfort functions	Test of CO2 sensor, humidity sensor, motion sensor, pressure transmitters for air capacity control, extended operation via button, cooling recovery, free cooling	1
Fire alarm	Test of thermostats, smoke detectors and fire detection systems	1
Battery in controller	Change the battery on demand by alarm in the display and always change the battery as a minimum every 5 years.	1
Remote control	Test of Communications.	1

## S.3 Filters – always replace filters with new filters with the same characteristics to maintain SFP value

Filters in supply air and in extract air always have the same sizes of frames and the number of filters for supply air and extract air are always the same. REMEMBER to order filters for supply air as well as for extract air.

To maintain the factory-calculated SFP values for the air-handling unit, it is very important that filters with the same characteristics for start pressure as well as lifetime replace factory-mounted filters.

To achieve the most favourable SFP values, the factory-mounted filters represent the lowest achievable start pressure as well as the longest achievable lifetime. If other filters with higher start pressure and shorter lifetime replace the factory-mounted filters, the user will experience smaller airflow and/or consumption of more electricity, and the SFPv value calculated by Systemair according to the Eurovent certification will not be achieved. Poor SFPv values will be detected by tests according to commissioning standards, DGNB, LEED or BREEAM sustainability standards and locally defined performance standards (the SFPv is with new clean filters).

Filter frame for bag filters must be of NON-PVC plastic to ensure safe disposal by incineration.

For each individual air handling unit you will find the data for the factory-mounted filters in attached technical documents which are packed inside the unit. Filter related information also written on the machinery card that is attached to the unit. You will find an example of the machinery card in D.1.3 *Machine card with unique data on every unit*, page 7 of this manual.

The factory-mounted filters comply with indoor air quality demands of customers and with the SFP values according to local legislation.

These air handling units are available with filters that comply with the below-mentioned filter classes:

- G4 – Coarse 65%
- M5 – ePM10 60%
- M6 – ePM2,5 50%
- F7 – ePM1 60%
- F7 – ePM1 60% CityFlo
- F9 – ePM1 85%

### S.3.1 Bag filters – the number of filters and sizes of frames

Filters in supply air and in extract air are always the same sizes and the same numbers. See the filters in supply or extract air below.

Size of unit	Numbers and sizes of frames for bag filters (WxH)
10	1x[792x392]
11	2x[490x392]
12	1x[592x490] + 1x[490x490]
14	2x[490x592] + 1x[287x592]
16	3x[490x592]
18	2x[490x392] + 4x[592x392]
20	3x[592x592] + 3x[592x287]
22	6x[592x490] + 2x[287x490]
24	3x[595x592] + 1x[490x592] + 3x[592x490] + 1x[490x490]
27	2x[592x592] + 8x[490x592]
29	6x[592x592] + 4x[490x592]
31	5x[592x592] + 5x[592x490] + 5x[592x287]



#### Note:

Special sizes of filters are available from Camfil.

### S.3.2 Panel filters – the number of filters and the sizes of the frames

Size of unit	Numbers and sizes of frames for panel filters (WxHxD)
10	1x[792x392x48]
11	2x[490x392x48]
12	1x[490x490x48] + 1x[592x490x48]
14	2x[490x592x48] + 1x[287x592x48]
16	3x[490x592x48]

Size of unit	Numbers and sizes of frames for panel filters (WxHxD)
18	2x[490x392x48] + 4x[592x392x48]
20	3x[592x592x48] + 3x[592x287x48]
22	6x[592x490x48] + 2x[287x490x48]
24	3x[592x592x48] 4x[490x592x48] + 1x[490x490x48]
27	2x[592x592x48] + 8x[490x592x48]
29	6x[592x592x48] + 4x[490x592x48]
31	5x[592x592x48] + 5x[592x490x48] + 5x[592x287x48]

**Note:**



Special sizes of filters are available by Camfil.

### S.3.3 Bag filters

Turn the unit off and wait for 2 minutes till unit completely stops. Used filters can be pulled out. Store the used filters immediately in plastic bags to avoid that dust pollutes the environment. Geniox GO units in the sizes 10 – 31 are provided with a very corrosive-resistant and reliable system, where filters are slid into the units in a lower and upper durable u-profile of plastic/rubber. Check the upper and lower U-profile for damage and check the vertical rubber profile on the back wall as well as the rubber profile on the inspection door for damage. The new filter bags must be pushed carefully into the unit in order to ensure that they are sealed properly. The filters must have vertical bags.


ONE self-adhesive foam strip must be placed on the vertical frame of EACH filter to avoid major air leakage through the vertical opening between 2 filters. Please note – only ONE self-adhesive foam strip must be placed on the vertical frame of EACH filter – Please establish the practical rule that the self-adhesive foam strip is placed on the vertical side that is visible from the inspection side. Those very important self-adhesive foam strips are usually not delivered by the suppliers of filters. The customer must order those self-adhesive foam strip from a supplier of foam strips. The foam strip must be wide enough to prevent air leakage between the filters but not too wide to allow closing the inspection door. **Note! The staff must have the self-adhesive foam strips available when they go to the air handling unit. Without those self-adhesive foam strips, any change of filters is impossible.**

Remove the protection from the self-adhesive side of the strip.

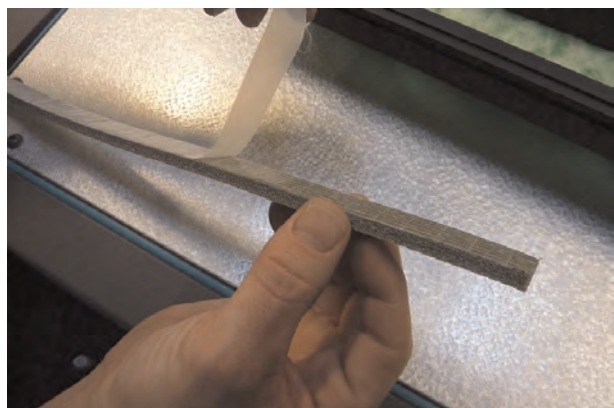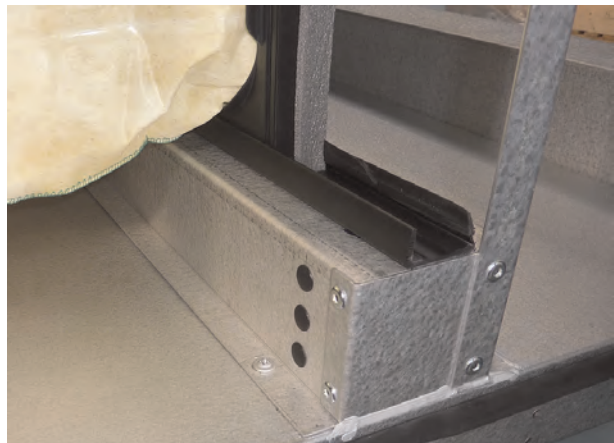




Place the self-adhesive strip on **one** vertical side of the filter frame

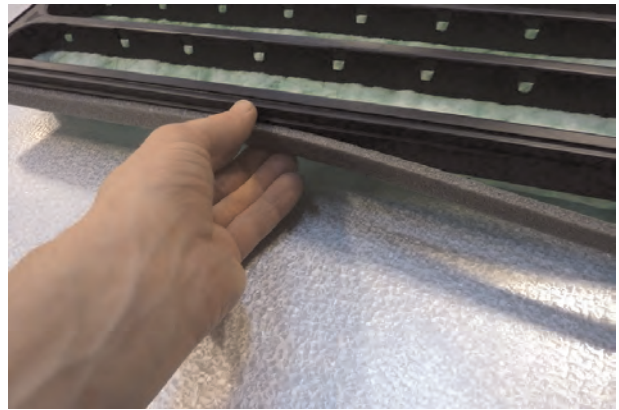

Check that the end of the strip is fully even with the horizontal side of the filter frame.

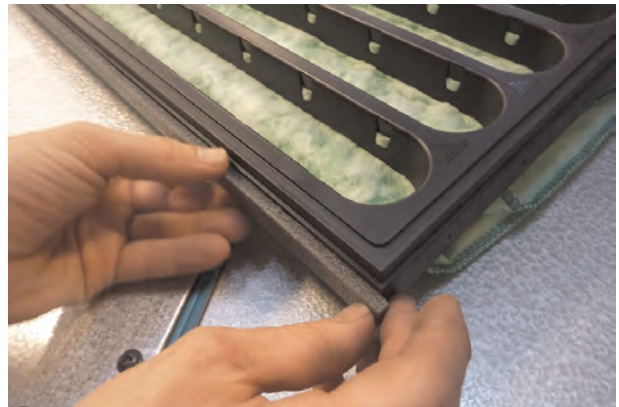

Remove excess of the strip. The end of the strip must be fully even with the horizontal side of the filter frame.




Push the filters carefully in the U-profile to be sure that there are no leakages between the filters. Check that the vertical side of the last filter in the U-profile is fully even with the end of the U-profile. If the end of the last filter is not fully even with the end of the U-profile an additional self-adhesive profile must be added to avoid any gap between the rubber profile on the inspection door and the last filter.



**Note:**

Use lubricant if filters are too difficult to push in.

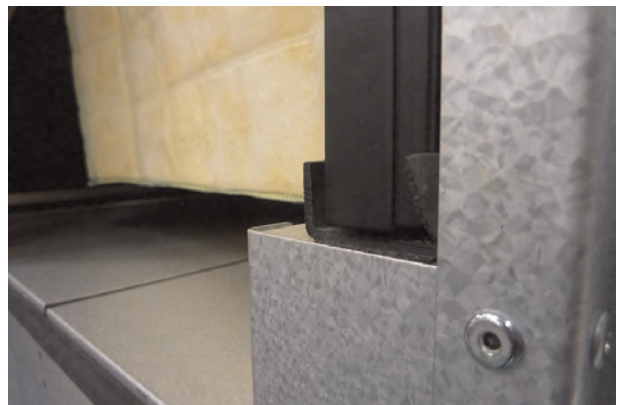



The end of the last filter is fully even with the end of the U-profile. The rubber profile on the inspection door will close the gap between inspection door and filter. Job is done.



Check that rubber profiles on the back panel as well as rubber profiles on the inspection door are without wear and damage — still sufficient for avoiding any air leakage.



### S.3.4 Panel filters

The filter cell guide rails are to be cleaned before fitting the new filters.



## S.4 Changing the Internal Battery in the controller



### Caution


This procedure requires knowledge of proper ESD protection; i.e. an earthed wristband must be used!

When the alarm "Internal Battery" is on the screen of the control panel, the battery for backup of program memory and real-time clock has become too weak. The battery is replaced as described below. A backup capacitor saves the

memory and keeps the clock running for at least 10 minutes after the power supply is removed. Therefore, if the battery replacement takes less than 10 minutes, there will be no need to reload the program, and the clock will continue to run normally.

The replacement battery must be of the type CR2032.

- 1 Remove all the cables from the Access controller. All cables are in plugs that easily and fast can be pulled up. Release the Access controller from the mounting frame through pushing on one of the long sides of the controller. This is shown on the illustration below.

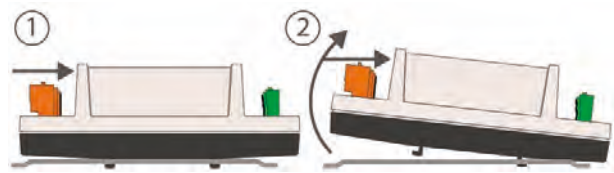

- 2 Remove the white cover from the black bottom by pressing on each of the six locking hooks at the two long edges of the cover using a small screwdriver, and at the same time pulling the cover outwards.




- 3 Use a small screwdriver to press this hook on the cover away from the edge of the black bottom



- 4 Each of the six hooks must be released from the block on the black bottom by a small screwdriver, and at the same time pulling the cover outwards.



- 5 Grip the battery firmly with your fingers and lift it upwards until it rises from its holder. Press the new battery firmly down into place. Note that to preserve correct polarity; the battery can only be inserted the "right way round".

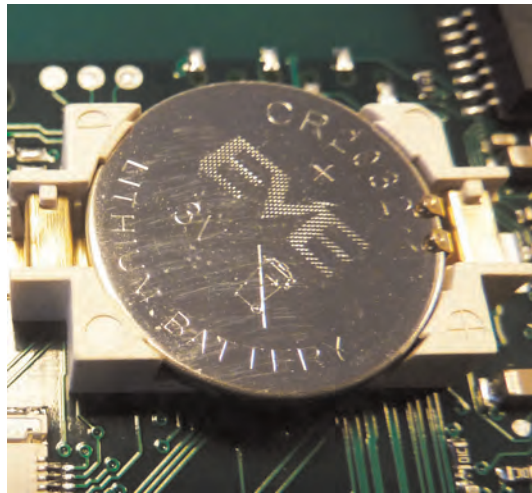

## S.5 Other functions to maintain

### S.5.1 The unit

It is very easy to remove inspection doors for extraordinary good access to cleaning, service, repairs and replacement of components in the unit. Lift the stainless steel shaft in the hinge to remove the door



- The unit should be cleaned once a year when operating with normal air quality for comfort ventilation with no special hygiene requirements.
- To clean the unit, dry it off with a dry cloth, or use water mixed with a non-corrosive cleaning medium.
- Any corrosion – for example the bottom of the section for outdoor air intake and the bottom of the section for exhaust air outlet must be cleaned off immediately, and the surface treated.
- In special operating conditions, where the air is aggressive or very humid, for example, or where there are special hygiene requirements, the air handling unit shall be cleaned more frequently as required.
- Cleaning medium and method should be adapted to the relevant conditions. Any corrosion should be cleaned off immediately, and the surface treated.
- Closing mechanisms are to be lubricated at least once a year. Synthetic door hinges are service free. Seals around inspection doors are to be cleaned at least once a year and are to be checked for leakage.
- It is recommended to treat the seals with a moisture repellent agent. Connecting pieces for the unit sections, including the Disc-Lock types, are to be checked for tightness at least once a year.
- All seals are to be inspected at least once a year and are to be repaired if necessary.
- Grilles for air intake and exhaust air outlet are to be cleaned at least once a year to prevent blockage.

### S.5.2 Dampers


Rubber seals between the damper blades and the frame are to be checked once a year. These seals are not to be lubricated or treated in any other way.

Each damper blade is driven by a gear drive of a temperature-resistant, glass-fibre reinforced PA6 nylon composite. Gear-drive as well as bearings do not require lubrication.



The damper blades are fitted with synthetic bearings requiring no lubrication. Air-tightness of the damper, when the damper motor is in the closed position, must be visually checked once a year. The damper motor is to be adjusted if the damper does not close tightly.

### S.5.3 Rotary heat exchanger

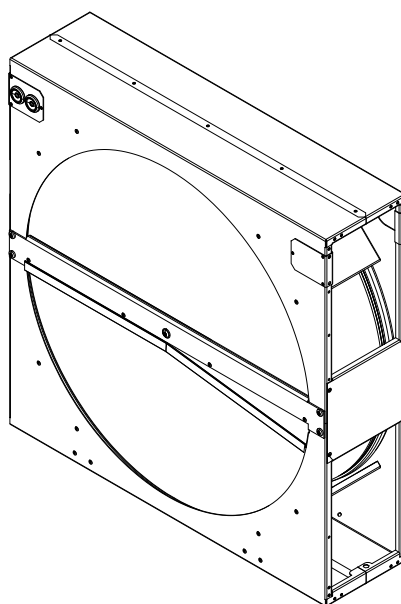

#### S.5.3.1 Rotor

The rotor is to be checked at least once a year to ensure that it can turn freely and easily. This can be done by removing the belt drive at the motor and then turning the rotor manually with a hand on the peripheral rotor casing. The bearings are factory lubricated and do not require any service lubrication. During operation the rotor can become dirty. The rotor can be cleaned by blowing through with compressed air.


Brush seal lasts from 6 months to 1 year and have to be checked at least twice a year. Brush seal lifetime depends on airflow, rotor speed and weather conditions. Worn-out brush seal must be replaced.



### S.5.3.2 Motor and belt drive

The bearings are factory lubricated and do not require any service lubrication. The belt drive is to be checked for correct tightness and that it is undamaged. On smaller units, the rotor is fitted with an elastic belt drive and supplied with a reserve belt on the rotor. This belt drive does not require service and cannot be shortened. A new belt can be fitted using specialist tools. On larger heat exchangers the rotor has a V-belt with a belt connector. If the belt is no longer tight, it must be shortened to a length which enables the motor base frame tightening spring to hold the belt tight. If new screws are used for the belt connector, they must not have a length which exceeds the thickness of the belt and connector. Remove the excess, if any, with a file.

### S.5.4 Cross flow and counter flow exchanger

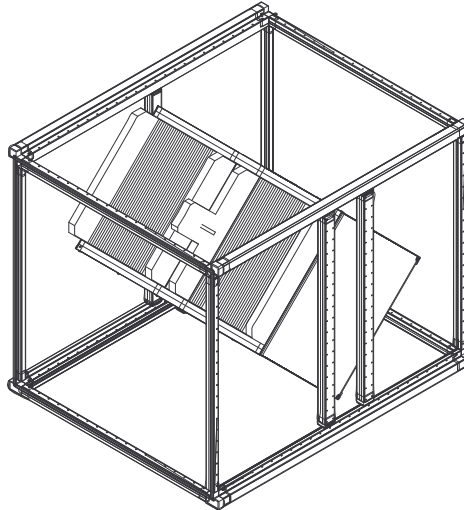

#### Note:

Once a year the edges of the heat exchanger plates are to be checked for cleanliness and damage.

If there is dust on the edges of the plates, remove it with a soft brush. If grease or other such substances are present, then the edges must be washed using grease dissolving detergents.

#### S.5.4.1 By-pass damper

The damper blades are fitted with synthetic bearings requiring no lubrication. Each damper blade is driven by a gear drive of a temperature resistant glass fibre reinforced PA6 nylon composite. The steel rods and brass bushes do not require lubrication. Air-tightness of the dampers, when the damper motor is in the closed position, must be visually checked once a year. The damper motor is to be adjusted if the damper does not close tightly.

#### S.5.4.2 Condensate water drain

Once a year clean the drip tray beneath the heat exchanger, as well as the drain and the water trap. Take care that there is sufficient water in the water trap. If a droplet eliminator has been fitted, this must be checked once a year and cleaned if necessary.



Drip tray with slope is not supported for the weight of persons. Do not walk or stay in the drip tray

This type of water trap is designed for negative pressure. Demount this type of water trap for careful cleaning.



### **S.5.5 Run-around heat exchanger**

A heat recovery system of this type consists of a heating coil in the supply air- flow and a cooling coil in the exhaust air- flow. After an extended running period (normally a few years) dust particles can accumulate on the surface of the coils. This can reduce the efficiency of the coils. Cleaning must be carried out with the utmost care to ensure that the coil fins are not damaged.

The piping system must be vented once a year as air in the system can significantly reduce the capacity of the coils.

#### **S.5.5.1 Pump and pressure expansion**

The service instructions issued by the pump manufacturer must be followed. The pressure expansion system must be checked once a year. If necessary, the pressure must be increased to the correct level.

#### **S.5.5.2 Condensate water drain**

Once a year clean the drip tray beneath the heat exchanger, as well as the drain and the water trap. Take care that there is sufficient water in the water trap. If a droplet eliminator has been fitted to the cooling coil, this must be checked once a year and cleaned if necessary.

### **S.5.6 Coils/batteries for heating and/or cooling**

After an extended running period (normally a few years) dust particles can accumulate on the surface of the coil. This can reduce the efficiency of the coil. Cleaning must be carried out with the utmost care to ensure that the coil fins are not damaged. The piping system must be vented once a year as air in the system can significantly reduce the capacity of the coil.

#### **S.5.6.1 Heating battery**

Check that the frost protection system is fully operational. A battery may burst due to frost if the frost protection system is not operational.



### S.5.6.2 Cooling battery

Once a year clean the drip tray beneath the cooling coil, as well as the drain and the water trap. Take care that there is sufficient water in the water trap. If a droplet eliminator has been fitted to the cooling coil, this must be checked once a year and cleaned if necessary.

Droplet eliminator must be checked once a year and cleaned if necessary.



### S.5.6.3 Electric heating battery

Check that the built-in safety thermostat with an automatic reset function and the overheat thermostat with manual re-setting are fully operational.

### S.5.7 Plug fans

Dust can accumulate on the fan impeller which can cause imbalance and vibrations. The fan impeller must therefore be checked once a year and cleaned, if necessary. Anti-vibration mounts and flexible connections should be checked at the same time. If the anti-vibration mounts are damaged in any way they must be replaced.



#### S.5.7.1 Motor

The motors are usually fitted with factory lubricated bearings which require no further lubrication. Larger motors can be fitted with greasing nipples and bearings which require regular lubrication. Lubricating these types of bearings must be carried out according to the manufacturer's instructions.

### S.5.8 Silencer


During operation dust particles can accumulate on the surface of the baffles. Silencers that are designed for dry and wet cleaning are fitted with baffles that can be extracted from the unit casing. Baffles designed for dry cleaning can be cleaned using a soft brush or they can be vacuum cleaned. Baffles designed for wet cleaning can be washed down using a soft brush and soapy water. The detergent used must be non-aggressive. After washing, the baffles must be wiped dry with a cloth. Remember to clean the inside surface of the unit casing before refitting the baffles.

### S.5.9 Outdoor air section

Dust and dirt can accumulate in this section. Large inspection doors give access for cleaning.

### S.5.10 Heat pump unit

Mandatory annual control must be done by certified technicians from a certified company. See further description in Annex 8 and 9.

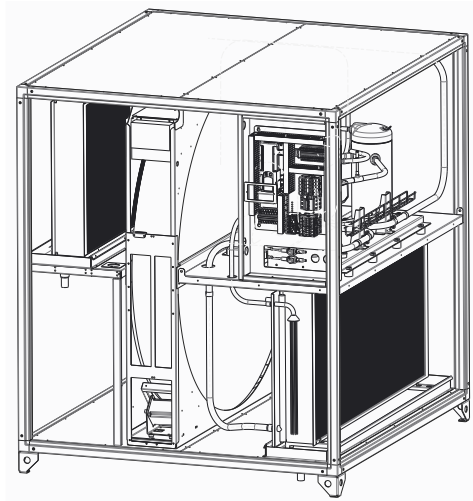

## T Instructions to enable adjustment and maintenance safely

### T.1 Protective measures and additional protective measures

Adjustment and maintenance must be done by skilled technicians – usually based on service contracts for some years or long-term ESCO contracts.

The units are provided with lockable doors to avoid unintended hazards and injury because of rotating parts in the unit. The potential sources of harm are the fans with fast rotating impellers. Hazards from the impellers are obvious during operation, but when power is cut-off, the impellers are still potential hazards due to after-run for at least 20 seconds. Notice that even cut-off the impellers are still potential hazards.

Other motor-driven parts are dampers with damper motors and rotary heat exchangers, but the movement is so slow that guard measures are not necessary. Just keep your hands away from places with risk of injury.

Use particulate respirator when filters are replaced.

#### T.1.1 Necessary protection measures prior to start-up

Ensure that all protection measures are installed correct before start-up.

##### T.1.1.1 Design of protection measures

Lockable doors can be unlocked only by use of tools.

##### T.1.1.2 Configuration of frequency converters

A frequency converter is mounted beside the fan in some units. If the configuration of frequency is carried out with the fan in operation for safety reasons a long cable must be installed between the frequency converter inside the unit and the control panel outside the unit.

#### T.1.2 Safe adjustment and maintenance

Before maintenance and repair, the unit must be turned off by rotating the main power switch to **OFF** position. **Note that lamps must be switched on during maintenance** (lamps are an accessory – only installed, if ordered).

Use cut-resistant gloves for protection against injury from sharp metal plate edges. Use CE-marked gloves for this purpose. Use helmet during maintenance work in the unit.



#### T.1.3 Personal protective equipment for maintenance staff – health and safety

Use the below-mentioned personal protective equipment for maintenance:



- Cut-resistant gloves for protection against injury from sharp metal plate edges. Use CE-marked gloves for this purpose.
- Helmet
- Particulate respirator – maintenance free including foam face-seal and adjustable pre-threaded headbands – for replacing filters.
- Permanent magnet motor. The shaft must be blocked during repairs and maintenance of the electric system (the motor generates electricity by rotation – for example that the wind and thermic drives the fan/motor).

## **U Information on airborne noise emissions exceeding 70 dB(A)**

Due to the design and construction of the units the (A) weighed sound pressure level from fans and other components do not exceed 70 dB (A) outside the units.


# Annex Geniox G0 Air handling unit

User Manual

GB

Document in original language | Version v7.2

Part number of this manual 211728

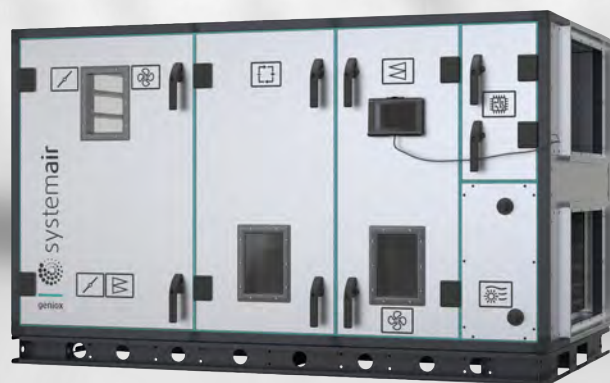

# Contents

Annex 1 Technical data – unique data for every unit (in separate cover).....	48
Annex 2 Assembly of base frame – height 118 mm for unit sizes 10 – 18 .....	48
Annex 3 Assembly of base frame – height 118 mm for unit sizes 20 – 27 .....	51
Annex 4 Assembly of base frame – height 218 mm for unit sizes 10 – 18 .....	55
Annex 5 Assembly of base frame – height 218 mm for unit sizes 20 – 27 .....	59
Annex 6 Installation of steel roof in the sizes 10 – 31 .....	63
Annex 7 Speed control for rotor and assembly of divided rotor .....	68
Annex 8 Reversible heat pump unit (in separate cover, if heat pump was delivered) .....	81
Annex 9 Menu for internal controller in the heat pump unit (in separate cover, if heat pump was delivered) .....	82
Annex 10 Connection of fan motor and set-up manual for frequency converter.....	82
Annex 11 Commissioning protocol (in separate cover) .....	82
Annex 12 Report with data from final functional test on the Systemair factory .....	82
Annex 13 Short description of main components in the control system.....	82
Annex 14 Wiring diagram (in separate cover) .....	82
Annex 15 Operator’s guide (How to use the Systemair control panel) (in separate cover) .....	82

## Annex 1 Technical data – unique data for every unit (in separate cover)

Printed on separate pages and delivered with every unit. Enclosed in separate cover.

## Annex 2 Assembly of base frame – height 118 mm for unit sizes 10 – 18



### Note:

Information about assembly is available in a 2-minutes video on YouTube.

<https://youtu.be/B3nX-x7KnrQ>

**A = Corner**



**B = Splice**



**C = Length profile**




**D = End profile (width of base frame)**



**D1 = Middle profile**




### 2.1 Base frame length 482 – 2564 [mm] Unit size 10 – 18

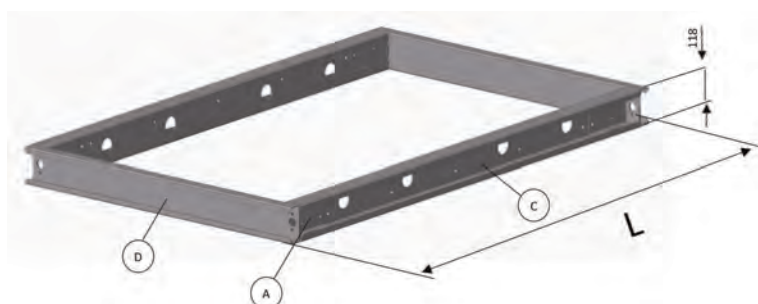

End profile type D (width of base frame)		
Unit size	Quantity	Length of endprofile (width of base frame) [mm]
Geniox G010	2	1070
Geniox G011	2	1170
Geniox G012	2	1270
Geniox G014	2	1470
Geniox G016	2	1670
Geniox G018	2	1870

Adjustable length of frame – L [mm]	Length profile type C		Corner A
	Quantity	Length of profile [mm]	Quantity
482 – 564	2	400	4
582 – 664	2	500	4
682 – 764	2	600	4
782 – 864	2	700	4
882 – 964	2	800	4
982 – 1064	2	900	4
1082 – 1164	2	1000	4
1182 – 1264	2	1100	4
1282 – 1364	2	1200	4
1382 – 1464	2	1300	4
1482 – 1564	2	1400	4
1582 – 1664	2	1500	4
1682 – 1764	2	1600	4
1782 – 1864	2	1700	4
1882 – 1964	2	1800	4
1982 – 2064	2	1900	4
2082 – 2164	2	2000	4
2182 – 2264	2	2100	4
2282 – 2364	2	2200	4
2382 – 2464	2	2300	4
2482 – 2564	2	2400	4


## 2.2 Base frame length 2582 – 4964 [mm] Unit size 10 – 18

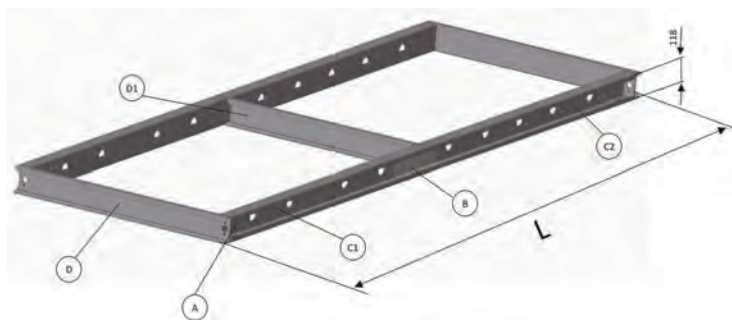

End profile type D (width of base frame)			Middle profile type D1	
Unit size	Quantity	width of base frame [mm]	Quantity	Length [mm]
Geniox G010	2	1070	1	950
Geniox G011	2	1170	1	1050
Geniox G012	2	1270	1	1150
Geniox G014	2	1470	1	1350
Geniox G016	2	1670	1	1550
Geniox G018	2	1870	1	1750

	Length profile C1		Length profile C2		Corner A	Splice B
Adjustable length of frame – L [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Quantity	Quantity
2582-2664	2	1200	2	1300	4	2
2682-2764	2	1300	2	1300	4	2
2782-2864	2	1300	2	1400	4	2
2882-2964	2	1400	2	1400	4	2
2982-3064	2	1400	2	1500	4	2
3082-3164	2	1500	2	1500	4	2
3182-3264	2	1500	2	1600	4	2
3282-3364	2	1600	2	1600	4	2
3382-3464	2	1600	2	1700	4	2
3482-3564	2	1700	2	1700	4	2
3582-3664	2	1700	2	1800	4	2
3682-3764	2	1800	2	1800	4	2
3782-3864	2	1800	2	1900	4	2
3882-3964	2	1900	2	1900	4	2
3982-4064	2	1900	2	2000	4	2
4082-4164	2	2000	2	2000	4	2
4182-4264	2	2000	2	2100	4	2
4282-4364	2	2100	2	2100	4	2
4382-4464	2	2100	2	2200	4	2
4482-4564	2	2200	2	2200	4	2
4582-4664	2	2200	2	2300	4	2
4682-4764	2	2300	2	2300	4	2
4782-4864	2	2300	2	2400	4	2
4882-4964	2	2100	2	2100	4	2

## 2.3 Base frame length 4982 – 6164 [mm] Unit size 10 – 18

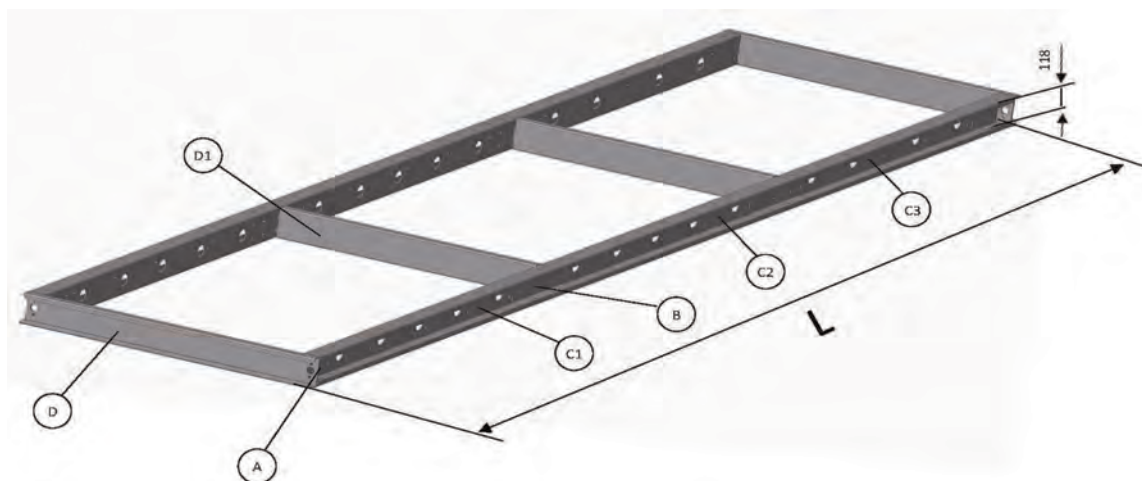

End profile type D (width of base frame)			Middle profile type D1	
Unit size	Quantity	width of base frame [mm]	Quantity	Length [mm]
Geniox G010	2	1070	2	950
Geniox G011	2	1170	2	1050
Geniox G012	2	1270	2	1150
Geniox G014	2	1470	2	1350
Geniox G016	2	1670	2	1550
Geniox G018	2	1870	2	1750

	Length profile C1		Length profile C2		Length profile C3		A	B
Adjustable length of frame – L [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Qty	Qty
4982-5064	2	1600	2	1600	2	1700	4	4
5082-5164	2	1600	2	1700	2	1700	4	4
5182-5264	2	1700	2	1700	2	1700	4	4
5282-5364	2	1700	2	1700	2	1800	4	4
5382-5464	2	1700	2	1800	2	1800	4	4
5482-5564	2	1800	2	1800	2	1800	4	4
5582-5664	2	1800	2	1800	2	1900	4	4
5682-5764	2	1800	2	1900	2	1900	4	4
5782-5864	2	1900	2	1900	2	1900	4	4
5882-5964	2	1900	2	1900	2	2000	4	4
5982-6064	2	1900	2	2000	2	2000	4	4
6082-6164	2	2000	2	2000	2	2000	4	4







## Annex 3 Assembly of base frame – height 118 mm for unit sizes 20 – 27




### Note:

Information about assembly is available in a 2-minutes video on YouTube.

<https://youtu.be/N-oaYpwsAlo>

<b>A = Corner</b> 	<b>B = Splice</b> 	<b>C = Spacer</b> 
<b>C = Length profile</b> 		
<b>D = End profile (width of base frame)</b> 		
<b>D1 = Middle profile</b> 		

### 3.1 Base frame length 482– 2564 [mm] Unit size 20 – 27

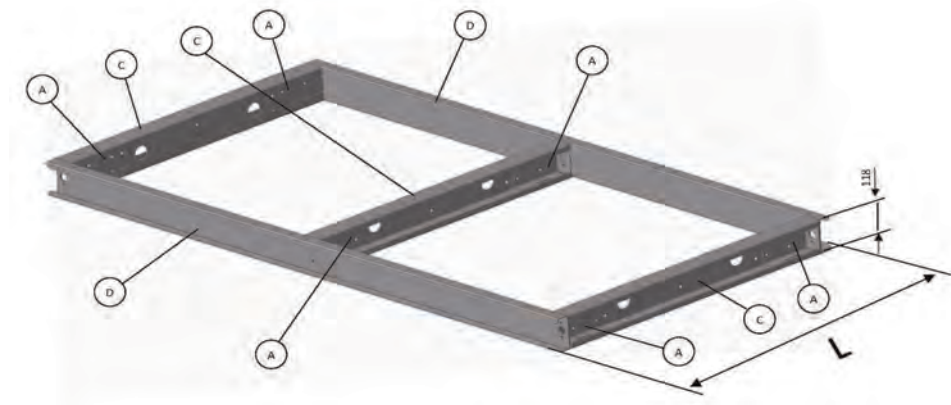


End profile type D (width of base frame)		
Unit size	Quantity	Length [mm]
Geniox G020	2	2070
Geniox G022	2	2270
Geniox G024	2	2470
Geniox G027	2	2770



	Length profile type C		Corner A
Adjustable length of frame – L [mm]	Quantity	Length of profile [mm]	Quantity
482-564	3	400	6
582-664	3	500	6
682-764	3	600	6
782-864	3	700	6
882-964	3	800	6
982-1064	3	900	6
1082-1164	3	1000	6
1182-1264	3	1100	6
1282-1364	3	1200	6
1382-1464	3	1300	6
1482-1564	3	14000	6
1582-1664	3	1500	6
1682-1764	3	1600	6
1782-1864	3	1700	6
1882-1964	3	1800	6
1982-2064	3	1900	6
2082-2164	3	2000	6
2182-2264	3	2100	6
2282-2364	3	2200	6
2382-2464	3	2300	6
2482-2564	3	2400	6

### 3.2 Base frame length 2582 – 4964 [mm] Unit size 20 – 27

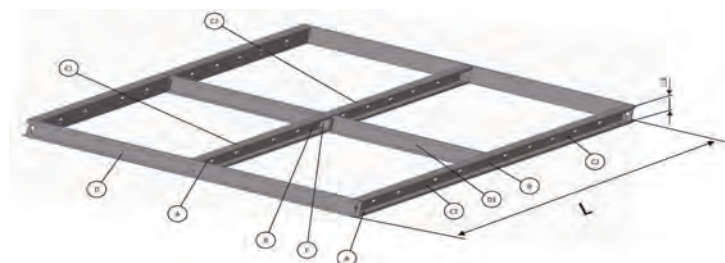


End profile type D (width of base frame)			Middle profile type D1		Spacer F
Unit size	Quantity	Length [mm]	Quantity	Length [mm]	Quantity
Geniox GO20	2	2070	2	941	1
Geniox GO22	2	2270	2	1041	1
Geniox GO24	2	2470	2	1141	1
Geniox GO27	2	2770	2	1291	1

	Length profile type C1		Length profile type C2		Corner A	Splice B
Adjustable length of frame – L [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Quantity	Quantity
2582-2664	3	1200	3	1300	6	3
2682-2764	3	1300	3	1300	6	3
2782-2864	3	1300	3	1400	6	3
2882-2964	3	1400	3	1400	6	3
2982-3064	3	1400	3	1500	6	3
3082-3164	3	1500	3	1500	6	3

	Length profile type C1		Length profile type C2		Corner A	Splice B
Adjustable length of frame – L [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Quantity	Quantity
3182-3264	3	1500	3	1600	6	3
3282-3364	3	1600	3	1600	6	3
3382-3464	3	1600	3	1700	6	3
3482-3564	3	1700	3	1700	6	3
3582-3664	3	1700	3	1800	6	3
3682-3764	3	1800	3	1800	6	3
3782-3864	3	1800	3	1900	6	3
3882-3964	3	1900	3	1900	6	3
3982-4064	3	1900	3	2000	6	3
4082-4164	3	2000	3	2000	6	3
4182-4264	3	2000	3	2100	6	3
4282-4364	3	2100	3	2100	6	3
4382-4464	3	2100	3	2200	6	3
4482-4564	3	2200	3	2200	6	3
4582-4664	3	2200	3	2300	6	3
4682-4764	3	2300	3	2300	6	3
4782-4864	3	2300	3	2400	6	3
4882-4964	3	2400	3	2400	6	3

### 3.3 Base frame length 4982 – 6164 [mm] Unit size 20 – 27

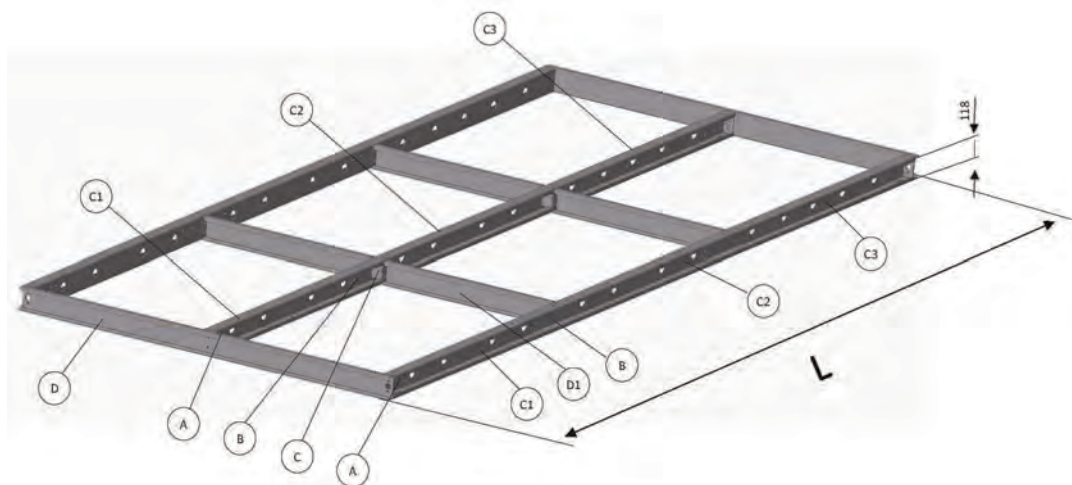

End profile type D (width of base frame)			Middle profile type D1		Spacer F
Unit size	Quantity	Length [mm]	Quantity	Length [mm]	Quantity
Geniox G020	2	2070	4	941	2
Geniox G022	2	2270	4	1041	2
Geniox G024	2	2470	4	1141	2
Geniox G027	2	2770	4	1291	2

	Length profile type C1		Length profile type C2		Length profile type C3		A	B
Adjustable length of frame – L [mm]	Qty	Length [mm]	Qty	Length [mm]	Qty	Length [mm]	Qty	Qty
4982-5064	3	1600	3	1600	3	1700	6	6
5082-5164	3	1600	3	1700	3	1700	6	6
5182-5264	3	1700	3	1700	3	1700	6	6
5282-5364	3	1700	3	1700	3	1800	6	6
5382-5464	3	1700	3	1800	3	1800	6	6
5482-5564	3	1800	3	1800	3	1800	6	6
5582-5664	3	1800	3	1800	3	1900	6	6
5682-5764	3	1800	3	1900	3	1900	6	6
5782-5864	3	1900	3	1900	3	1900	6	6
5882-5964	3	1900	3	1900	3	2000	6	6
5982-6064	3	1900	3	2000	3	2000	6	6
6082-6164	3	2000	3	2000	3	2000	6	6

## Annex 4 Assembly of base frame – height 218 mm for unit sizes 10 – 18



### Note:

Information about assembly is available in a 2-minutes video on YouTube.

<https://youtu.be/B3nX-x7KnrQ>

A = Corner



B = Splice



C = Length profile




**D** = End profile (width of base frame)



**D1** = Middle profile



#### 4.1 Base frame length 482- 2564 [mm] Unit size 10 - 18

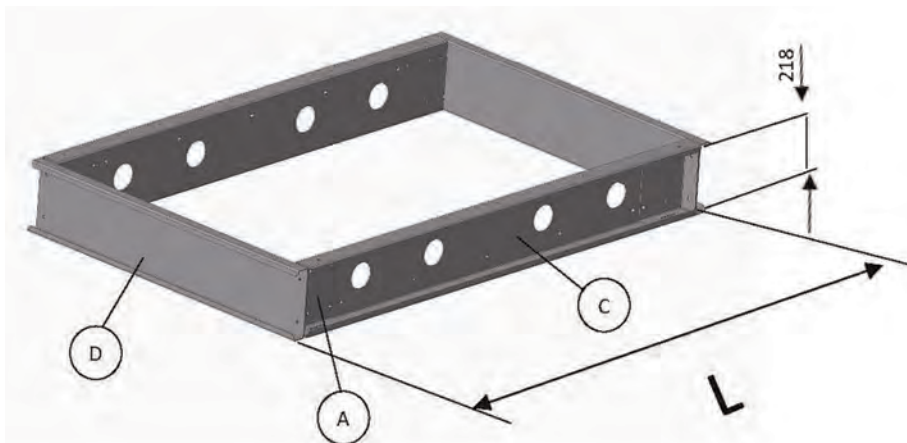


End profile type D (width of base frame)		
Unit size	Quantity	Length of endprofile (width of base frame) [mm]
Geniox G010	2	1070
Geniox G011	2	1170
Geniox G012	2	1270
Geniox G014	2	1470
Geniox G016	2	1670
Geniox G018	2	1870

Adjustable length of frame – L [mm]	Length profile type C		Corner A
	Quantity	Length of profile [mm]	Quantity
482 – 564	2	400	4
582 – 664	2	500	4
682 – 764	2	600	4
782 – 864	2	700	4
882 – 964	2	800	4
982 – 1064	2	900	4
1082 – 1164	2	1000	4
1182 – 1264	2	1100	4

	Length profile type C		Corner A
Adjustable length of frame – L [mm]	Quantity	Length of profile [mm]	Quantity
1282 – 1364	2	1200	4
1382 – 1464	2	1300	4
1482 – 1564	2	1400	4
1582 – 1664	2	1500	4
1682 – 1764	2	1600	4
1782 – 1864	2	1700	4
1882 – 1964	2	1800	4
1982 – 2064	2	1900	4
2082 – 2164	2	2000	4
2182 – 2264	2	2100	4
2282 – 2364	2	2200	4
2382 – 2464	2	2300	4
2482 – 2564	2	2400	4

## 4.2 Base frame length 2582 – 4964 [mm] Unit size 10 – 18

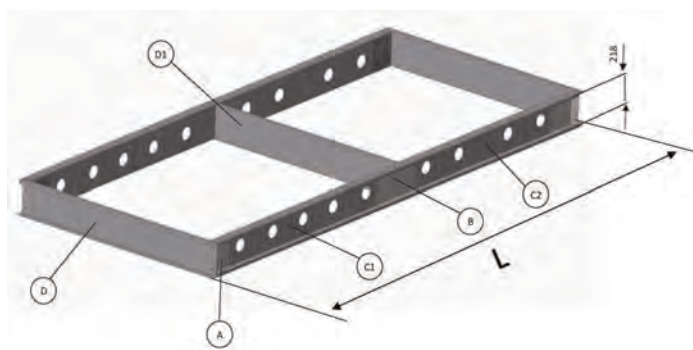


End profile type D (width of base frame)			Middle profile type D1	
Unit size	Quantity	width of base frame [mm]	Quantity	Length [mm]
Geniox G010	2	1070	1	950
Geniox G011	2	1170	1	1050
Geniox G012	2	1270	1	1150
Geniox G014	2	1470	1	1350
Geniox G016	2	1670	1	1550
Geniox G018	2	1870	1	1750

	Length profile C1		Length profile C2		Corner A	Splice B
Adjustable length of frame – L [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Quantity	Quantity
2582-2664	2	1200	2	1300	4	2
2682-2764	2	1300	2	1300	4	2
2782-2864	2	1300	2	1400	4	2
2882-2964	2	1400	2	1400	4	2
2982-3064	2	1400	2	1500	4	2
3082-3164	2	1500	2	1500	4	2
3182-3264	2	1500	2	1600	4	2
3282-3364	2	1600	2	1600	4	2

	Length profile C1		Length profile C2		Corner A	Splice B
Adjustable length of frame – L [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Quantity	Quantity
3382-3464	2	1600	2	1700	4	2
3482-3564	2	1700	2	1700	4	2
3582-3664	2	1700	2	1800	4	2
3682-3764	2	1800	2	1800	4	2
3782-3864	2	1800	2	1900	4	2
3882-3964	2	1900	2	1900	4	2
3982-4064	2	1900	2	2000	4	2
4082-4164	2	2000	2	2000	4	2
4182-4264	2	2000	2	2100	4	2
4282-4364	2	2100	2	2100	4	2
4382-4464	2	2100	2	2200	4	2
4482-4564	2	2200	2	2200	4	2
4582-4664	2	2200	2	2300	4	2
4682-4764	2	2300	2	2300	4	2
4782-4864	2	2300	2	2400	4	2
4882-4964	2	2400	2	2400	4	2

#### 4.3 Base frame length 4982 – 6164 [mm] Unit size 10 – 18

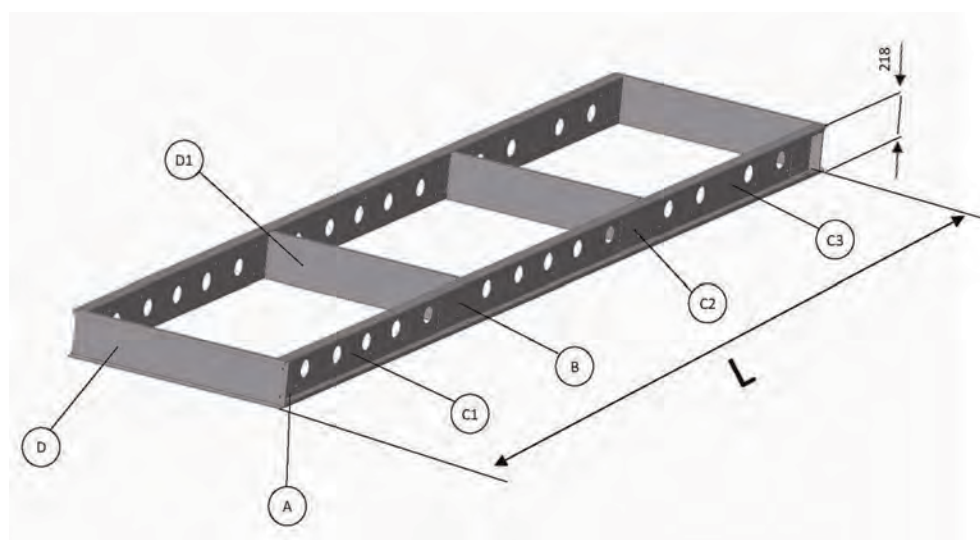

End profile type D (width of base frame)			Middle profile type D1	
Unit size	Quantity	width of base frame [mm]	Quantity	Length [mm]
Geniox G010	2	1070	2	950
Geniox G011	2	1170	2	1050
Geniox G012	2	1270	2	1150
Geniox G014	2	1470	2	1350
Geniox G016	2	1670	2	1550
Geniox G018	2	1870	2	1750

	Length profile C1		Length profile C2		Length profile C3		A	B
Adjustable length of frame – L [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Quantity	Length [mm]	Qty	Qty
4982-5064	2	1600	2	1600	2	1700	4	4
5082-5164	2	1600	2	1700	2	1700	4	4
5182-5264	2	1700	2	1700	2	1700	4	4
5282-5364	2	1700	2	1700	2	1800	4	4
5382-5464	2	1700	2	1800	2	1800	4	4
5482-5564	2	1800	2	1800	2	1800	4	4
5582-5664	2	1800	2	1800	2	1900	4	4
5682-5764	2	1800	2	1900	2	1900	4	4
5782-5864	2	1900	2	1900	2	1900	4	4
5882-5964	2	1900	2	1900	2	2000	4	4
5982-6064	2	1900	2	2000	2	2000	4	4
6082-6164	2	2000	2	2000	2	2000	4	4







## Annex 5 Assembly of base frame – height 218 mm for unit sizes 20 – 27




### Note:

Information about assembly is available in a 2-minutes video on YouTube.

<https://youtu.be/N-oaYpwsAlo>

<b>A = Corner</b> 	<b>B = Splice</b> 	<b>F = Spacer</b> 
<b>C = Length profile</b> 		
<b>D = End profile (width of base frame)</b> 		
<b>D1 = Middle profile</b> 		

## 5.1 Base frame length 482- 2564 [mm] Unit size 20 – 27

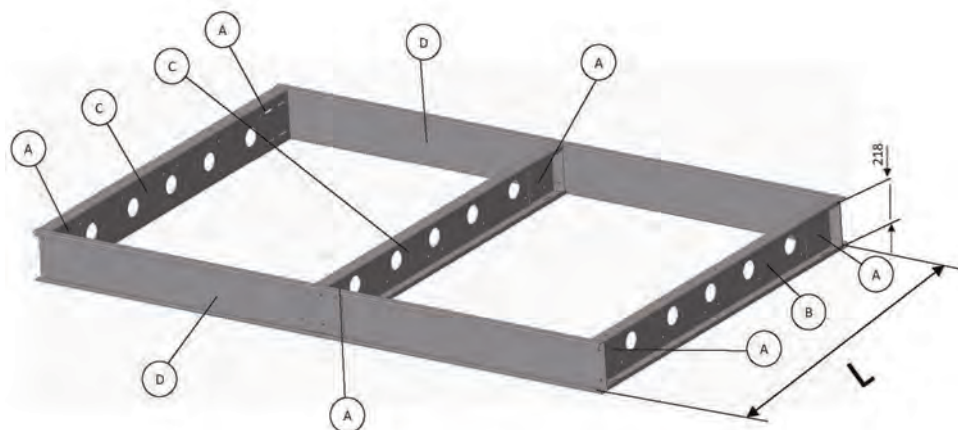


End profile type D (width of base frame)		
Unit size	Quantity	Length [mm]
Geniox G020	2	2070
Geniox G022	2	2270
Geniox G024	2	2470
Geniox G027	2	2770

Adjustable length of frame – L [mm]	Length profile type C		Corner A
	Quantity	Length of profile [mm]	Quantity
482-564	3	400	6
582-664	3	500	6
682-764	3	600	6
782-864	3	700	6
882-964	3	800	6
982-1064	3	900	6
1082-1164	3	1000	6
1182-1264	3	1100	6
1282-1364	3	1200	6
1382-1464	3	1300	6
1482-1564	3	1400	6
1582-1664	3	1500	6
1682-1764	3	1600	6
1782-1864	3	1700	6
1882-1964	3	1800	6
1982-2064	3	1900	6
2082-2164	3	2000	6
2182-2264	3	2100	6
2282-2364	3	2200	6
2382-2464	3	2300	6
2482-2564	3	2400	6




## 5.2 Base frame length 2582 – 4964 [mm] Unit size 20 – 27

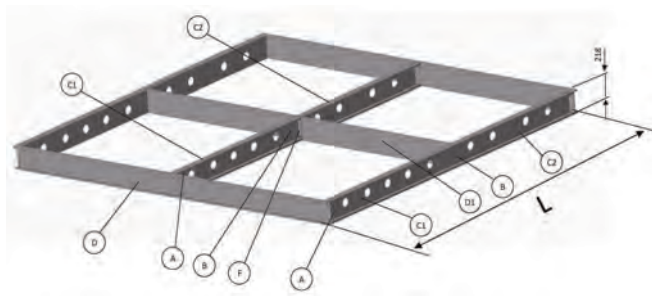

End profile type D (width of base frame)			Middle profile type D1		Spacer F
Unit size	Quantity	Length [mm]	Quantity	Length [mm]	Quantity
Geniox GO20	2	2070	2	941	1
Geniox GO22	2	2270	2	1041	1
Geniox GO24	2	2470	2	1141	1
Geniox GO27	2	2770	2	1291	1

Adjustable length of frame – L [mm]	Length profile type C1		Length profile type C2		Corner A	Splice B
	Quantity	Length [mm]	Quantity	Length [mm]	Quantity	Quantity
2582-2664	3	1200	3	1300	6	3
2682-2764	3	1300	3	1300	6	3
2782-2864	3	1300	3	1400	6	3
2882-2964	3	1400	3	1400	6	3
2982-3064	3	1400	3	1500	6	3
3082-3164	3	1500	3	1500	6	3
3182-3264	3	1500	3	1600	6	3
3282-3364	3	1600	3	1600	6	3
3382-3464	3	1600	3	1700	6	3
3482-3564	3	1700	3	1700	6	3
3582-3664	3	1700	3	1800	6	3
3682-3764	3	1800	3	1800	6	3
3782-3864	3	1800	3	1900	6	3
3882-3964	3	1900	3	1900	6	3
3982-4064	3	1900	3	2000	6	3
4082-4164	3	2000	3	2000	6	3
4182-4264	3	2000	3	2100	6	3
4282-4364	3	2100	3	2100	6	3
4382-4464	3	2100	3	2200	6	3
4482-4564	3	2200	3	2200	6	3
4582-4664	3	2200	3	2300	6	3
4682-4764	3	2300	3	2300	6	3
4782-4864	3	2300	3	2400	6	3
4882-4964	3	2400	3	2400	6	3

### 5.3 Base frame length 4982 – 6164 [mm] Unit size 20 – 27

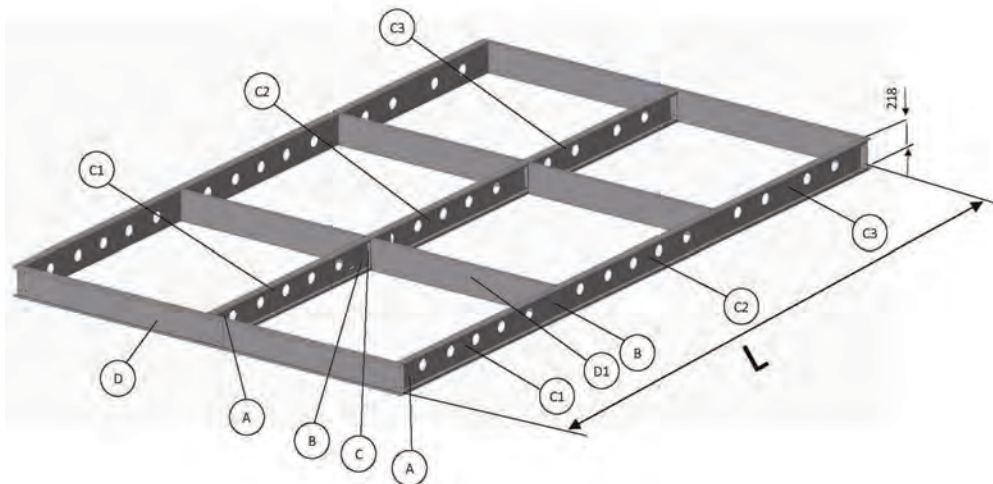

End profile type D (width of base frame)			Middle profile type D1		Spacer F
Unit size	Quantity	Length [mm]	Quantity	Length [mm]	Quantity
Geniox G020	2	2070	4	941	2
Geniox G022	2	2270	4	1041	2
Geniox G024	2	2470	4	1141	2
Geniox G027	2	2770	4	1291	2

Adjustable length of frame – L [mm]	Length profile type C1		Length profile type C2		Length profile type C3		A	B
	Qty	Length [mm]	Qty	Length [mm]	Qty	Length [mm]	Qty	Qty
4982-5064	3	1600	3	1600	3	1700	6	6
5082-5164	3	1600	3	1700	3	1700	6	6
5182-5264	3	1700	3	1700	3	1700	6	6
5282-5364	3	1700	3	1700	3	1800	6	6
5382-5464	3	1700	3	1800	3	1800	6	6
5482-5564	3	1800	3	1800	3	1800	6	6
5582-5664	3	1800	3	1800	3	1900	6	6
5682-5764	3	1800	3	1900	3	1900	6	6
5782-5864	3	1900	3	1900	3	1900	6	6
5882-5964	3	1900	3	1900	3	2000	6	6
5982-6064	3	1900	3	2000	3	2000	6	6
6082-6164	3	2000	3	2000	3	2000	6	6

## Annex 6 Installation of steel roof in the sizes 10 – 31


 




### 6.1 Warnings

 
 


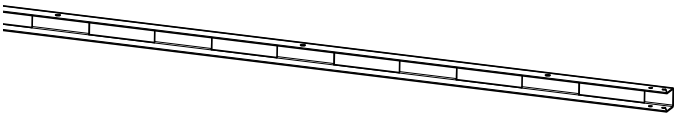 
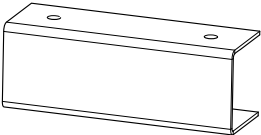
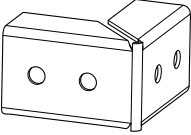


#### Warning

- Beware of sharp edges during the installation. Use protective gloves.
- This product must only be operated by a person which has suitable knowledge or education within this field or carried out with the supervision of a suitably qualified person.

#### 6.1.1 Components

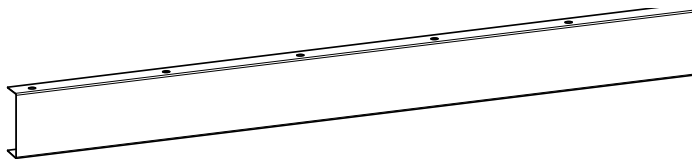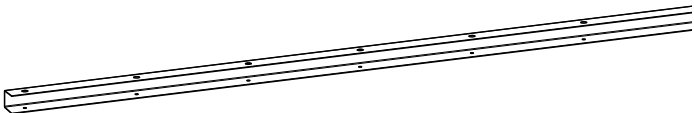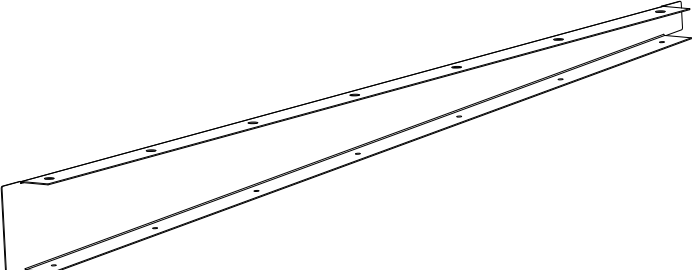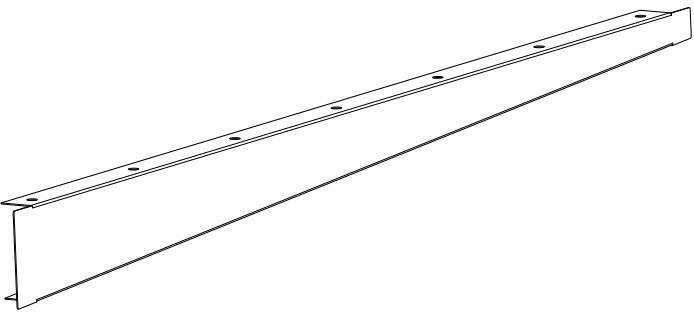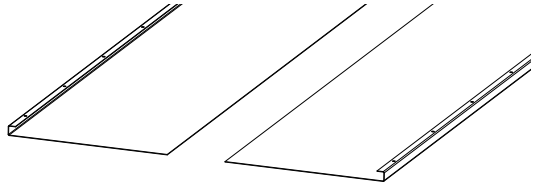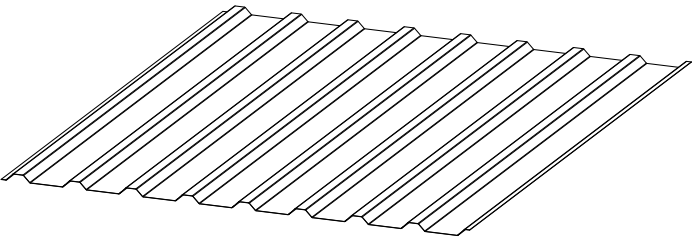Part	Position	Description
	1	Front rail
	2	Back rail
	3	Left side rail with a slope
	4	Right side rail with a slope
	5	Left and right side overhang profiles
	6	Trapezoidal roof profile sheets

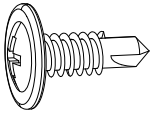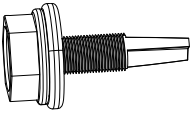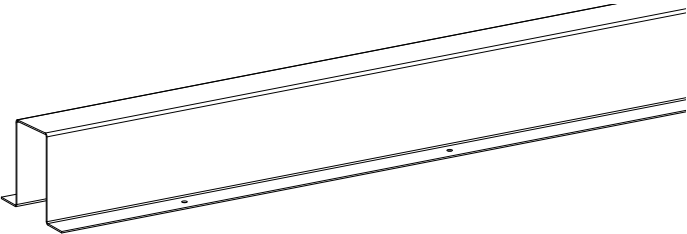Part	Position	Description
	7	Self drilling screw
	8	Self drilling screw with sealing washer
	9	Middle rail (for units size 20 and higher)
	10	Roof profile front
	11	Roof profile back
	12	Roof profile connector
	13	Roof profile corner

### 6.1.2 Mounting rails and roof sheets

#### Important


- Place all screws in available screw holes. Stress on the roof during stormy weather is extremely high and a big amount of screws is needed to hold the roof safely.




#### Note:

- Roof profile sheets (pos 6) and roof overhang profiles (pos 5) do not have holes for screws. Calculate right positions before tightening screws.


1. Mount front rail (pos 1) on the front side with inspection doors and back rail (pos 2) on the back of the unit. Use self drilling screws (pos 7). The slope of the roof is 3%.

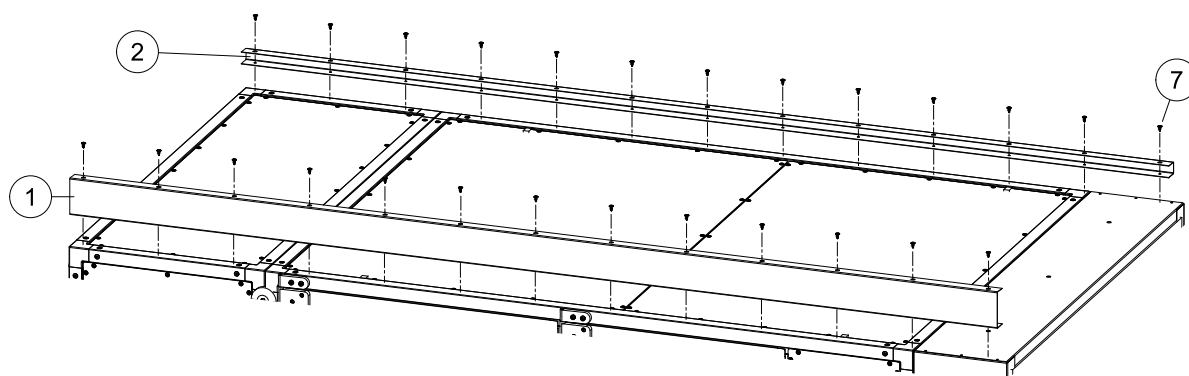


2. Some units can be delivered with rails split into several parts. In that case join these parts to match the length of the unit and secure them with screws as shown before.

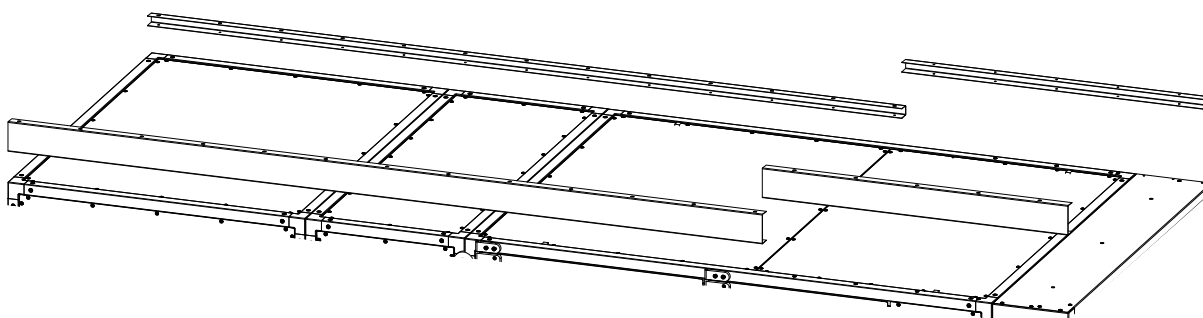


3. Mount left (pos 3) and right (pos 4) rails with the slope at each side of the unit. Use self drilling screws (pos 7).

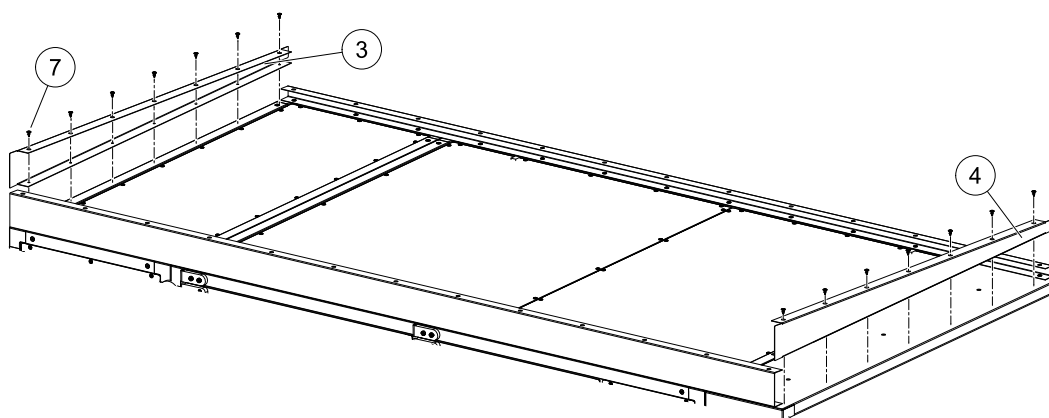


4. Mount the middle rail (pos 9) longitudinally at the centre-line of the unit with self drilling screws (pos 7). Middle rail is delivered only for units size 16 and higher.

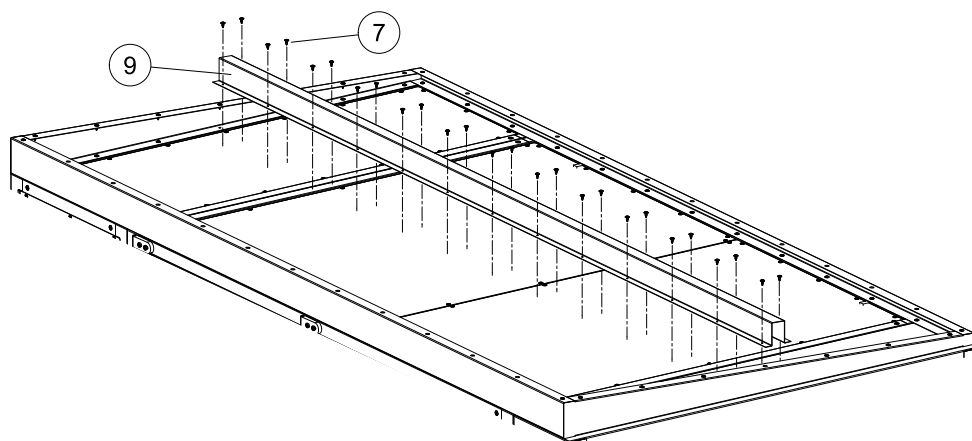


5. Place all trapezoidal roof sheets (pos 6) on rails, mount overhang plates (pos 5) under trapezoidal roof sheets at each end of the unit. Sheets have to be placed on top of each other by overlapping two crests (pos A). Last two sheets may overlap by more than two crests to match the length of the roof (pos B).

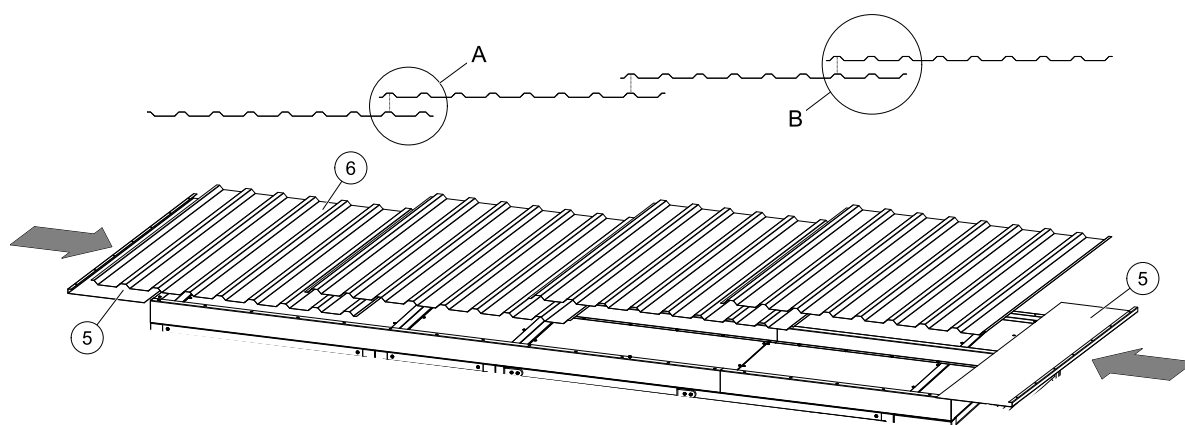


6. Position the roof so that the roof overhang profiles would be sticking out roughly 200 mm at sides and 100 mm at the front and back as show in the illustration below.

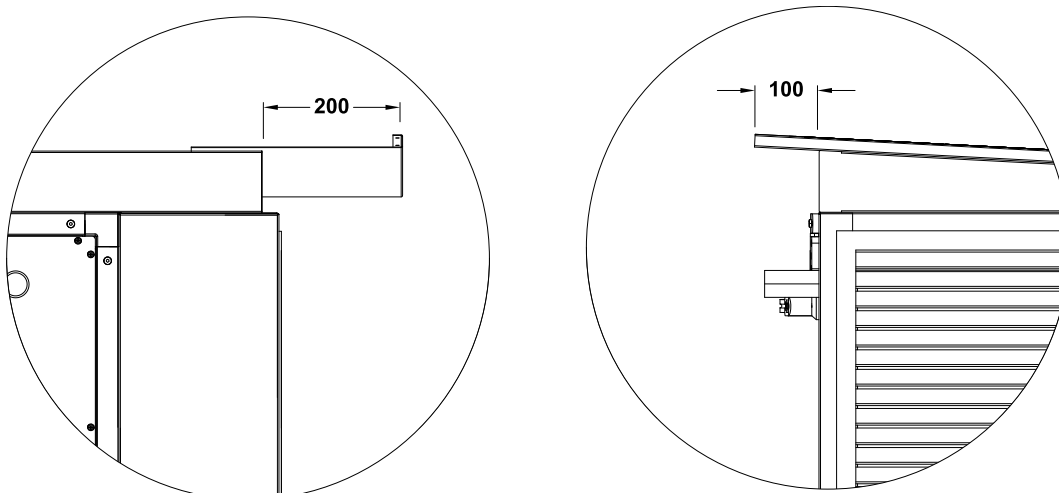

7. Once the roof is positioned correctly, secure roof overhang profiles (pos 5) with self drilling screws (pos 7).

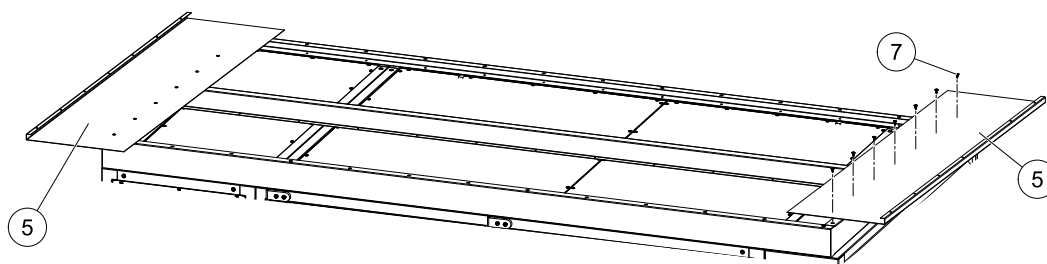


8. Then mount one of the trapezoidal roof sheets (pos 6) on the roof overhang profile (pos 5) with self drilling screws with sealing washer (pos 8). Mount the rest of trapezoidal roof sheets in the same way as the first. Last roof sheet must be mounted on the second roof overhang profile (pos 5) using self drilling screws with sealing washer (pos 8).

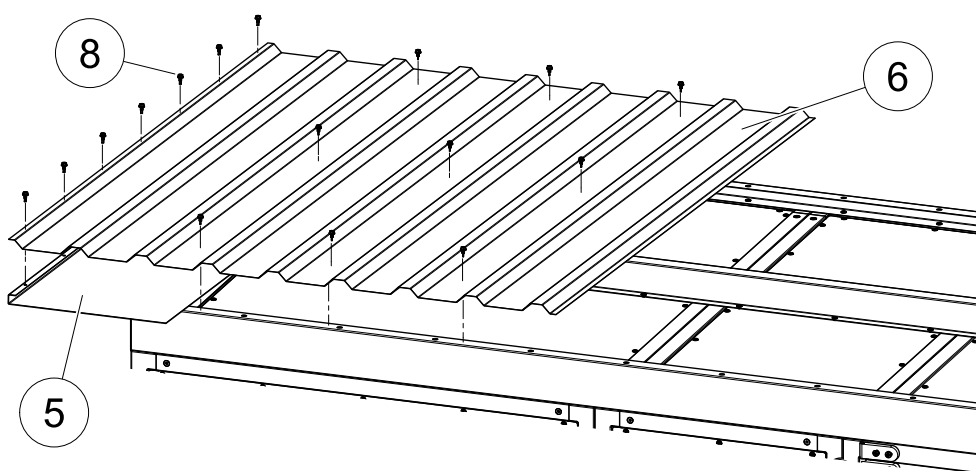


### 6.1.3 Mounting roof side profiles and corners

1. Mount front (pos 10) and back (pos 11) roof profiles to cover holes on the trapezoidal roof sheets. Use self drilling screws with sealing washer (pos 8). Roof profiles can be delivered split into several parts. In that case join these parts together with roof profile connectors (pos 12). Use self drilling screws (pos 7).

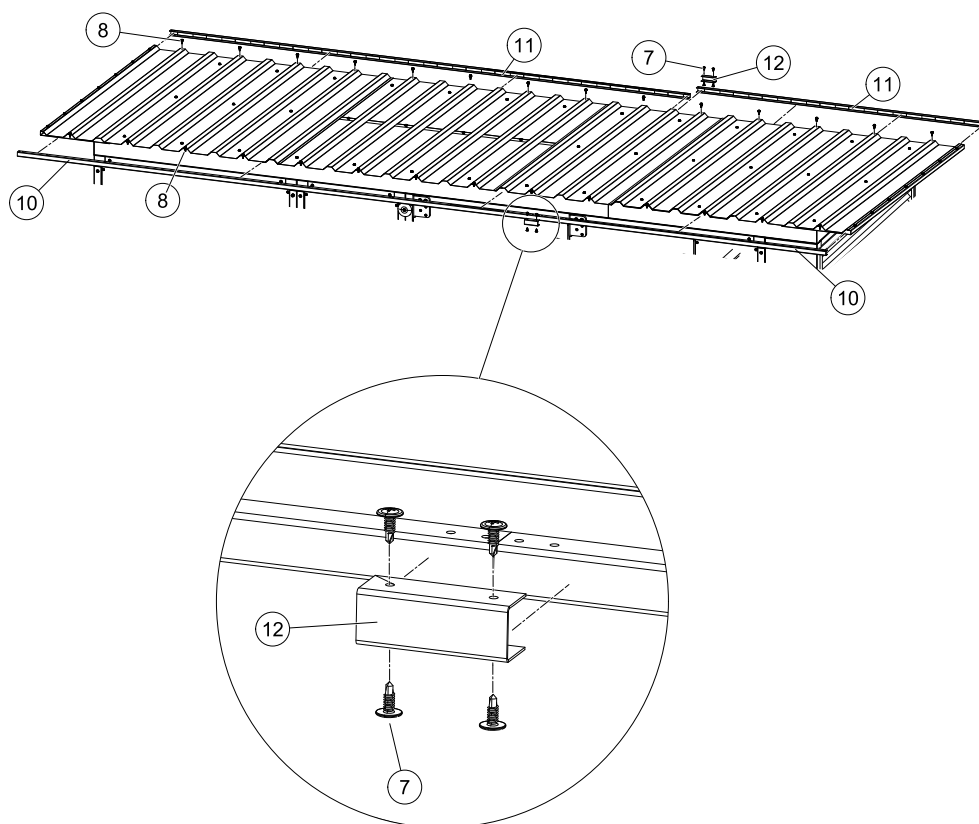

2. Mount 4 pieces of roof profile corners (pos 13) at each corner with self drilling screws (pos 7).

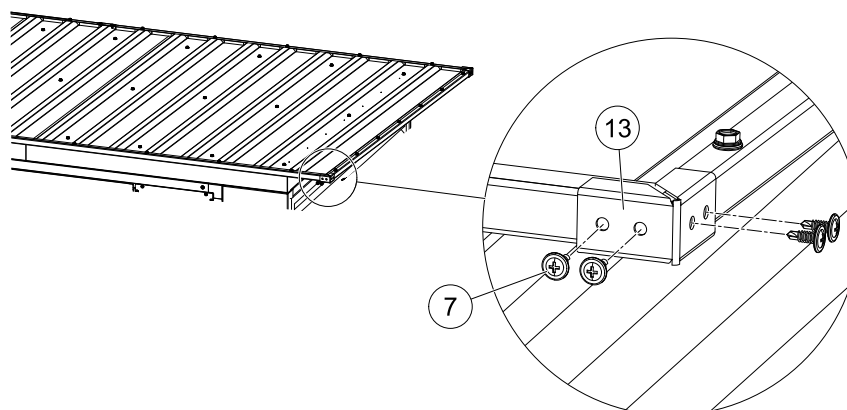

3. Finish installation of steel roof by sealing all sheet and rail joints with sealant to prevent rainwater from passing into the unit.

## Annex 7 Speed control for rotor and assembly of divided rotor

### 7.1 Speed control type NOVA drive 370 delivered after February 2021

The cabinet with the speed control system for the rotor is installed behind the inspection door in the rotor section.



The cabinet contains the speed controller with all components, terminal blocks, LED displaying the operation mode, the dual position DIP switches with 5 sliding levers for programming the rotor motor signal.

Through the different combinations of the 5 sliding levers of these dual position DIP switches, the correct signal is available for the 3 different motors used for the 12 sizes of air handling units. The sliding levers are set and the function is checked at the factory. The positions of the levers appear from the tables below.

### 7.1.1 Selection of correct signal via the 5 DIP switch levers in NOVA drive 370

Position	Function	Code
Up – direction ON	Active = ON	1
Down – direction numbers 1, 2, 3, 4, 5	Deactivated = OFF	0

The factory sets the positions of the 3 DIP switch levers called 1, 2, 3 for the maximum about 14 revolutions per minute for standard temperature exchangers. The position of each of the 3 DIP switches called 1, 2, 3 is shown below.

Geniox G0	Diameter of pulley in mm	Position for DIP switches called 1, 2, 3	Motor
10	70	000	90TYD-S214-M 2.8 Nm
11	70	000	
12	77	000	
14	70	100	
16	77	100	
18	95	100	
20	106	010	120TYD-S214-M 5.5 Nm
22	118	010	
24	118	010	
27	118	110	
29	106	001	
31	112	001	
DV 190	132	011	120TYD-S214-L 8 Nm
DV 240	150	011	

The factory sets the positions of the 3 DIP switch levers called 1, 2, 3 for the maximum about 20 revolutions per minute for sorption-hybrid exchangers as well as for sorption exchangers. The position of each of the 3 DIP switches called 1, 2, 3 is shown below.

Geniox G0	Diameter of pulley in mm	Position for DIP switches called 1, 2, 3	Motor
10	77	100	90TYD-S214-M 2.8 Nm
11	77	100	
12	95	100	
14	95	100	
16	118	010	120TYD-S214-M 5.5 Nm
18	112	110	
20	118	110	
22	118	001	
24	132	001	
27	140	001	
29	150	001	120TYD-S214-L 8 Nm
31	160	011	
DV 190	180	011	
DV 240	180	011	

**For ordinary operation:**

- DIP switch 4 must be set to – OFF.  
and
- DIP switch 5 must be set to – OFF.

**7.1.1.1 Indication of operation mode via red, yellow and green LED on NOVA drive 370 as well as test of drive motor**

The LED is in the cover of the cabinet.

LED indication	Value
No indication	Power off
Green	Ordinary operation
Green – flashes slowly (500 ms on, 500 ms off)	Ready for operation
Green – flashes fast (200 ms on, 200 ms off)	Has been stopped due to fault and try to start again on its own
Red – green – red – green (200 ms each colour)	Magnet on the rotor has activated rotor guard
Yellow flashes –(400 ms on, 400 ms off, 2.000 ms pause)	Warning. Number of flashes indicates the below code that explains the reason for the warning
Red flashes –(400 ms on, 400 ms off, 2.000 ms pause)	Fault. Number of flashes indicates the below code that explains the reason for the fault

Number of yellow or red flashes in series	Value
1	Output current limit
2	Over voltage
3	Under voltage
4	Hardware error (gate kill)
5	Modbus communication failure (watch dog)
6	Overheating stop
7	Internal communication failure
8	Configuration error

Test of motor by checking the resistance in all 3 windings.

Motor sizes	Ohm
90TYD-S214-M	40Ω
120TYD-S214-M	18Ω
120TYD-S214-L	10Ω

**7.1.1.2 Restart, test, change of rotation direction, brake of rotation****Restart of rotor**

Switch off power and wait some seconds before switching on power again

**Automatic test**

Activate DIP switch 5 for more than 10 seconds to start the automatic test. During the automatic test, the motor will accelerate to maximum speed and the motor will run at maximum speed for 10 seconds. After this the motor will ramp down and stop for another 10 seconds. The process is repeated again and again, until the DIP switch is set back to position – OFF.

**Change of rotation direction to enable perfect function of purge section**

With purge section in the air handling unit, the rotation direction of the rotary heat exchanger is important. The direction of the rotor must move the area of the rotor with polluted extract air to the area of the air handling unit with clean outdoor air to enable clean outdoor air to pass through the rotor via the purge section to the exhaust air. Clean

outdoor air replaces the polluted extract air inside the rotor before the main flow of outdoor air passes through the rotor as supply air to the rooms.

The rotation direction is tested at the factory for every air handling units that is delivered with installed drive controller and drive motor.

In case of replacement at the building site, the installer can change drive direction of the motor by installing motor cables in other terminals at the drive controller, because all drive motors from Systemair are 3-phase motors.

#### **Brake of rotation**

If DIP switch 4 is set to — ON, the brake function is activated. When the motor is stopped and the brake function is activated, the motor is blocked by shortening the windings.



#### **Note:**


This brake function is only to be activated a few minutes for cleaning or maintenance.

#### **7.1.1.2.1 Description of purge function for the rotary heat exchanger**

When the rotor has been stopped for 30 minutes the drive motor will be started to run at 10 RPM for 12 seconds. After this time the rotor will be stopped again. The sequence is repeated after 30 minutes of inactivity.

If the rotor is stopped for a long period of time and still with air flow, the half of the rotor in the extract air flow will be more polluted and hereby more heavy than the half of the rotor in the outdoor air flow with the consequence that the drive motor via the drive belt will not be able to drive the rotor.

### 7.1.1.2.2 The board in NOVA drive 370 for control of revolutions.

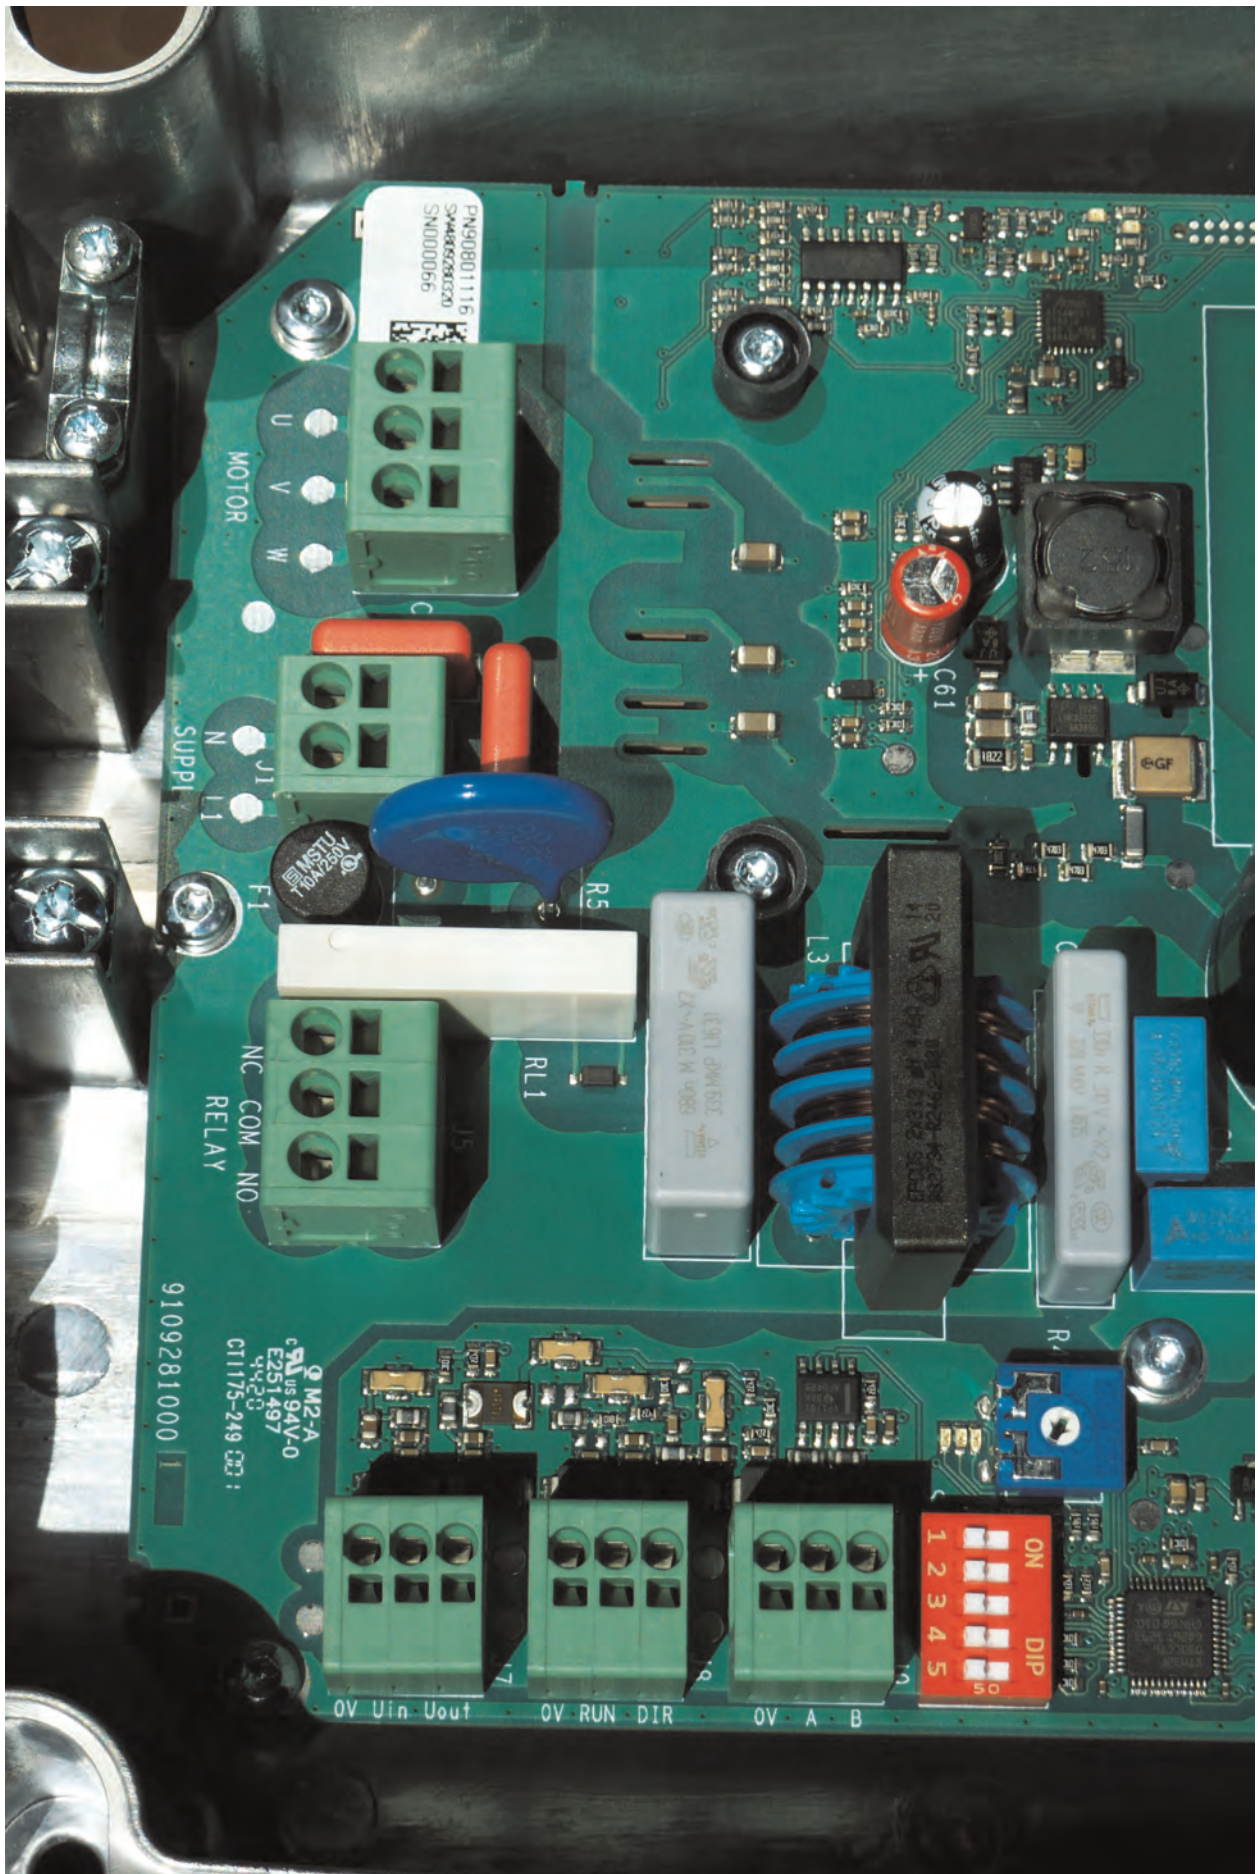

### 7.1.1.2.3 Information about connection of cables to terminals on the control board.

Connection of cables to the terminals on the board		
Terminal	Connection	
Earth	Connect to aluminium cabinet	
L1	Fase – supply	
N	Neutral – supply	
	Rotor turns one direction U = wire 1 V = wire 2 W = wire 3	Rotor turns opposite direction U = wire 2 V = wire 1 W = wire 3
Earth	From rotor motor connect to aluminium cabinet	
Test	Set DIP switch 5 in position – ON for more than 10 seconds and the motor will accelerate to maximum speed. See description above in section 9.2.1.2	
Adjust	The potentiometer can adjust the maximum revolutions between 50 and 100 % of the maximum speed set by the DIP switches 1, 2 and 3	
COM	Alarm signal – COM (common)	
NC	Alarm signal – Relay is normally closed	
NO	Alarm signal – Relay is normally open	
Uin	Analog control input 0 – 10 volt DC	
0V	Analog control input – ground	
RUN	Rotor guard – Sensor output (black cable from Systemair rotor guard)	
0V	Rotor guard – (blue cable from Systemair rotor guard )	
U out	Rotor guard – (brown cable from Systemair rotor guard)	
A	For BUS signal – RS485 – A	
B	For BUS signal – RS485 – B	
0V	For BUS signal – ground	

### 7.1.1.2.4 Modbus control for NOVA drive 370

#### Connection

The interface to Modbus follows:

**Table – Modbus connection details**

Configuration	Value
Interface	RS485
Baudrate	9600
Data bits	8
Parity	None
Stop bits	1
Default address	7

#### Addressing

The default address for the inverter is 7. The address can be changed through Modbus.

To change the address follow the following steps:

1. Connect to the inverter using the current address
2. Change the address in register 0x4F to the desired one
3. Wait 10 seconds
4. Turn off the device (wait 60 seconds)



5. Turn on the device

6. You can connect using the new address specified in point 2

### Modbus registers

The following Modbus registers are available. All registers are either input registers (16-bit read-only denoted by R) or holding registers (16-bit read-write denoted by RW).

Register	Address	Type	Description
Backwards compatible control			
Operation	0x01	RW	Bit 0: Run(1)/Stop(0) Bit 3: Clear fault (it can be combined with Run)
SpeedSet	0x02	RW	Speed set 0–100%, written 0–1000 for quantification
SupplyVoltage	0x03	R	DC link voltage in [V]
Fault Contents	0x04	R	Bits are set for each fault according to Table 10
OutputSpeed	0x05	R	Estimated motor speed in [rpm]
OutputVoltage	0x06	R	Motor RMS voltage in [V]
OutputCurrent	0x07	R	Motor RMS current in [mA]
OutputPower	0x08	R	Motor power in [W]
InputPower	0x09	R	Added for compatibility reasons. Same as OutputPower
AccOperationTime	0x0A	R	Total time the motor has been running x10 in hours. A value of 5 for example means 50 hours
MaxSpeed	0x0B	R	Max speed as set in [rpm]
MinSpeed	0x0C	R	Min speed as set in [rpm]
SW version	0x0D	R	Backwards compatible SW version, always increasing
HW version	0x0E	R	HW version of PCB
Applicaton type	0x0F	R	Application type, for backwards compatibility, set as 0
New info features			
ModbusAddress	0x04F	RW	Address used in Modbus. Default is 7
AlarmLog	0xC0	R	Last 4 FaultContent alarm codes
ModuleTemperature	0xC1	R	Temperature of the module in [°C]
MceStatusFlags	0xC2	R	Status flags of the motor control software for internal usage
MceFaultFlags	0xC3	R	Fault flags of the motor control software for internal usage
PCBTemperature	0xC4	R	PCB temperature in [°C]
WarningContents	0xC5	R	Warnings, which each bit as set for each one according to Table 10
SpeedSetScaled	0xC7	R	Reference speed in [10*rpm]
For Factory test			
Dip1	0x110	R	Dip 1 value, 0 (off) or 1 (on)
Dip2	0x111	R	Dip 2 value, 0 (off) or 1 (on)
Dip3	0x112	R	Dip 3 value, 0 (off) or 1 (on)
Dip4	0x113	R	Dip 4 value, 0 (off) of 1 (on)
Dip5	0x114	R	Dip 5 value, 0 (off) or 1 (on)
Guard in	0115	R	Rotor guard value 0 or 1
Test running	0x116	R	1 when test is running, 0 otherwise
Speed external 0–10V	0x117	R	0 – 4095 speed input
Trimmer 0–10V	0x118	R	0 – 4095 trimmer input

Register	Address	Type	Description
Extended SW version			
FrontendVersion	0x320 – 0x333	R	Frontend software version C string.
BackendVersion	0x334 – 0x347	R	Backend software version C string.

### 7.1.1.2.5 Modbus control – Normal operation

Write the speed reference in SpeedSet between 0 and 1000 (0–100%). Note that the conversion from Speed Set to rpm speed is non-linear. The reference in rpm can be read using register SpeedSetScaled. The minimum and maximum speed can be read in registers MinSpeed and MaxSpeed.

Start the motor by setting Operation to 1. Stop it by setting it to 0. You can change the speed while the motor is running.

If communication with the device is stopped, a warning will appear after 10 seconds but the motor will keep running.

Faults and warnings can be reset by setting operation to 8.

## 7.2 Speed control RHC 200 delivered before March 2021

The cabinet with the speed control system for the rotor is installed behind the inspection door in the rotor section.

The cabinet contains the speed controller with all components, terminal blocks, LED displaying the operation mode, the dual position DIP switch with 8 sliding levers for programming the rotor motor signal and a button for the activation of the test mode.

### 7.2.1 Selection of correct signal via the 8 DIP switch levers



Position	Function	Code
Up	Active = ON	1
Down	Deactivated = OFF	0

The factory sets the positions of the 8 DIP switch levers for the maximum of 10 revolutions per minute for standard temperature exchangers and for hygroscopic exchangers. The position of each DIP switch lever is shown below.

Gen-iox GO size	Diameter of pulley	Diameter of pulley (Sorption)	DIP switch position	Motor	Motor (Sorption)
10	50	65	0000	90 TYD-S214-M	90TYD-S214-M
11	50	85			120 TYD-S214-M
12	50	85			
14	65	106			
16	65	106			
18	65	106			
20	71	118	0100	120 TYD-S214-M	120 TYD-S214-L
22	80	140			
24	85	150			
27	95	150			
29	106	150			
31	112	160			

### 7.2.2 Indication of operation mode via red and green LED as well as test of motor

The LED is in the cover of the cabinet.

LED indication	Value
No indication	Power off
Green	Ordinary operation
Green – flashes	Ready for operation
Green/Red strobe	Rotary guard activated
Red	Rotor guard has not been activated
Red strobe in sequence	Alarm, rotary guard failure

Number of red flashes in series	Value
1	Output current limit
2	Over voltage
3	Under voltage
4	Failure in the controller
5	Communication failure

**Restart of rotor:**

- Switch off power and switch on power again  
or
- Press the test button inside the cabinet

**Table 3 Test of motor by checking the resistance in all 3 windings**

Motor sizes	Ohm
90TYD-S214-M	40Ω
120TYD-S214-M	18Ω
120TYD-S214-L	10Ω

**Setting of constant speed:**

- Set fourth DIP switch lever in position - ON



**Test:**

- Set fourth DIP switch lever in position – ON
- Press the test button

**7.2.3 Copy of the label with information about connection of cables**

This self-adhesive label is always placed on the cover of the cabinet. The text is always in English.



	9	10	11	12	13	14	15	16	17	18	19
Manual Setpoint	Relay COM	Relay NC	Relay NO	Uin 0-10VDC	GND	Rotary Guard	GND	VCC (max 10mA)	RS485 A	RS485 B	GND
											
Test/Reset											

					Black	Blue	Brown				
					Rotary Guard	GND	VCC (max 10mA)	RS485 A	RS485 B	GND	

Disable Rotary guard by connecting 14 and 16.


DIP SETTINGS:

DIP1	DIP2	DIP3	DIP4	DIP5	FUNCTION
OFF	OFF	OFF	---	---	90 TYD-S214-M 200RPM
ON	OFF	OFF	---	---	90 TYD-S214-M 250RPM
OFF	ON	OFF	---	---	120 TYD-S214-M 250RPM
ON	ON	OFF	---	---	120 TYD-S214-M 300RPM
OFF	OFF	ON	---	---	120 TYD-S214-L 270RPM
ON	OFF	ON	---	---	120 TYD-S214-L 300RPM
OFF	ON	ON	---	---	120 TYD-S214-M 350RPM
---	---	---	OFF	OFF	AI 0-10V CONTROL
---	---	---	ON	OFF	POTENTIOMETER CONTROL
---	---	---	OFF	ON	AI 0-10V CONTROL Potentiometer: max rpm limit 50-100%
---	---	---	ON	ON	NO FUNCTION

## 7.3 Assemble of split rotor for Geniox GO 27, Geniox GO 29 and Geniox GO 31

### 7.3.1 Dimensions of split rotor sections

For easier transportation, Systemair offers split rotor option. This type of rotor is divided into two sections – one is assembled in factory and contains half of the rotor, rotor controller and motor (pos. 1), another section is empty (pos. 2). Second half of the rotor is delivered in parts packed on a separate pallet. Rotor should be assembled following a manufacturer's manual (provided in a separate cover).

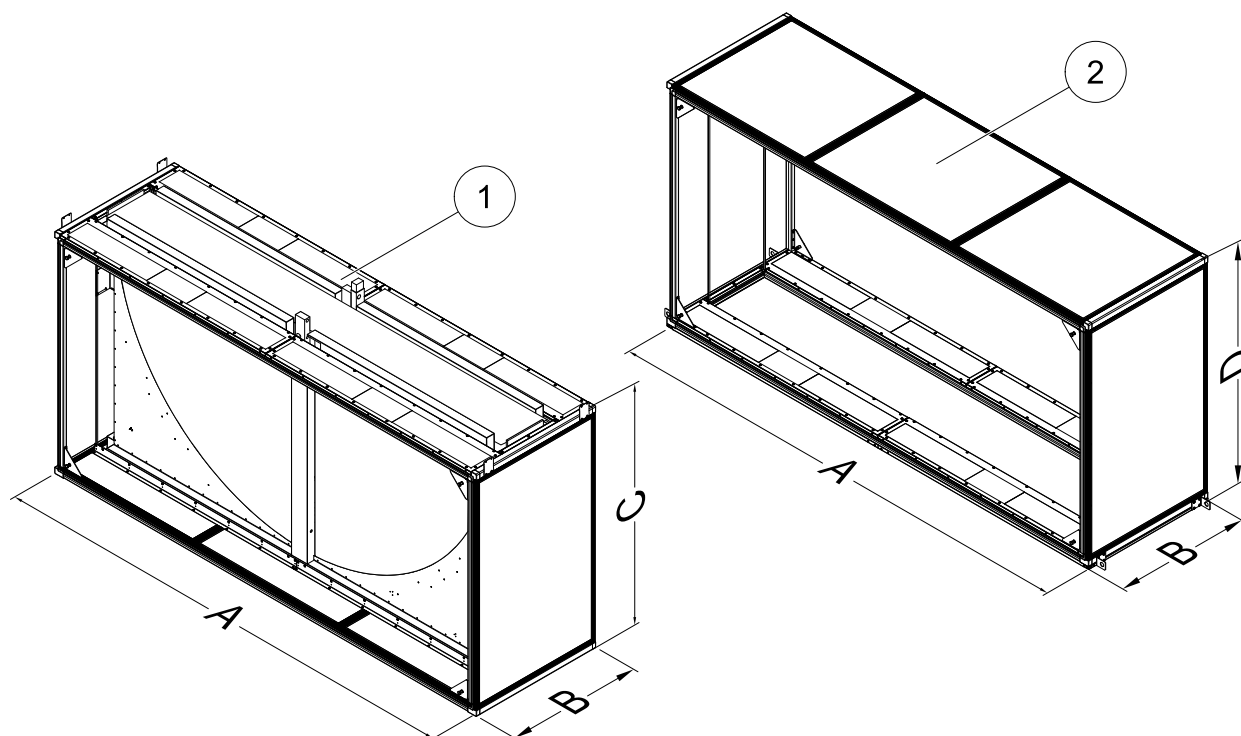


Size	A [mm]	B [mm]	C [mm]	D [mm]
Geniox G018	1882	600	982	1000

Geniox G020	2082	700	1082	1100
Geniox G022	2282	700	1182	1200
Geniox G024	2482	800	1282	1300
Geniox G0 27	2782	800	1382	1400
Geniox G0 29	2982	900	1482	1500
Geniox G0 31	3182	900	1582	1600

### 7.3.2 Assemble of rotor casing


1. Assemble rest of the rotor (pos. 1) on top of the first section (pos. 2) by following a manufacturer's manual (provided in a separate cover if divided rotor option was ordered).

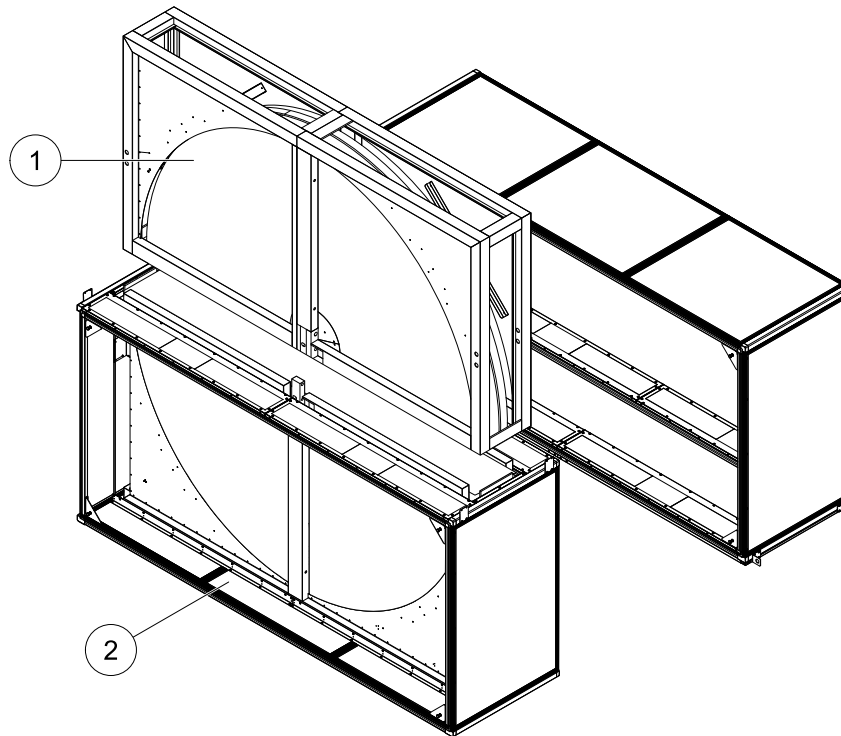


2. Lift empty section (pos. 2) and place it on top of assembled rotor and lower section (pos. 1).

### Important


Make sure not to damage the rotor or sections during lifting procedure.

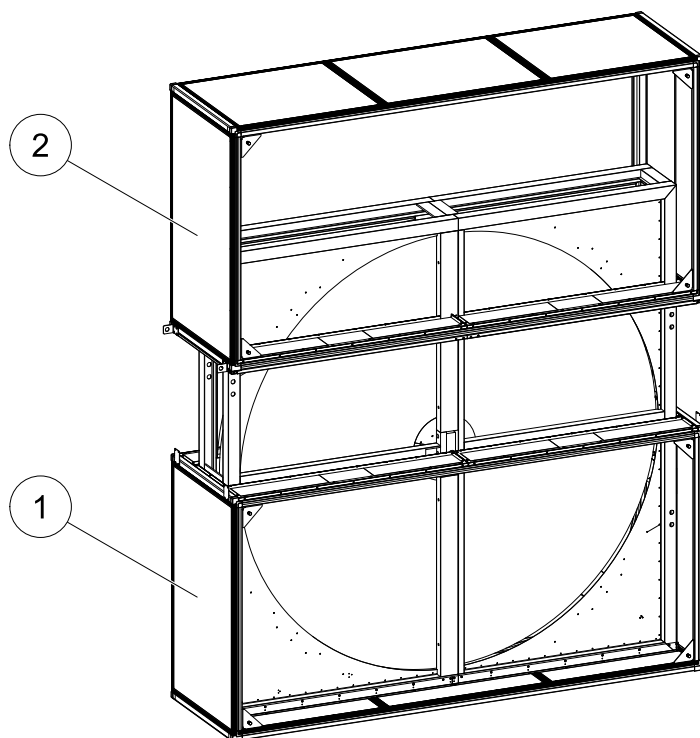

3. Finish the assembly by fixing 4 locking plates in both section sides (2 plates in front and 2 plates on the back).

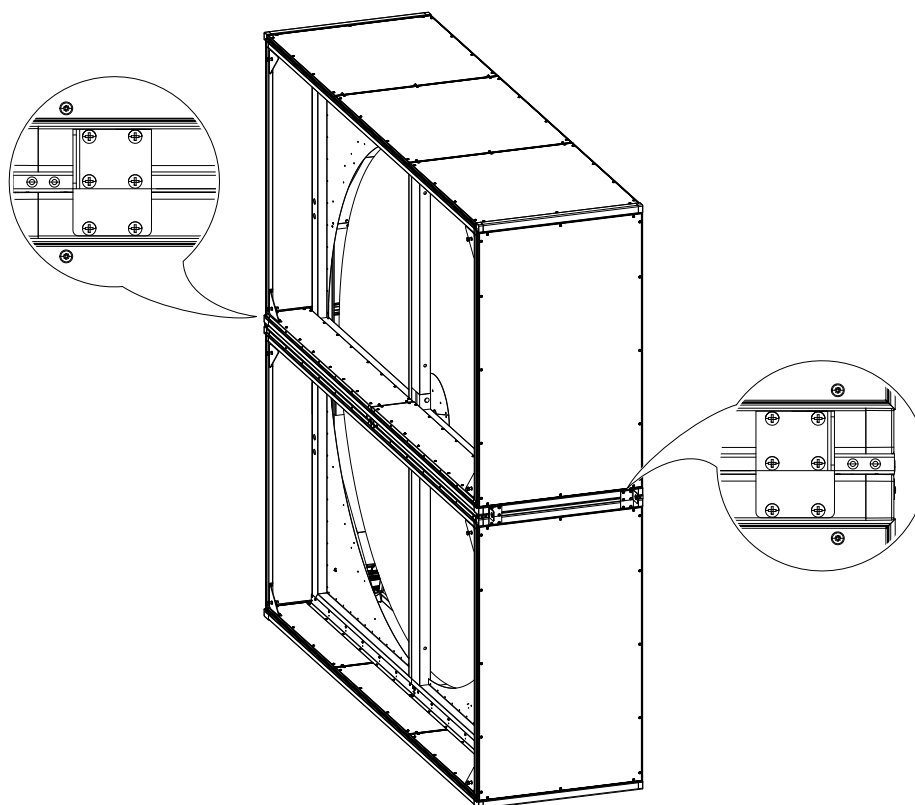

4. Dimensions of assembled rotor section are given in table below.

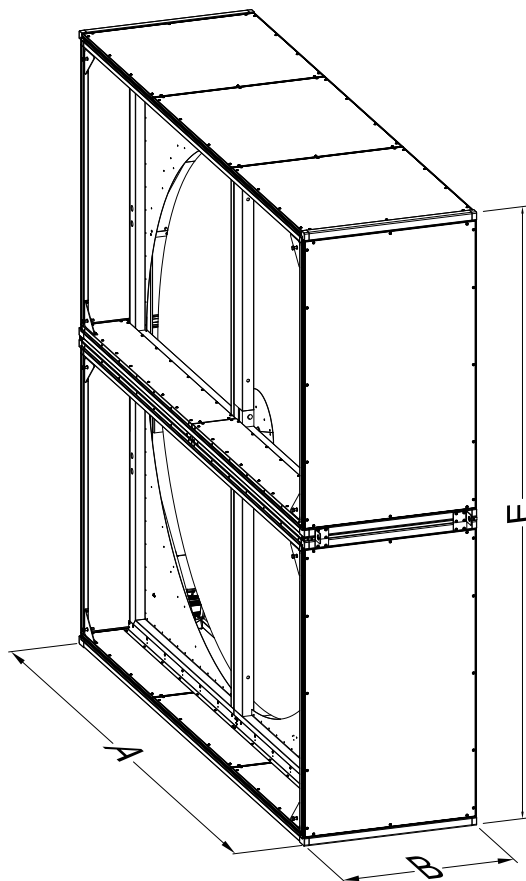

Size	A	E
Geniox GO 18	1882	1982
Geniox GO 20	2082	2182
Geniox GO 22	2282	2382
Geniox GO 24	2482	2582
Geniox GO 27	2782	2782
Geniox GO 29	2982	2982
Geniox GO 31	3182	3182



**Note:**

For width (B) check print-out of the air handling unit.

### 7.3.3 Installation of rotation sensor, rotor magnet and belt

The rotor motor is installed by Systemair before delivery.

The rotor motor is mounted on a motor console plate.

Sensor for control of rotation must be installed by the installer. On the rotor the installer must mount the screw that activates signal from the sensor. Distance between sensor and screw for activation of signal must **not** exceed 2mm.

Install sensor for registration of rotation. The sensor must be installed to the right seen from the inspection side of the unit. Check that collision between sensor and brackets at the rotor is impossible. Adjust position of sensor if necessary.



Mount the illustrated screw on the rotor for activation of signal from the sensor.



### Note:

The distance from the screw to the sensor must **not** exceed 2 mm.



1. Put a V-belt around recently assembled rotor wheel. Use a beltlock with screws to fix both ends of the belt. Grind the ends of screws if they come to other side of the belt to have a flat surface. Spare belt lock is provided in a package attached on inner side of the rotor.

Belt lock mounting:



Grinded belt lock screws:



Spare belt lock:



2. Turn the rotor by hand to make sure it rotates freely.

## Annex 8 Reversible heat pump unit (in separate cover, if heat pump was delivered)

Heat pump section is a separate section in the air handling unit, containing a complete stand-alone reversible heat pump system (heating and cooling). If the air handling unit was delivered with this section, a separate manual about the heat pump was enclosed in the separate cover.

## **Annex 9 Menu for internal controller in the heat pump unit (in separate cover, if heat pump was delivered)**

If the air handling unit was delivered with this section, a separate manual about the heat pump was enclosed in the separate cover

## **Annex 10 Connection of fan motor and set-up manual for frequency converter**

Connection of the fan motor is described in label attached to the frequency converter or 14 *Wiring diagram (in separate cover)* which is provided in separate cover. Frequency converter set-up, installation of ECblue and diagnostic information also is provided in separate cover.

## **Annex 11 Commissioning protocol (in separate cover)**

Printed on separate pages and delivered with every unit. Enclosed in separate cover.

## **Annex 12 Report with data from final functional test on the Systemair factory**

Provided on user demand.

## **Annex 13 Short description of main components in the control system**

### **13.1 Geniox units delivered in one or several sections**

Geniox units have an integrated control system and depending on the size, the cabinet is installed inside the unit. Systemair CU-27C or CU-40C port controllers are mounted in the cabinet and all electrical connections between cabinet and components in the unit are installed. The control system is configured according to the customer's order – confirmed by the order confirmation – to promote easy start-up on the site. The unit is tested at the factory and all functions are confirmed by a final functional test and test report. The test report is available on user demand. After the final test the unit is delivered as one assembled section or divided in separate sections. If unit was shipped divided into sections, during reassembly on the site, all external components and the clearly marked cables with sockets must be reconnected in the marked cabinet terminals.

#### **13.1.1 External components**

External components are Systemair Control Panel, valves, valve motors, pressure transmitters, supply air temperature sensor, sensor for water temperature in the heating coil (if water heating coil was requested). Terminals are present in the cabinet for pressure transmitters, if it is a solution for constant pressure in the ducts, and terminals are present in the cabinet for valve motors, circulation pump, supply air temperature sensor and sensor for water temperature in the heating coil. The Systemair Control Panel with 3 meters of cable is not connected to the controller in the cabinet. All external components delivered are packed in a cardboard box delivered together with the unit.

## **Annex 14 Wiring diagram (in separate cover)**

The wiring diagram is in a separate cover

## **Annex 15 Operator's guide (How to use the Systemair control panel) (in separate cover)**

A separate manual is delivered with every unit. This manual assists the everyday user/operator about how to control the unit by navigating the menus by the buttons and the display. Enclosed in separate cover.





Systemair UAB  
Ling st. 101  
LT-20174 Ukmergė, LITHUANIA

Phone +370 340 60165  
Fax +370 340 60166

[www.systemair.com](http://www.systemair.com)