

# SYSAQUA

20 / 25 / 30 / 35 / 40

Air Cooled Water Chillers and Heat Pumps



R410A

19.5 → 41.6kW



19.3 → 40.9kW





**INSTALLATION INSTRUCTION**

NOTICE D'INSTALLATION

INSTALLATIONSHANDBUCH

ISTRUZIONI INSTALLAZIONE

INSTRUCCIONES DE INSTALACIÓN

**English**

Français

Deutsch

Italiano

Español

# CONTENTS

<b>1. GENERAL RECOMMENDATIONS</b> .....	<b>3</b>
1.1. SAFETY DIRECTIONS .....	3
1.2. WARNING .....	3
1.3. EQUIPMENT SAFETY DATA .....	4
<b>2. INSPECTION AND STORAGE</b> .....	<b>5</b>
<b>3. WARRANTY</b> .....	<b>5</b>
<b>4. PRESENTATION</b> .....	<b>5</b>
<b>5. CONTENTS OF PACKAGE</b> .....	<b>6</b>
5.1. OPTIONAL ACCESSORIES .....	6
<b>6. DIMENSIONS</b> .....	<b>6</b>
<b>7. HANDLING</b> .....	<b>6</b>
7.1. NET WEIGHT .....	6
7.2. GRAVITY CENTER POSITION .....	6
7.2.1. WITHOUT BUFFER TANK .....	6
7.2.2. WITH BUFFER TANK .....	6
7.3. MAINTENANCE GENERALITIES .....	6
7.3.1. HANDLING WITH A FORKLIFT .....	7
7.3.2. HANDLING BY SLINGING .....	7
<b>8. TECHNICAL SPECIFICATIONS</b> .....	<b>8</b>
8.1. PHYSICAL CHARACTERISTICS .....	8
8.2. REFRIGERATION SPECIFICATIONS .....	9
8.2.1. REFRIGERANT CIRCUIT DIAGRAM .....	9
8.2.2. REFRIGERANT CHARGE .....	9
8.2.3. FLUOROCARBON GAS REGULATIONS .....	9
8.4. ELECTRIC SPECIFICATIONS .....	10
8.4.1. SYSAQUA WITH STANDARD FAN .....	10
8.4.2. SYSAQUA WITH HIGH-PRESSURE FAN .....	10
8.3. OPERATING LIMITS .....	10
8.3.1. SYSAQUA.L/SYSAQUA.H COOLING MODE .....	10
8.3.2. SYSAQUA.H HEATING MODE .....	10
<b>9. INSTALLATION</b> .....	<b>11</b>
9.1. SITING THE INSTALLATION .....	11
9.1.1. PREVAILING WIND .....	11
9.1.2. CONDENSATE WATER MANAGEMENT IN HEATING MODE .....	11
9.1.3. HOW TO REDUCE NOISE POLLUTION .....	11
9.2. CLEARANCE .....	12
9.3. ATTACHMENT TO THE GROUND .....	12
<b>10. HYDRAULIC LINKS</b> .....	<b>13</b>
10.1. MAIN HYDRAULIC CIRCUIT .....	13
10.2. ANTI-CLOGGING PROTECTION .....	13
10.3. MINIMUM WATER VOLUME REQUIREMENTS .....	14
10.3.1. SYSAQUA COOLING ONLY VERSION .....	14
10.3.2. SYSAQUA HEAT PUMP VERSION .....	14
10.4. MAXIMUM WATER VOLUME REQUIREMENTS .....	14
10.5. RINSING THE CIRCUIT .....	14
10.6. FROST PROTECTION .....	15
10.7. WATER QUALITY .....	16
10.8. HEAT INSULATION .....	17
10.9. FILLING THE SYSTEM WITH WATER .....	17
<b>11. WIRING DIAGRAM AND LEGEND</b> .....	<b>18</b>
11.1. WIRING DIAGRAM .....	18
11.2. LEGEND .....	18
11.2.1. POWER SUPPLY .....	18
11.2.2. WIRING DIAGRAM KEY DESCRIPTIONS .....	18
11.2.3. RANGE AND SETTINGS OF THERMAL PROTECTION / NOMINAL INTENSITY OF THE CONTACTORS (CLASSE AC3) .....	18
<b>12. ELECTRICAL CONNECTIONS</b> .....	<b>19</b>
12.1. SYSAQUA 20 - 25 - 30 - 35 - 40 .....	20
12.2. OPTIONS ALL SEASONS AND VARIABLE FLOW PUMP .....	21
<b>13. REGULATION</b> .....	<b>22</b>
13.1. ORDER OF PRIORITY FOR CONTROL SYSTEMS .....	22
13.2. USER INTERFACE .....	22
13.2.1. KEYPAD .....	22
13.2.2. HOME PAGE .....	23
13.2.3. MAIN MENU .....	23
13.2.4. MENUS .....	23
13.3. INITIAL SETTINGS .....	24
13.3.1. TIME SETTINGS .....	24
13.3.2. LANGUAGE SETTINGS .....	24
13.3.3. DEFINING THE GLYCOL RATE .....	25
13.4. LAUNCHING THE SYSAQUA SYSTEM .....	25
13.4.1. CONFIGURING INPUT D1 .....	25
13.4.2. CONFIGURING INPUT D2 .....	26
13.4.3. HEAT/COOL SELECTION .....	26
13.4.4. SELECTING THE OPERATING MODE .....	26
13.4.5. USER TEMPERATURE SETPOINTS AND ACTUAL SETPOINTS .....	27
13.4.6. WATER LAW .....	28
13.4.7. "VARIABLE PRIMARY FLOW" OPTION .....	30
13.4.8. REDUCED MODE .....	33
13.4.9. LIMITED CAPACITY .....	33
13.5. ALARMS .....	34
13.6. SCHEDULE .....	35
<b>14. COMMISSIONING</b> .....	<b>36</b>
14.1. PRE-START CHECK LIST .....	36
14.1.1. VISUAL CHECK .....	36
14.1.2. ELECTRICAL CHECK .....	36
14.1.3. HYDRAULIC CHECK .....	36
14.2. OPERATING CHECK LIST .....	37
14.2.1. GENERAL .....	37
14.2.2. PHASE ROTATION PROTECTION .....	37
14.2.3. ELECTRICAL .....	37
14.2.4. HYDRAULIC CIRCUIT .....	37
14.2.5. COMPRESSOR AND REFRIGERATION SYSTEM .....	38
14.2.6. FINAL CHECK .....	38
<b>15. IN CASE OF WARRANTY - MATERIAL RETURN PROCEDURE</b> .....	<b>38</b>
<b>16. ORDERING SERVICE AND SPARE PARTS ORDER</b> .....	<b>38</b>
<b>17. MAINTENANCE</b> .....	<b>39</b>
17.1. WEEKLY CHECK .....	39
17.2. PERIODIC TABLE OF SERVICE AND MAINTENANCE .....	40
17.3. MAINTENANCE PROCEDURES .....	42
17.3.1. REFRIGERANT CIRCUIT .....	42
17.3.2. HYDRAULIC CIRCUIT .....	43
17.3.3. WINTER PROTECTION .....	43
<b>18. TROUBLE SHOOTING</b> .....	<b>44</b>



## POWER SUPPLY MUST BE SWITCHED OFF BEFORE STARTING WORK IN THE ELECTRIC CONTROL BOX

### 1. GENERAL RECOMMENDATIONS

The purpose of this Manual is to provide users with instructions for installing, commissioning, using and maintaining the units. It also contains instructions on starting up the machine as well as recommendations to avoid bodily injury and risks of damage to the device during its operation.

It does not contain the complete description of all the maintenance operations guaranteeing the unit's long life and reliability. Only the services of a qualified technician can guarantee the unit's safe operation over a long service life.

Please read the following safety precautions very carefully before installing the unit.

#### 1.1. SAFETY DIRECTIONS

Follow the safety rules in force when you are working on your appliance.

The installation, commissioning, use and maintenance of these units should be performed by qualified personnel having a good knowledge of standards and local regulations, as well as experience of this type of equipment.

This appliance has not been designed for use by persons (including children) with reduced physical, sensorial or mental faculties or by persons without any experience or knowledge of heating systems, unless they act under the safety and supervision of a responsible person or have received prior training concerning the use of the appliance.

The unit should be handled using lifting and handling equipment appropriate to the unit's size and weight.

Any wiring produced on site must comply with the corresponding national electrical regulations.

Make sure that the power supply and its frequency are adapted to the required electric current of operation, taking into account specific conditions of the location and the current required for any other appliance connected to the same circuit.

The unit must be EARTHED to avoid any risks caused by insulation defects.

It is forbidden to start any work on the electrical components if water or high humidity is present on the installation site.

#### 1.2. WARNING

Cutoff power supply before starting to work on the appliance.

When making the hydraulic connections, ensure that no impurities are introduced into the pipe work.

**The manufacturer declines any responsibility and the warranty becomes void if these instructions are not respected.**

If you meet a problem, please call the Technical Department of your area.

If possible, assemble the compulsory or optional accessories before placing the appliance on its final location (see instructions provided with each accessory).

In order to become fully familiar with the appliance, we suggest to read also our Technical Instructions.

The information contained in these Instructions are subject to modification without advance notice.

## 1.3. EQUIPMENT SAFETY DATA

Safety Data	R410A
Toxicity	Low
In contact with skin	Skin contact with the rapidly evaporating liquid may cause tissue chilblains. In case of skin contact with the liquid, warm the frozen tissue with water and call a doctor. Remove contaminated clothing and footwear. Wash the clothing prior to re-use.
In contact with eyes	Vapours have no effect. Liquid splashes or sprays may cause freeze burns. In these cases rinse your eyes with running water or with a solution for eye lavages for at least 10 minutes. Immediately contact a doctor.
Ingestion	In this case, burns may result. Do not attempt to make the patient vomit. If the patient is conscious, rinse the mouth with water. Call a doctor immediately.
Inhalation	In case of inhalation, move the patient to an area with fresh air and provide oxygen if necessary. Perform artificial respiration if the patient has stopped breathing or lacks air. In case of cardiac arrest, perform external cardiac massage. Call a doctor immediately.
Further Medical Advice	Exposure to high concentrations can be dangerous for individuals with cardiac problems, as the presence of catecholamines such as adrenalin in the bloodstream may lead to increased arrhythmia and possible cardiac arrest.
Occupational exposure limits	R410A: Recommended limits: 1,000 ppm v/v 8 hours TWA.
Stability	Stable product
Conditions to avoid	Increased pressure due to high temperatures may cause the container to explode. Keep out of the sun and do not expose to a temperature >50°C.
Hazardous reactions	Possibility of dangerous reactions in case of fire due to the presence of F and/or Cl radicals.
General precautions	Avoid the inhalation of high concentrations of vapours. The concentration in the atmosphere shall be kept at the minimum value and anyway below the occupational limits. Since vapours are heavier than air and they tend to stagnate and to build up in closed areas, any opening for ventilation shall be made at the lowest level.
Breathing protection	In case of doubt about the actual concentration, wear breathing apparatus. It should be self-contained and approved by the bodies for safety protection.
Storage Preservation	Refrigerant containers shall be stored in a cool place, away from fire risk, direct sunlight and all heat sources, such as radiators. The maximum temperature shall never exceed 50°C in the storage place.
Protection clothes	Wear boots, safety gloves and glasses or masks for facial protection.
Behaviour in case of leaks or escapes	Never forget to wear protection clothes and breathing apparatus. Isolate the source of the leakage, provided that this operation may be performed in safety conditions. Any small quantity of refrigerant which may have escaped in its liquid state may evaporate provided that the room is well ventilated. In case of a large leakage, ventilate the room immediately. Stop the leakage with sand, earth or any suitable absorbing material. Prevent the liquid refrigerant from flowing into drains, sewers, foundations or absorbing wells since its vapours may create an asphyxiating atmosphere.
Disposal	The best procedure involves recovery and recycle. If this is not possible, the refrigerant shall be given to a plant which is well equipped to destroy and neutralise any acid and toxic by-product which may derive from its disposal.
Combustibility features	R410A: Non-inflammable at ambient temperatures and atmospheric pressures.
Containers	If they are exposed to the fire, they shall be constantly cooled down by water sprays. Containers may explode if they are overheated.
Behaviour in case of fire	In case of fire wear protection clothes and self-contained breathing apparatus.

## 2. INSPECTION AND STORAGE

At the time of receiving the equipment carefully cross check all the elements against the shipping documents in order to ensure that all the crates and boxes have been received. Inspect all the units for any visible or hidden damage.

**In the event of shipping damage, write precise details of the damage on the shipper's delivery note and send immediately a registered letter to the shipper within 48 hours, clearly stating the damage caused. Forward a copy of this letter to the manufacturer or his representative.**

Never store or transport the unit upside down. It must be stored indoors, completely protected from rain, snow etc. The unit must not be damaged by changes in the weather (high and low temperatures). Excessively high temperatures (above 60 °C) can harm certain plastic materials and cause permanent damage. Moreover, the performance of certain electrical or electronic components can be impaired.

## 3. WARRANTY

The appliances are delivered fully assembled, factory tested and ready to operate.

Any modification to the units without the manufacturer's prior approval, shall automatically render the warranty null and void.

The following conditions must be respected in order to maintain the validity of the warranty:

- Commissioning shall be performed by specialised technicians from technical services approved by the manufacturer.
- Maintenance shall be performed by technicians trained for this purpose.
- Only Original Equipment spare parts shall be used.
- All the operations listed in the present manual shall be performed within the required time limits.



**THE WARRANTY SHALL BE NULL AND VOID IN THE EVENT OF NON-COMPLIANCE WITH ANY OF THE ABOVE CONDITIONS.**

## 4. PRESENTATION

All the models in the **SYSAQUA** liquid coolers range are produced to state-of-the-art design and manufacturing standards. In this way, they offer guarantees of high performance and reliability as well as the capability of adapting to all types of air conditioning installations operating with both chilled water and glycol solutions (and with hot water for the Heat pump units). The unit, designed for an outdoor mounted application, is not suitable for any use other than those specified in the present manual.

Improper usage of the unit or a use for purposes other than those originally intended, without the prior approval by the manufacturer or its agents, could result in the unit functioning outside its safe operating limits and could present risks to both personnel and property.

**SYSAQUA** are packaged units, optimized for air conditioning applications.

After the units are assembled, the refrigerating and electrical circuits are tested at the factory in order to guarantee correct operation.

The are filled with an operational refrigerant fluid charge and are subjected to pressure tightness tests.

The Cooling only models can produce chilled water at temperatures varying between +18°C to +5°C or chilled water/glycol solution at temperatures varying between +5°C to -10°C.

The Heat pump models can produce hot water at temperatures varying between +20°C and +50°C.

## 5. CONTENTS OF PACKAGE

- 1 SYSAQUA
- 1 Water filter
- 1 Bag with the documentation

### 5.1. OPTIONAL ACCESSORIES

Anti-vibration rubber pads

Spring pads

Isolating valve

**On opening the carton, check that all the accessories required for installation are present.**

## 6. DIMENSIONS

SEE APPENDIX

## 7. HANDLING

### 7.1. NET WEIGHT

		20	25	30	35	40
Without pump	kg	260	270	300	310	310
1 pump	kg	20	20	20	20	20
2 pumps	kg	/	/	/	/	/
XLN	kg	/	/	/	/	/
Buffer tank	Kg	65	65	65	65	65

### 7.2. GRAVITY CENTER POSITION

#### 7.2.1. WITHOUT BUFFER TANK

		20	25	30	35	40
$X_G$	mm	470	470	470	470	470
$Y_G$	mm	460	460	460	460	460
$Z_G$	mm	850	850	850	850	850

#### 7.2.2. WITH BUFFER TANK

		20	25	30	35	40
$X_G$	mm	480	480	480	480	480
$Y_G$	mm	580	580	580	580	580
$Z_G$	mm	740	740	740	740	740

### 7.3. MAINTENANCE GENERALITES

The method of handling depends on the model of **SYSAQUA** and its final destination.

- Take care to avoid any rough handling or impacts when unloading and moving the appliance.
- Before hoisting into position, test lift to insure stability and balance. Avoid twisting or uneven lifting of the units.
- The units shall be carefully inspected before unit installation to make sure this has not happened.
- All these sections have been inspected before leaving the factory. It is therefore important to insure that no bolts, screws or other fixing system are loosened or missing before the commissioning.



#### Caution

Never submit the metal work (panels, posts) of the **SYSAQUA** to handling constraints, as only its base is designed for that purpose.




#### Caution

Do not tilt the **SYSAQUA** during handling, as it would be damaged irreversibly.



#### Caution

Never move the **SYSAQUA** on rollers.

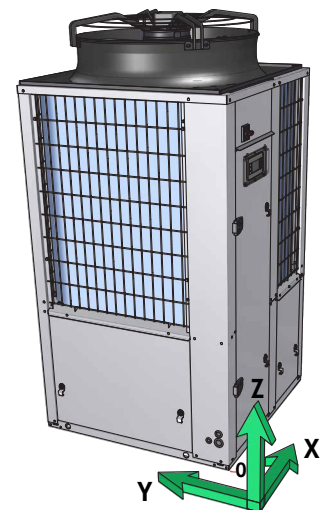






### Caution

When handling the **SYSAQUA**, beware not to damage the finned coil block. Protect it with cardboard or particle panels.

#### 7.3.1. HANDLING WITH A FORKLIFT

A forklift can be used to handle the **SYSAQUA 20/25/30/35/40** units when palletized.

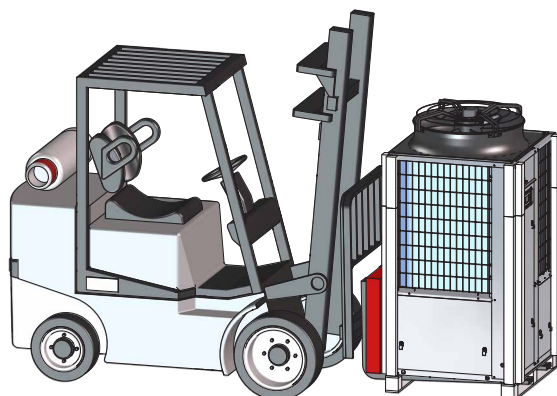

Place a safety wedge between the unit base and the fork lift truck to avoid damaging the unit's structure and casing.

#### 7.3.2. HANDLING BY SLINGING

Lifting is also possible by slinging.

Holes implemented at each end of the unit allow inserting slinging bars along the chassis width.

A spreader must be used to prevent damage to the machine edges.

	20	25	30	35	40
Hole diameter	30	30	30	30	30




### Caution

Slings must never touch the unit casing of **SYSAQUA**.

**SYSAQUA 20/25/30/35/40**



**SYSAQUA 20/25/30/35/40  
WITH BUFFER TANK**

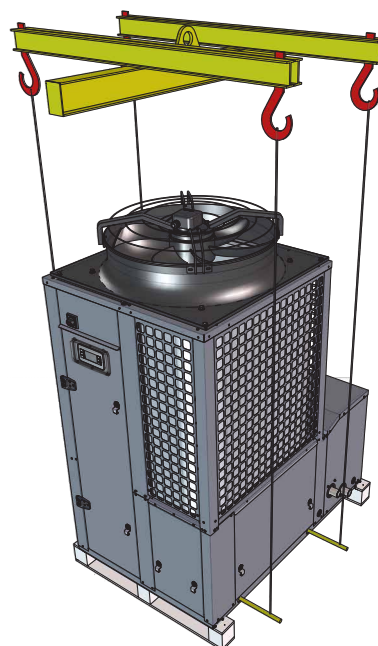

## 8. TECHNICAL SPECIFICATIONS

## 8.1. PHYSICAL CHARACTERISTICS

			20	25	30	35	40		
Supply voltage			400V / 3~ N / 50Hz						
Number of refrigerant circuit			1						
<b>REFRIGERANT</b>									
Type			R410A						
Factory charge			SEE NAME PLATE						
<b>COMPRESSORS</b>									
Type			Scroll						
Number			2	2	2	2	2		
Startup type			DIRECT						
Part load steps		%	0/50/100						
Crankcase heater			W	2x40	2x40	2x49	2x49	2x49	
<b>EVAPORATOR</b>									
Type			plates						
Number			1						
Water volume			L	1.78	1.78	2.55	2.55	2.55	
Cooling Only		water flow	nominal	3.31	4.25	4.64	6.59	7.02	
			minimum	2.09	2.68	2.92	4.15	4.42	
			maximum	5.53	7.10	7.75	11.01	11.72	
Water pressure losses			kPa	22	35	22	41	46	
Heat Pump	Cooling mode	water flow	nominal	3.35	4.36	4.64	6.16	6.44	
			minimum	2.11	2.75	2.92	3.88	4.06	
			maximum	5.59	7.28	7.75	10.29	10.75	
	Water pressure losses			kPa	23	37	22	37	40
	Heating mode	water flow	nominal	3.35	4.64	5.11	6.41	7.16	
			minimum	2.11	2.92	3.22	4.04	4.51	
maximum			5.59	7.75	8.53	10.70	11.96		
Water pressure losses			kPa	23	44	26	39	48	
Antifreeze electric heater			W	30	30	30	30	30	
<b>FANS</b>									
Type			AXIAL						
Number			1	1	1	1	1		
STD	Speed		tr/mn	900	900	900	650	650	
	Air flow rate		m <sup>3</sup> /h	9 000	13 000	13 000	16 000	16 000	
	Input power		W	620	940	940	930	930	
HPF	Speed		tr/mn	/	870	870	870	870	
	Air flow rate		m <sup>3</sup> /h	/	14 000	14 000	14 000	14 000	
	Input power		W	/	1 950	1 950	1 950	1 950	
	Static Pressure		Pa	/	140	140	140	140	
<b>COILS</b>									
Number			1	1	1	1	1		
Frontal surface			m <sup>2</sup>	2.40	2.40	2.40	2.80	2.80	
Number of rows			2	2	2	2	2		
<b>HYDRAULIC LINKS</b>									
Type			Male gas threaded						
Inlet diameter			pouce	1" 1/2	1" 1/2	1" 1/2	1" 1/2	1" 1/2	
Outlet diameter			pouce	1" 1/2	1" 1/2	1" 1/2	1" 1/2	1" 1/2	
<b>BUFFER TANK (OPTION)</b>									
Volume			L	100	100	100	100	100	
<b>ACOUSTICAL DATA</b>									
Sound power level (1)		STD	dB(A)	75	75	75	76	76	
		HPF	dB(A)	79	79	79	80	80	
		XLN	dB(A)	/	/	/	/	/	

(1) according to Eurovent.

## 8.2. REFRIGERATION SPECIFICATIONS

### 8.2.1. REFRIGERANT CIRCUIT DIAGRAM

# SEE APPENDIX

### 8.2.2. REFRIGERANT CHARGE



#### Caution

This equipment contains fluorinated gas with greenhouse gas effects covered by the Kyoto agreement.

The type and quantity of refrigerating fluid per circuit are indicated on the product plate.

The installer and end user will get informed on local environmental regulations for the installation, operation and disposal of the equipment ; more particularly, for the collection of substances hazardous for the environment (refrigerating fluid, oil, antifreeze, etc.). A refrigerating fluid, whatever it is, must not be vented. Refrigerating fluids must be handled by skilled personnel.



#### Caution

**SYSAQUA** units use the R410A fluoro-carbonated fluid, belonging to group 2 as defined in directive 2014/68/UE. Considering the maximum operating pressure of these units (42 bar g), they integrate category 2 (or lower) components as defined in directive 2014/68/UE.

### 8.2.3. FLUOROCARBON GAS REGULATIONS

The EC No. 517/2014 regulation covering fluorinated greenhouse gases requires of refrigeration equipment operators to comply with the following five obligations:

1. Installation, servicing, maintenance as well as checking the sealing must be carried out by qualified personnel.
2. The fluorinated gas must be recovered during servicing and maintenance as well as the end of the installation.
3. All the necessary measures must be taken to prevent the leakage of fluorinated gases and any leaks must be repaired as rapidly as possible.
4. Regular checks on any leaks must be performed according to the following conditions:
  - ✓ for equipment containing fluorinated greenhouse gases in quantities greater than or equal to the equivalent of 5 tonnes of CO<sub>2</sub> but less than the equivalent of 50 tonnes of CO<sub>2</sub>: at least every twelve months or, if a leak detection system is installed, at least every twenty-four months
  - ✓ for equipment containing fluorinated greenhouse gases in quantities greater than or equal to the equivalent of 50 tonnes of CO<sub>2</sub> but less than the equivalent of 500 tonnes of CO<sub>2</sub>: at least every six months or, if a leak detection system is installed, at least every twelve months
  - ✓ for equipment containing fluorinated greenhouse gases in quantities greater than or equal to the equivalent of 500 tonnes of CO<sub>2</sub>: at least every three months or, if a leak detection system is installed, at least every six months.
5. A document grouping a description of all the operations carried out on the cooling circuit must be drafted and conserved.



#### Caution

Non-compliance with one of these obligations constitutes an offense and can result in financial penalties.

Furthermore, compliance of the equipment with the fluorinated gases regulation must be proven to the insurance company.

#### 8.2.3.1. CALCULATING GREENHOUSE GAS QUANTITIES

$$\text{Greenhouse gas quantity (kg of CO}_2\text{)} = \text{Quantity of gas (kg)} \times \text{gas' GWP}$$

Quantity of greenhouse gas expressed in weight (kg) and CO<sub>2</sub> equivalent

GWP (Global Warming Potential) of the gas contained in the machine (see ID plate)

Quantity of gas: amount of gas contained in the machine in kg (see ID plate)

➤ **GWP for the R410A = 2088**

➤ **GWP for the R407C = 1774**

8.3. ELECTRIC SPECIFICATIONS

8.3.1. SYSAQUA WITH STANDARD FAN

			20	25	30	35	40
Power supply			400V / 3~ N / 50Hz				
Without pump	Maximum current	A	17.7	22.2	24.3	31.8	33.8
	Fuse rating aM	A	20	25	25	32	40
	Total starting current (without soft starter)	A	52.7	63.7	77.3	118.3	119.3
	Total starting current (with soft starter)	A	28.1	35.2	48.8	53.0	54.0
With pump	Maximum current	A	19.5	24.0	26.1	34.4	36.4
	Fuse rating aM	A	20	25	32	40	40
	Total starting current (without softstarter)	A	54.5	65.5	79.1	120.9	121.9
	Total starting current (with softstarter)	A	29.9	37.0	50.6	55.6	56.6

8.3.2. SYSAQUA WITH HIGH-PRESSURE FAN

			20	25	30	35	40
Power supply			400V / 3~ N / 50Hz				
Without pump	Maximum current	A	/	24.5	26.5	33.5	35.5
	Fuse rating aM	A	/	25	32	40	40
	Total starting current (without soft starter)	A	/	66.0	79.5	120.0	121.0
	Total starting current (with soft starter)	A	/	37.5	51.0	54.7	55.7
With pump	Maximum current	A	/	26.3	28.4	36.1	38.1
	Fuse rating aM	A	/	32	32	40	40
	Total starting current (without softstarter)	A	/	67.8	81.4	122.6	123.6
	Total starting current (with softstarter)	A	/	39.3	52.9	57.3	58.3

IMPORTANT


\* These datas are given for guidance only. They must be checked at commissioning according to prevailing standards. They depend on the installation and the cables used.

A main fuse must mandatorily be provided on the power supply.


- Fuses not supplied
- Cables not supplied

8.4. OPERATING LIMITS

8.4.1. SYSAQUA.L/SYSAQUA.H COOLING MODE

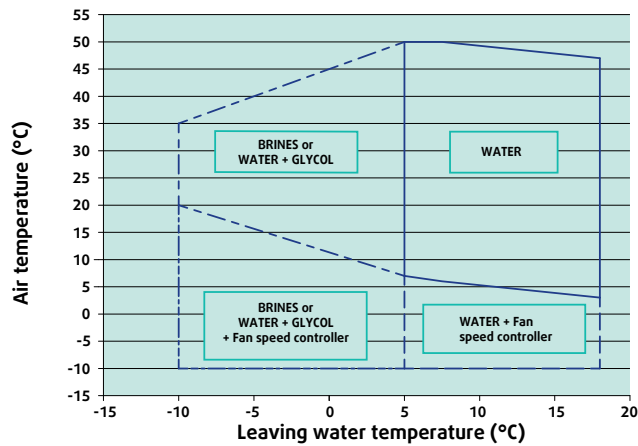

8.4.2. SYSAQUA.H HEATING MODE

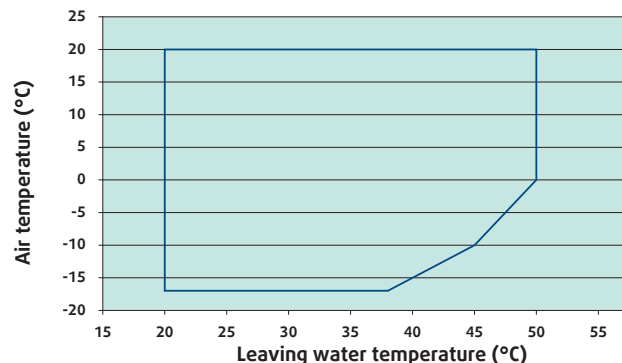

## 9. INSTALLATION



### Caution

The unit is not designed to withstand weights or stresses from adjacent equipment, pipe work or constructions. Any foreign weight or stress on the unit structure could lead to a malfunction or a degradation with dangerous consequences for personnel and property. In such an event, the warranty shall be null and void.



### Caution

The unit base shall be arranged as indicated in the manual. There could be a risk of personal injury or damage to property in the event of the unit being incorrectly supported.

### 9.1. SITING THE INSTALLATION

The **SYSAQUA** must be installed outdoors with sufficient surrounding clearance to enable unobstructed air circulation through the appliance and access for maintenance work.



### Caution

Do not expose the **SYSAQUA** to rejections from chimneys or vents. Fumes charged with soot or grease as well as acid rejections are likely to clog or damage the condenser irreversibly. This would cancel the warranty.

#### 9.1.1. PREVAILING WIND

In the case of the unit being sited in areas exposed to high winds, you must avoid the wind hitting the fan blowing surface areas directly to avoid any risk of recycling cooled air. Exchanger fan operation can be disrupted by strong winds, which can cause de-icing problems and fan malfunctions.



### Caution

Unit operation depends on air temperature. Any recycling of air extracted by the fan lowers the air intake temperature across the exchanger fins and alters the standard operating conditions.

#### 9.1.2. CONDENSATE WATER MANAGEMENT IN HEATING MODE

Depending on temperature and outdoor air humidity conditions, water vapour contained in the air can condense on the finned heat exchanger and even form ice under low outdoor temperature conditions (around  $< 5^{\circ}\text{C}$ ). This condensate water and defrosted water runs off via outlets provided under the exchanger. To aid water run-off and avoid frozen water remaining in the appliance in winter, we recommend that it is mounted at a height of around 10cm off the ground. In this way, these water can run off freely and be absorbed into the ground or channelled to a basin built under the appliance in order to protect the environment.

In areas where outdoor temperatures fall below  $1^{\circ}\text{C}$ , the system can be equipped with a condensate anti-freeze protection system (e.g. a heated pipe sheath, Not supplied).


#### 9.1.3. HOW TO REDUCE NOISE POLLUTION

In order to contain noise levels, we equip our appliances with quiet fans and encase the technical compartment in sound-proofed panels. However, noise levels can be reduced even further by following a few installation precautions:

- Do not install the appliance near a window.
- Do not install the unit in enclosed or confined yards, narrow locations where noise may be reflected on walls.
- Install the rubber pads supplied or anti-vibration pads (available as an option) under the appliance.
- Do not join the concrete slab supporting the appliance to the structure of the dwelling (structure-borne noise transmission).
- Electrical and hydraulic connections to the unit must be flexible to avoid transmitting vibrations.

9.2. CLEARANCE

When choosing the location for the **SYSAQUA**, take care to leave sufficient free clearance on all sides to ensure easy access for maintenance work.

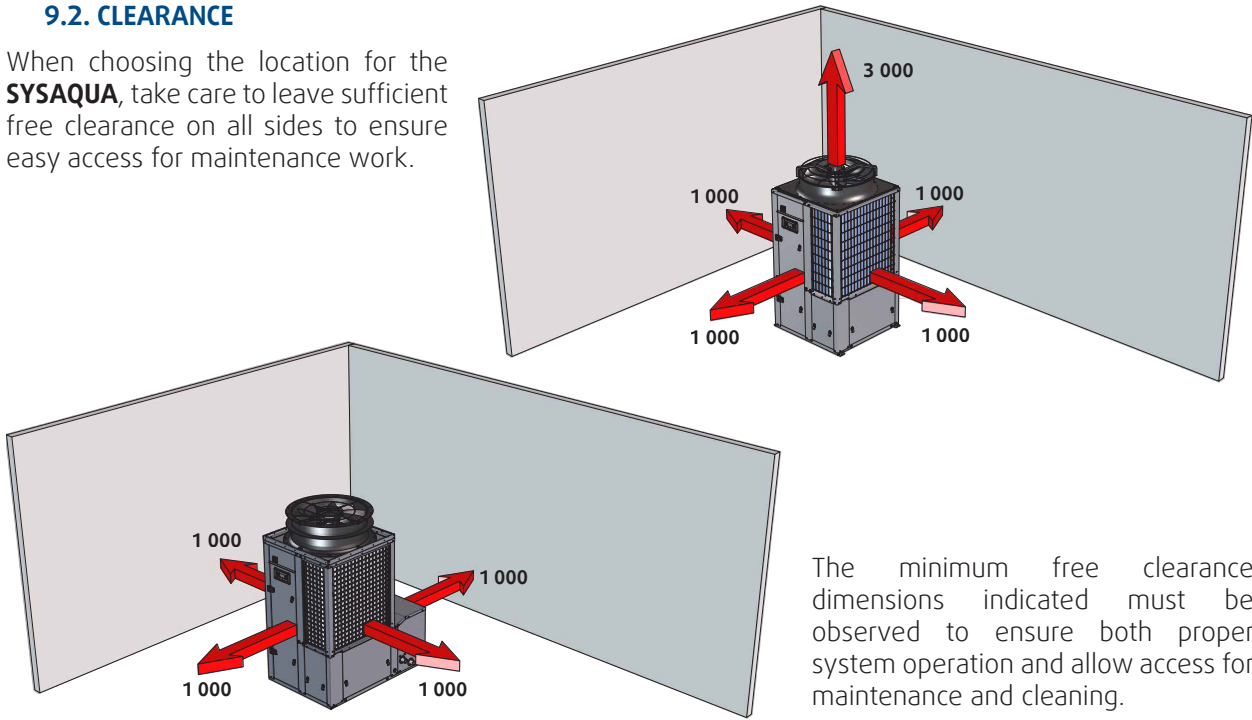

The minimum free clearance dimensions indicated must be observed to ensure both proper system operation and allow access for maintenance and cleaning.



**Caution** When several **SYSAQUA** units are installed, ensure proper clearance is implemented around the condensers specific to each machine.

9.3. ATTACHMENT TO THE GROUND

The surface of the floor or structure located under the **SYSAQUA** must be flat, and with sufficient strength to withstand the unit's weight with its full liquid load, and occasional presence of maintenance equipment. The **SYSAQUA** does not require anchoring on the foundations, except in regions exposed to a high earthquake risk or if the device is installed on a high level on a steel frame.

SYSAQUA 20/25/30/35/40

SYSAQUA 20/25/30/35/40 WITH BUFFER TANK

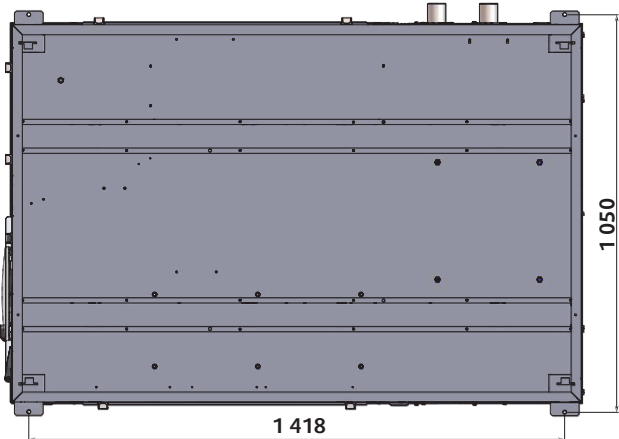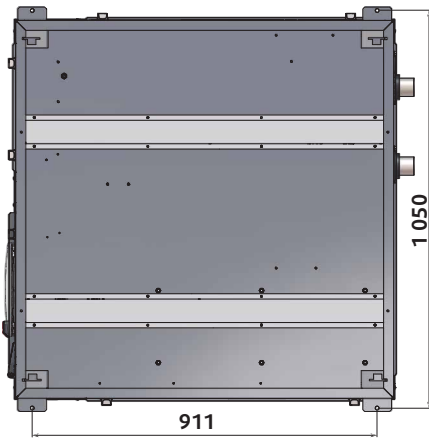

For normal applications, rigidity of the **SYSAQUA** and the positions of supports allow for an installation minimizing vibrations. However, the installers can use anti-vibration rubber pads (supplied in option).

When fitting anti-vibration pads, refer to the manual supplied with the kit.

## 10. HYDRAULIC LINKS



### Caution

When choosing and installing water pipes, you must consult and observe all current local standards, regulations and instructions.

### 10.1. MAIN HYDRAULIC CIRCUIT



### Caution

The mains hydraulic circuit will provide a constant water flow on the refrigerating fluid/water plate exchanger and in case of load variation.

You must design the pipe network with the minimum number of bends and keep the number of changes in height to the strict minimum. This will reduce installation costs and ensure optimum system performance. The pipe network must include:

- A vibration elimination system (e.g.: link hoses) on all pipes connected to the appliance in order to reduce vibrations and noise transmitted to the building fabric.
- A balancing valve on the water outlet pipe in order to adjust the water flow.
- Stop cocks to isolate the hydraulic circuit during maintenance.
- Manual or automatic bleed valves at the highest point on the water circuit.
- Draining connectors at all low points to allow complete circuit draining.
- A circulation pump guaranteeing flow necessary for the operation of the **SYSAQUA** unit.
- A diaphragm expansion tank fitted with a safety and draining valve must be visible.
- A low water pressure sensor to secure the water pump against cavitation if the water pressure in the circuit decreases.
- The installation of thermometers and pressure gauges on the heat exchanger inlet and outlet to facilitate day-to-day controls and system maintenance.
- An element ensuring ground continuity of all piping. An unbalance of grounding connection points can cause corrosion electrolytic.



### Caution

The expansion tank must be dimensioned to be able to absorb an expansion corresponding to 2% total volume of water contained in the installation (exchanger, piping, installations and buffer tank, if present).



### Caution

**THE WARRANTY DOES NOT COVER DAMAGE DUE TO CORROSION RESULTING FROM ELECTROLYTIC PHENOMENA.**


### 10.2. ANTI-CLOGGING PROTECTION



### Caution

**To avoid any risk of foreign bodies entering the appliance and to guarantee operating performance, IT IS IMPERATIVE TO INSTALL WATER FILTER on the SYSAQUA inlet pipe.**

Failing that, **SYSAQUA's** heat plate exchanger would clog up soon after being commissioned. Proper operation of the **SYSAQUA** would be disturbed by a reduced water flow or the partial blockage of certain heat plates. The heat plate exchanger could be **IRREVERSIBLY** damaged if the water flow were not sufficiently high. A link smaller than or equal to 800µm is recommended

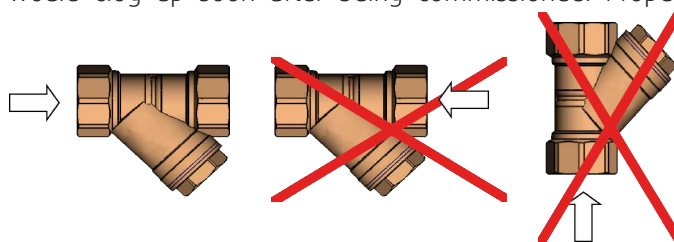

### Caution

**THE MANUFACTURER'S WARRANTY IS VOID IF THE FILTER SUPPLIED WITH THE SYSAQUA IS NOT INSTALLED TO PROTECT THE APPLIANCE**

### 10.3. MINIMUM WATER VOLUME REQUIREMENTS

To ensure that the system operates correctly you must use suitably sized and properly routed pipes for the hydraulic links between the **SYSAQUA** and the mains network. Proper operation of the regulation and safety devices is ensured only when the water volume is sufficient.

**For refrigeration only units**, the total volume on the level of the primary water circuit must never below:

- application air conditioning
  - ✓ 3.5 L/kW refrigeration power
- application process
  - ✓ 10 L/kW refrigeration power

**For reversible units**, a water volume equal to 12.5 L/kW is recommended, so that energy reserves are full enough to ensure the defrosting cycle without any discomfort for the end user.

If the total volume of the primary hydraulic circuit does not allow to reach these recommendations, a buffer tank must be added to the installation to increase the water volume up to the value required.

If the unit runs with a low volume of water (with air treatment plant...) or if it is used for industrial processes, a buffer tank is compulsory to guarantee sufficient thermal inertia and satisfactory temperature stability.

Internal water tank :

- **SYSAQUA 20-25-30-35-40** ⇨ 100L

#### 10.3.1. SYSAQUA COOLING ONLY VERSION

		20	25	30	35	40
Minimum water volume in the system application air conditioning	L	71	93	99	132	137
Minimum water volume in the system application process	L	204	266	283	376	393

#### 10.3.2. SYSAQUA HEAT PUMP VERSION

		20	25	30	35	40
Minimum water volume in the system	L	244	336	371	466	520

### 10.4. MAXIMUM WATER VOLUME REQUIREMENTS

The maximum water volume is limited by the sizing of the unit's expansion tank and/or the expansion tank present in the facility's hydraulic circuit. Expansion tanks must be sized according to the glycol percentage in the hydraulic circuit.

The expansion tank should be installed at the pump suction, and the pressure inside will be adjusted by taking into account the whole hydraulic circuit.

The volume of the expansion tanks selected with Single pump and double pump options are :

		20	25	30	35	40
volume of the expansion tank supplied with hydraulic options	L	8	8	8	8	8

### 10.5. RINSING THE CIRCUIT



#### Caution

Before filling the installation, check it and remove any contamination such as sand, stone, welding chips and other materials likely to damage the **SYSAQUA**.

Fully rinse all water pipes before final connection to the **SYSAQUA**.

When using an off-the-shelf acid rinsing solution, implement a temporary branching around the **SYSAQUA** to prevent damaging internal components (particularly the plate exchanger, flow switch, pump...).



## 10.6. FROST PROTECTION

If the **SYSAQUA** is exposed to ambient temperatures between 1°C and -18°C, protect the water circuit against frost.



### Caution

#### THE USE OF A GLYCOL-BASED SOLUTION IS THE ONLY EFFECTIVE FROST-PROTECTION MEANS

The glycol-based water solution must be sufficiently concentrated to ensure appropriate protection and prevent ice from forming at the minimum outdoor temperatures planned for the installation. Take precautions when using non inert MEG antifreeze solutions (Mono Ethylene Glycol or MPG Mono Propylene Glycol). With this type of antifreeze solution, corrosion may occur in the presence of oxygen.

Contact glycol resellers to ensure that its characteristics are compatible with environmental directive applicable on site (this is not under manufacturer responsibility).



### Caution

The glycol percentage in the installation's hydraulic circuit must be entered in the regulation upon start-up. This parameter setting changes the safety and alarm triggering threshold limits. An incorrect value may cause malfunctions and a destruction of the unit's heat exchanger.



### Avertissement

It is strongly recommended to post, on the electric box of the unit, glycol type and concentration in the hydraulic circuit.

The glycol-based solution slightly modifies the installation's performance, particularly in terms of load loss:

Minimum outdoor temp.		°C	5 > T > 0	0 > T > -5	-5 > T > -10	-10 > T > -30
Mono Ethylene Glycol concentration		%	10	20	30	45
Correction factor	load loss		1.070	1.160	1.235	1.368
	water flow		1.015	1.050	1.085	1.169
	thermodynamic power		0.995	0.985	0.970	0.949

Minimum outdoor temp.		°C	5 > T > 0	0 > T > -5	-5 > T > -10	-10 > T > -27
Mono Propylene Glycol concentration		%	10	20	30	45
Correction factor	load loss		1.112	1.175	1.290	1.520
	water flow		1.005	1.030	1.067	1.162
	thermodynamic power		0.991	0.977	0.945	0.894

Example for a solution with 20% Mono Ethylene Glycol:

- Increase the pressure drop : with glycol = 1.160 x without glycol
- Increase the flowrate : with glycol = 1.050 x without glycol
- Decrease the capacity : with glycol = 0.985 x without glycol

Draining the water circuit is not recommended for frost protection, for the following reasons:

- The water circuit will rust, which will shorten its lifetime.
- Water will remain at the bottom of the plate exchangers and freezing may cause damage.



### Caution

Never fill the hydraulic circuit with pure glycol. Maximum glycol concentration is 45%. The water and glycol mixture must be precisely prepared before filling the hydraulic circuit. If the mixture is too much concentrated, the hydraulic could be damaged and the unit **SYSAQUA** should not perform normally. **In this case, unit guarantee will be cancelled.**



### Caution

For heatpump models, if the outdoor temperature is likely to fall below +1°C, provide a system to prevent the condensates from freezing (e.g. heating cord).

## 10.7. WATER QUALITY

The water must be analyzed; the hydraulic network system installed must include all elements necessary for water treatment: filters, additives, intermediate exchangers, drain valves, vents, check valves, etc., according to the results of the analysis.



### Caution

**The SYSAQUA must not run on a network with open loops, likely to cause incidents related to oxygenation, or with non treated table water.**

Using improperly treated or non treated water in the **SYSAQUA** may cause scaling, erosion, corrosion or algae or sludge deposits in the exchangers. Refer to a specialist skilled in water treatment to determine any treatment to apply. The manufacturer will not be held liable for damages caused when non treated or improperly treated water, demineralized water, salty water or sea water are used.

Apply the following guidelines :

- No  $\text{NH}_4^+$  ammonium ions in the water, highly detrimental to copper. <10mg/l
- Cl<sup>-</sup> chloride ions are detrimental to copper with a risk of puncture by picking corrosion. <10mg/l.
- $\text{SO}_4^{2-}$  sulphate ions may cause perforating corrosion. < 30mg/l.
- No fluoride ions (<0.1 mg/l)
- No  $\text{Fe}^{2+}$  and  $\text{Fe}^{3+}$  ions, particularly in case of dissolved oxygen. Fe < 5mg/l with dissolved oxygen < 5mg/l. The presence of these ions with dissolved oxygen indicates corrosion of steel parts, likely to generate corrosion of copper parts under Fe deposits, particularly in the case of multitubular exchangers.
- Dissolved silica: silica is an acid element of water and may also cause corrosion. Content < 1mg/l.
- Water hardness: Values between 10°fH and 30°fH may be recommended. This facilitates scaling deposits likely to limit copper corrosion. Excess TH values may lead to clogging the pipes.
- TAC < 100
- Dissolved oxygen: Prevent any sudden change in the water's oxygenation conditions. Also, avoid deoxygenating water by sparging inert gas as well as overoxygenating it by pure oxygen sparging. Disturbing oxygenation conditions destabilizes copper hydroxides and particle salting-out.
- Electrical Resistivity - Conductivity: The higher the resistivity, the slower the corrosion. Values above 3000 ohm/cm are preferred. A neutral environment favours maximum resistivity. For electrical conductivity, values around 200-600 S/cm can be recommended.
- pH: neutral pH at 20°C (7 < pH < 9)



### Caution

**If the water circuit is to be drained for a time exceeding one month, the circuit must be fully charged with nitrogen to prevent any risk of corrosion by differential venting.**



### Caution

The manufacturer is not liable for recommendations in terms of water treatment (call a specialized company).

However, this matter has a critical nature, and particular care must be given to ensure that the type of treatment applied is effective.

**The liability of the manufacturer or its representative will not be sought when non treated water or non compliant quality water is used.**

## 10.8. HEAT INSULATION

To guarantee proper energy efficiency and compliance with current standards, water pipes passing through uninhabited zones should be properly lagged to retain heat.

To achieve correct insulation with conductivity of 0.04 W/mK, lag the pipes with insulating material with a radial thickness between 25mm and 30 mm.

## 10.9. FILLING THE SYSTEM WITH WATER



### Caution

FILLING OR DRAINING THE WATER CIRCUIT MUST BE PERFORMED BY SKILLED PERSONS USING THE APPROPRIATE DEVICES ON THE EXTERNAL HYDRAULIC CIRCUIT BY THE INSTALLER.

It is important to ensure that the mains water supply pressure is sufficient to fill the installation.


Once the installation is complete and after having clean and rinsed out the circuit network, you must fill the water circuit in accordance with current professional standards until you obtain the service pressure which will be:

**0.5 bar < Service Pressure < 2.5 bar**

A 3.5 bar safety valve is mounted in the unit when hydraulic options are selected (single or double pump).

Always check that the manual or automatic air drains are installed at all the high points of the hydraulic network.

When two or three units are connected in parallel, it is recommended that the return circuit connections are reversed (Tickelman loop system) in order to reduce the pressure loss in each unit's circuit.

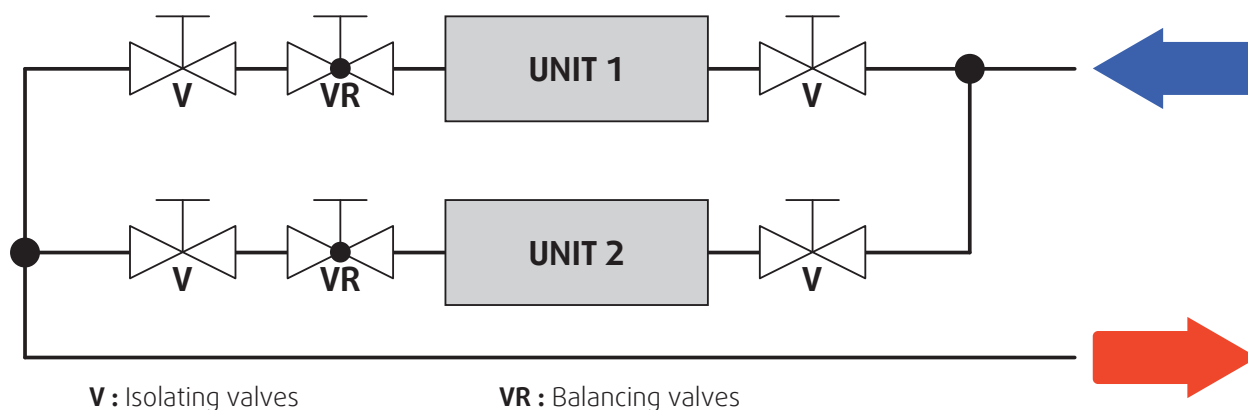


Install a balancing valve on the output pipe to adjust the water flow.



### Caution

The water inlets and outlets must be connected as described on the labels affixed near the connections.

When the hydraulic pump option is selected, a safety valve is mounted (factory assembled) at the Aqualogic water inlet to prevent from over pressure in the circuit. The installer has to put a pipe at the safety valve outlet for water evacuation.

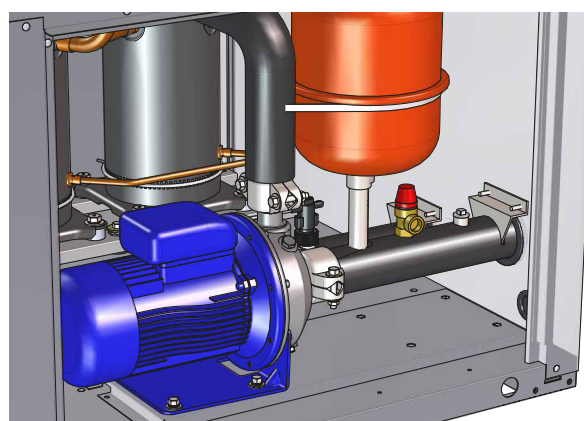

## 11. WIRING DIAGRAM AND LEGEND

### 11.1. WIRING DIAGRAM

# SEE APPENDIX

### 11.2. LEGEND

## N805

POL 423.50		POL 688			
SE4630	SE4746	models 20 to 55		Control	Mono 230V 50Hz +/- 10%
SE4629	SE4745	models 20 to 55		Power	Tri 400V+N 50Hz +/- 10%
SE4636	SE4752	models 20 to 55 all seasons		Control	Mono 230V 50Hz +/- 10%
SE4635	SE4751	models 20 to 55 all seasons		Power	Tri 400V+N 50Hz +/- 10%
SE4641	SE4757	models 20 to 125 Soft Starter		Power	Tri 400V+N 50Hz +/- 10%
SE4711	SE4758	models 20 to 125 Variable flow simple pump		Power	Tri 400V+N 50Hz +/- 10%

#### 11.2.1. POWER SUPPLY

Power cable must be connected to the main power supply switch QG (Copper cable is recommended).

The supply is protected at the head by an FFG main fuse holder supplied by the installer. It must be fitted next to the unit. Refer to the § **ELECTRIC SPECIFICATIONS**, page 10

The electrical installation and wiring of this unit must comply with local electrical installation standards.

- Three phase 400 V~ 50Hz + Neutral + Ground :
  - On the L1, L2, L3, N terminals of the QG section switch
  - On the ground screw of the earth cable.
- Three phase 400 V~ 50Hz + Ground :
  - On the L1, L2, L3 terminals of the QG section switch
  - On the ground screw of the earth cable.

#### 11.2.2. WIRING DIAGRAM KEY DESCRIPTIONS

# SEE APPENDIX

#### 11.2.3. RANGE AND SETTINGS OF THEMAL PROTECTION / NOMINAL INTENSITY OF THE CONTACTORS (CLASSE AC3)

MODELS		20	25	30	35	40
FTI	Range	6-10A	9-14A	9-14A	13-18A	13-18A
	Adjustment	8A	10A	11A	14.5A	15.5A
FT2	Range	6-10A	9-14A	9-14A	13-18A	13-18A
	Adjustment	8A	10A	11A	14.5A	15.5A
FTOF-L	Range (STD)	1-1.6A	1.6-2.5A	1.6-2.5A	1.6-2.5A	1.6-2.5A
	Adjustment (STD)	1.25A	1.8A	1.8A	2.2A	2.2A
	Range (HPF)	/	4-6.3A	4-6.3A	4-6.3A	4-6.3A
	Adjustment (HPF)	/	4A	4A	4A	4A
FTOF-H	Range (STD)	1-1.6A	1.6-2.5A	1.6-2.5A	1.6-2.5A	1.6-2.5A
	Adjustment (STD)	1.25A	1.8A	1.8A	2.2A	2.2A
	Range (HPF)	/	4-6.3A	4-6.3A	4-6.3A	4-6.3A
	Adjustment (HPF)	/	4A	4A	4A	4A
FTWP	Range	1.6-2.5A	1.6-2.5A	1.6-2.5A	2.5-4A	2.5-4A
	Adjustment	1.8A	1.8A	1.8A	2.6A	2.6A
<b>Contactors</b>						
KOF / KOF-L	STD	6A	6A	6A	6A	6A
	HPF	/	6A	6A	6A	6A
KWP1/2		6A	6A	6A	6A	6A

## 12. ELECTRICAL CONNECTIONS

### WARNING



Before carrying out any work on the equipment, make sure that the electrical power supply is disconnected and that there is no possibility of the unit being started inadvertently. Non-compliance with the above instructions can lead to injury or death by electrocution.

The electrical installation must be performed by a fully qualified electrician, and in accordance with local electrical standards and the wiring diagram corresponding to the unit model.


Any modification performed without our prior authorisation may result in the unit's warranty being declared null and void.

The power supply cable section must be sufficient to provide the appropriate voltage to the unit's power supply terminals, both at start-up and under full load operating conditions.

The power supply cable shall be selected in accordance with the following criteria:

1. Power supply cable length.
2. Maximum unit starting current draw – the cables shall supply the appropriate voltage to the unit terminals for starting.
3. Power supply cables' installation mode.
4. Cables' capacity to transport the total system current draw.

The use of fuse to protect the units against short circuits is recommended. The fuse sizes are displayed in the table in § **ELECTRIC SPECIFICATIONS**, page 10

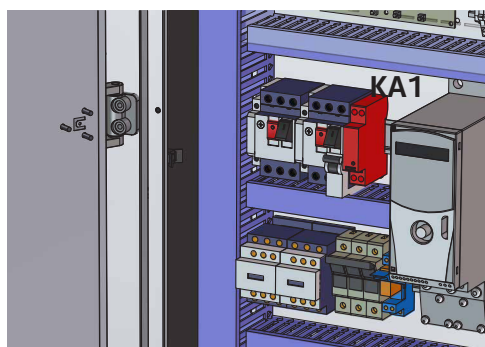

#### **VERY IMPORTANT:**

**3N~400V-50HZ**

The outdoor unit is equipped as standard with a phase sequence and cut-out controller located in the electrical box.

#### **THE LED'S INDICATE THE FOLLOWING CONDITIONS:**

**Green LED = 1**

**Yellow LED =1**

Power ON

The compressor rotation direction is correct.

**Green LED = 1**

**Yellow LED =0**

Phase inversion or phase absent (L1)

The compressor and the fans do not start.

**Green LED = 0**

**Yellow LED =0**

Phase absent (L2 or L3)

The compressor and the fans do not start.



#### **Caution**

**Before connecting the supply lines, check that the voltage available is within the limits specified (Refer to the § ELECTRIC SPECIFICATIONS, page 10).**

Voltage differences between each phase do not have to exceed 2 %.

If the unbalance is unacceptable, call the distribution company to have this anomaly corrected.

**Caution**

Supplying the unit with a line with an unbalance exceeding the acceptable value results in cancelling the warranty.

**Caution**

Correction of the excessive centralized power factor ( $>0.95$ ) may generate transient phenomena dangerous for the motors and contactors of the unit during the start and stop phases. Check instant voltages during these phases.

These units are equipped with a local switch used as general terminal board.

### 12.1. SYSAQUA 20 - 25 - 30 - 35 - 40



The supply cables of the units must be routed up to the section switch through the grommets present on the front panel of the units.

To ensure proper contact, fit the end pieces adapted to the cross-section of the connecting cable.





**Maximum cross-section of the power supply cables:  $35\text{mm}^2$**

**copper cable only**

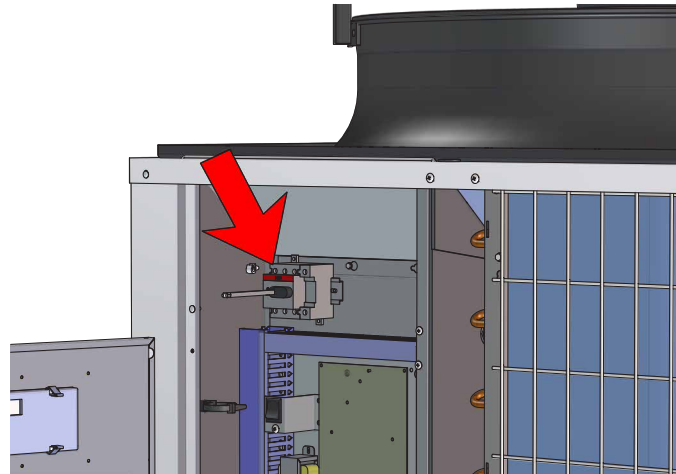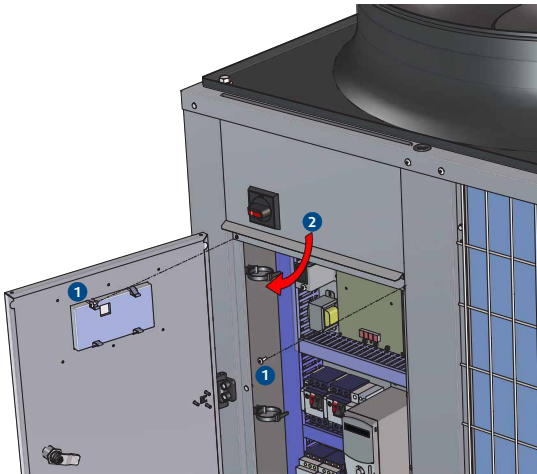

## 12.2. OPTIONS ALL SEASONS AND VARIABLE FLOW PUMP

If you have an IT (ungrounded) system or corner-grounded TN system, disconnect the internal EMC filter by removing the EMC screw.

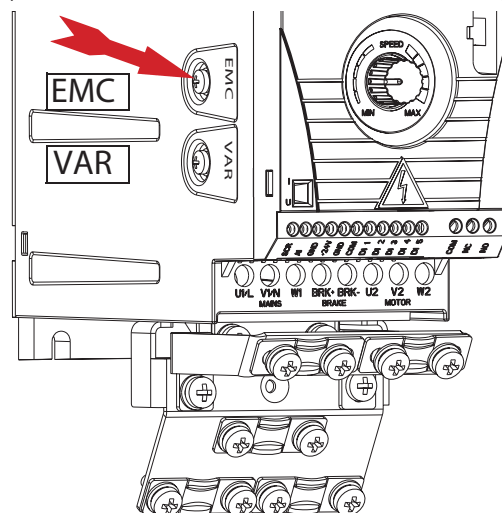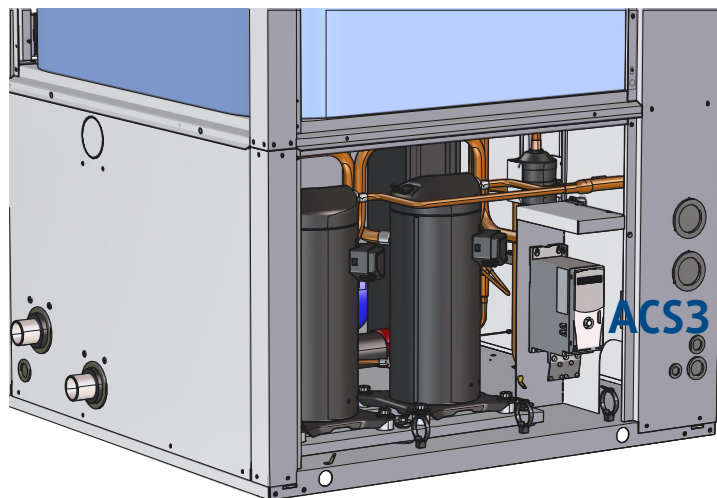

### SYSAQUA 20 - 25 - 30 - 35 - 40 OPTION "VARIABLE PRIMARY FLOW"



#### Caution

Disconnect the internal EMC filter when installing the drive on an IT system (an ungrounded power system or a high-resistance-grounded [over 30ohms] power system), otherwise the system will be connected to ground potential through the EMC filter capacitors. This may cause danger or damage the drive.

Disconnect the internal EMC filter when installing the drive on a corner-grounded TN system, otherwise the drive will be damaged.

## 13. REGULATION


**SYSAQUA** units are fitted with an electronic control system. It provides the command, control and alarm functions.

### 13.1. ORDER OF PRIORITY FOR CONTROL SYSTEMS

The integrated regulator in the **SYSAQUA** can be controlled by various interfaces and systems. The order of priority for each drive system is as follows:

1. Timing programming: this scheduling is integrated in the regulator
2. The BMS : the remote supervision transmits it commands according to the communication protocols
3. The HMI: the commands are given by the user directly on the unit (integrated display) or remotely (remote display)
4. Digital inputs: the client can transmit commands electro-mechanically over 2 dry contacts:

- ✓ Input D1: ON/OFF
- ✓ Input D2: configurable

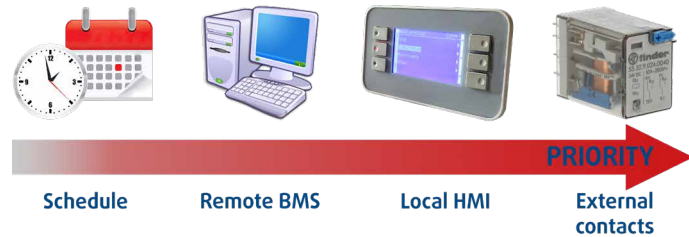

### 13.2. USER INTERFACE

This terminal has a liquid crystal display and has 6 buttons.



#### 13.2.1. KEYPAD

INFO	From any screen, this button returns the user to the main menu or home screen and, like the ESCAPE button, invalidates a current modification.
ALARM	When pressing the alarm button (the red LED flashes if an alarm is active), the alarm management menu is displayed. (see § alarms)
ESCAPE	Returns to the previous level in the menu tree. Pressing this button during modification invalidates the change being made and returns the user to the previous menu. This function is very important if a setting is inadvertently modified.
UP/DOWN	These buttons have two functions. <ol style="list-style-type: none"> <li>1. In a menu, they are used to move up and down the list of possible options.</li> <li>2. They can change the value of a setting when it has been selected.</li> </ol>
ENTER	This button has three functions <ol style="list-style-type: none"> <li>1. It is used to access a submenu</li> <li>2. Activate the modification of a setting</li> <li>3. Validate the modification of a setting</li> </ol>



### 13.2.2. HOME PAGE

The home page is used to quickly display the state of the machine by displaying the following information:

- Operating mode
- Water return temperature
- Water flow temperature

	<b>Main overview</b>	1/3	
	Current mode	Red. H	
	Entering water T.	42.3°C	
	Leaving water T.	45.2°C	

### 13.2.3. MAIN MENU

Pressing the "Info" button displays this screen directly.

The authorized menus are displayed according to the access level selected:

	<b>Main Menu</b>	1/2	
	Status		
	Access		

Access level	Final user	Installer	Maintenance
Menu "Access"	✓	✓	✓
Menu "Status"	✓	✓	✓
Menu "Commissioning"	✗	✓	✓
Menu "Service"	✗	✗	✓
Menu "Alarms"	✓	✓	✓

### 13.2.4. MENUS

<b>Main Menu</b>	1/4	
Status		
<b>Commissioning</b>		
Services		
Access		

The display has several menus. The "Status" menu is freely accessible. The other "Installation" and "Maintenance" menus can be displayed and accessed according to the access level.

To change the access level, go to the "Access" menu and enter the password corresponding to the level.

The first line of all the screens integrates the following information:

- Screen title
- Number of the active line/number of lines of the menu
- Access level

- ✓ Final user
- ✓ Installer
- ✓ Maintenance

### 13.3. INITIAL SETTINGS

Open the electrical box and check that all circuit breakers are open except for **FTC**.

Before starting up the **SYSAQUA** for the first time, the "Installation" menu must be configured.

#### 13.3.1. TIME SETTINGS




#### Caution

**If the date and time are not set, the unit will function in degraded mode or may not even be able to start.**


Start by configuring the date and time.

To do so, switch to the "Installer" or "Maintenance" profile in the "Installation" section. The first line of the menu is used to set the date and time.

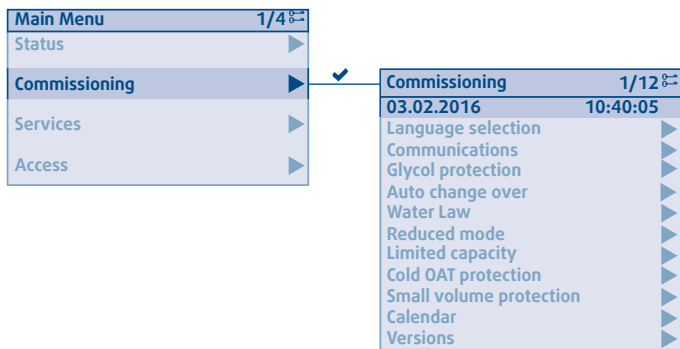


The date and time line will appear as highlighted.

Press the "Enter" button ✓ to activate the change in date.

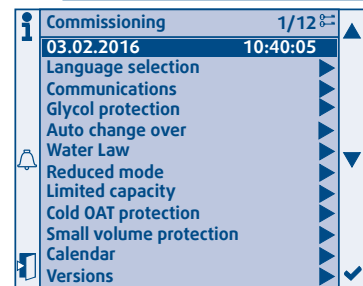

The ▲ and ▼ buttons are used to change the highlighted setting.

Press once on the ✓ button to approve the defined value and move on to the next setting.

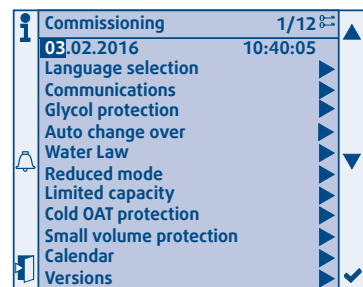


#### Information

Power outage lasting longer than 8h will lead to a loss of the time setting. It is important to set the unit back to the right time after such an event.


#### 13.3.2. LANGUAGE SETTINGS

Select the languages required according to the application.

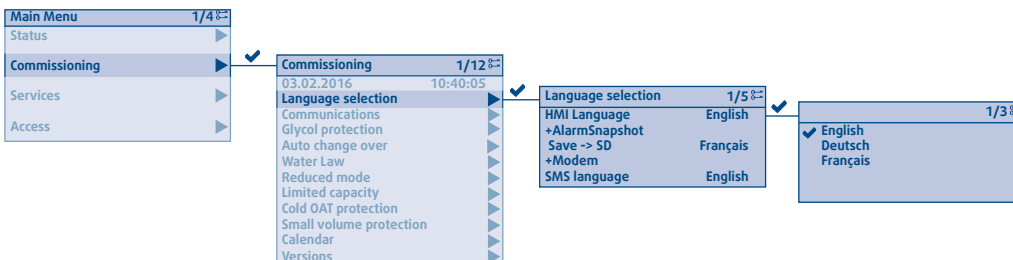

### 13.3.3. DEFINING THE GLYCOL RATE

Define the type and glycol content present in the installation water circuit.

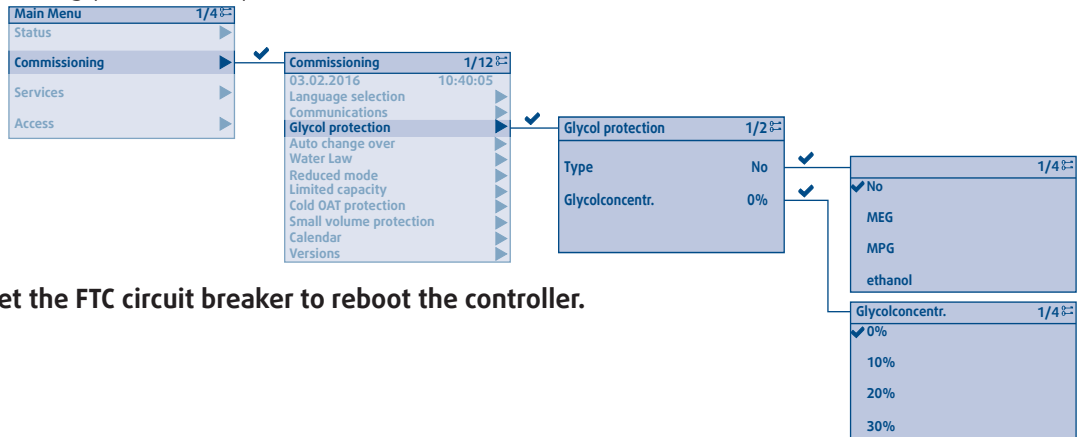


Open then reset the FTC circuit breaker to reboot the controller.

### 13.4. LAUNCHING THE SYSAQUA SYSTEM


#### 13.4.1. CONFIGURING INPUT D1

During installation, an on/off switch can be connected remotely onto the D1 input.

This input's behavior must be defined. **This input takes priority over all other control systems.**

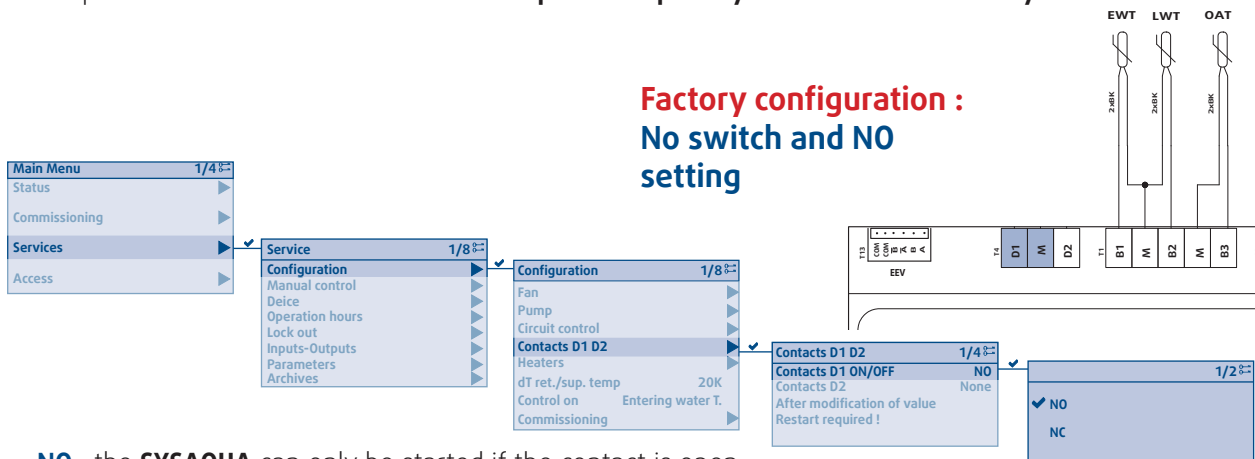

**NO** : the SYSAQUA can only be started if the contact is open.

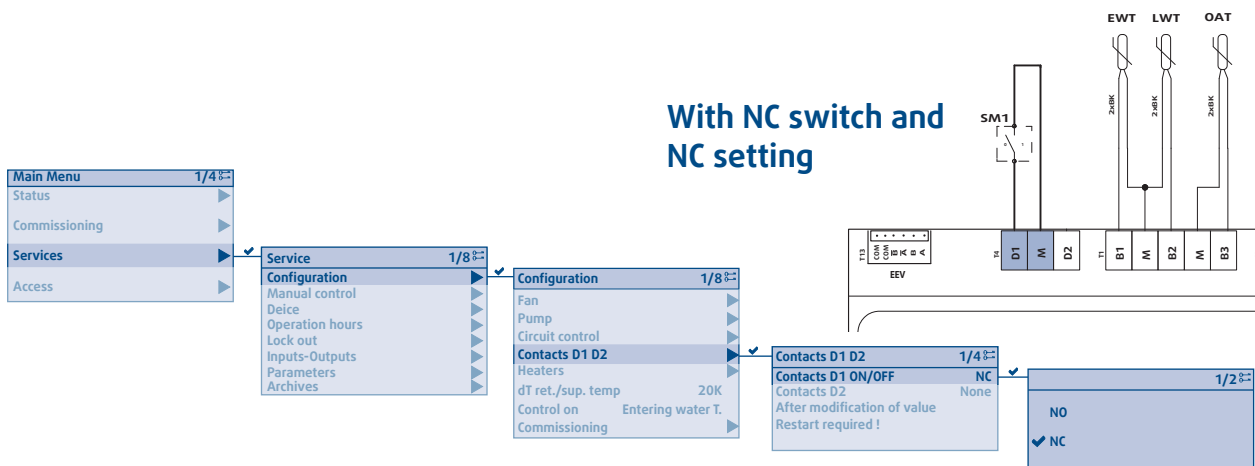

**NC** : the SYSAQUA can only be started if the contact is closed.





**Caution**

If the settings are changed, open then reset the FTC circuit breaker to reboot the controller.

### 13.4.2. CONFIGURING INPUT D2

During installation, a switch can be connected onto the D2 digital input.

The operating mode defined for this input takes priority over all control systems such as the HML, BMS or calendar.

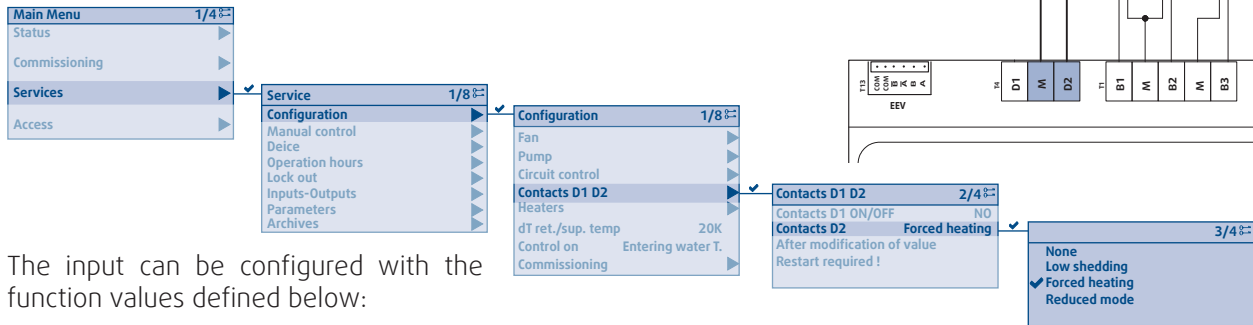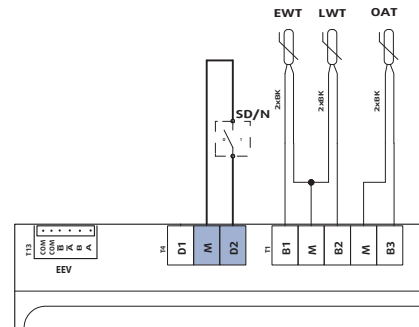

The input can be configured with the function values defined below:

- None
- Low shedding
- Forced Heating
- Reduced mode


Further information regarding this contact's configuration can be found in their § **CASCADE OF PRIORITIES**, page 30 user manual.

### 13.4.3. HEAT/COOL SELECTION



#### Information

Selection of the heat/cool mode is only possible in reversible units. This menu does not exist in the "cool only" versions.

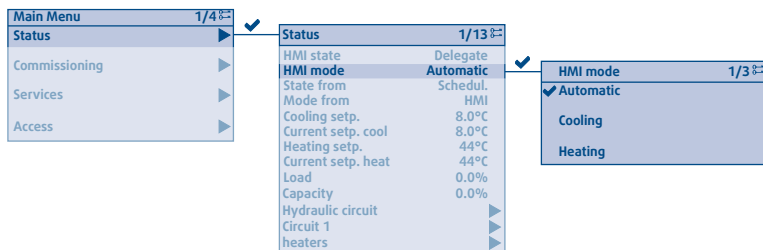

The operating mode can be chosen in the "HMI mode" :

- **Automatic** : delegated to the BMS/Auto-change-over (refer to the UM)
- **Cooling** : request for cool mode
- **Heating** : request for heat mode

The "Mode from" line states which element requested the current mode:

- **Contact: D2** configurable digital input
- **HMI**: user interface
- **BMS**
- **Schedul.**

Status 1/13	
HMI state	Delegate
HMI mode	Automatic
State from	Schedul.
<b>Mode from</b>	<b>HMI</b>
Cooling setp.	8.0°C
Current setp. cool	8.0°C
Heating setp.	44°C
Current setp. heat	44°C
Load	0.0%
Capacity	0.0%
Hydraulic circuit	
Circuit 1	
heaters	



#### Caution

The automatic change-over mode is activated if the local mode and the BMS mode are set to "Auto".

### 13.4.4. SELECTING THE OPERATING MODE

To launch the unit, the user must select the desired mode in the menu:


➤ **Delegate** : the current mode is determined by the BMS or by default by the calendar (refer to the user manual)

➤ **Off** : Unit is stopped

➤ **On** : System is launched

➤ **Reduced** : Refer to the § **REDUCED MODE**, page 33

➤ **Limited capacity** : Refer to the § **LIMITED CAPACITY**, page 33

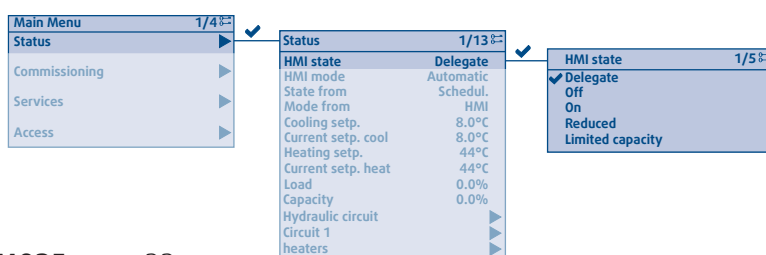

The "State from" line states which element requested the current status :


➤ **Cont.off** : on/off digital input

➤ **Cont.ext** : **D2** configurable digital input (in "Reduced mode" or "Limited capacity")

➤ **HMI**: User interface

➤ **BMS**

➤ **Schedul**

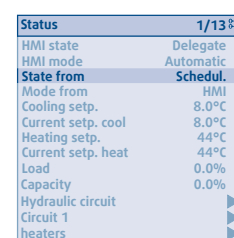


### 13.4.5. USER TEMPERATURE SETPOINTS AND ACTUAL SETPOINTS

In the Status menu, the user can set start or return temperature setpoints, according to the control mode selected:

➤ **Cooling setp** : temperature setpoint for the cool mode

➤ **Heating setp** : temperature setpoint for the heat mode

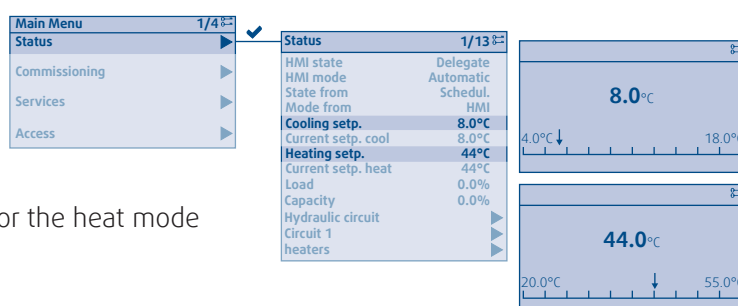


These setpoints are fixed and restricted to the unit's operating limits.

They can however be adjusted with the "Water law" and "Reduced mode" options, which are deactivated by default.

Regardless of the adjustment, the resulting setpoint is restricted to the operating limits to protect the unit.


Actual heat and cooling setpoints correspond to values used in real time, account taken of any adjustments and protections.

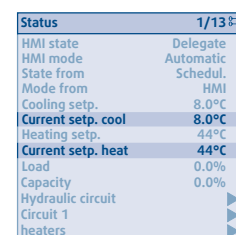

13.4.6. WATER LAW

The configuration of the different water law settings dynamically matches the setpoint according to the outside temperature.

The different parameters below for the water law can be set in the installation menu and by a GTC.

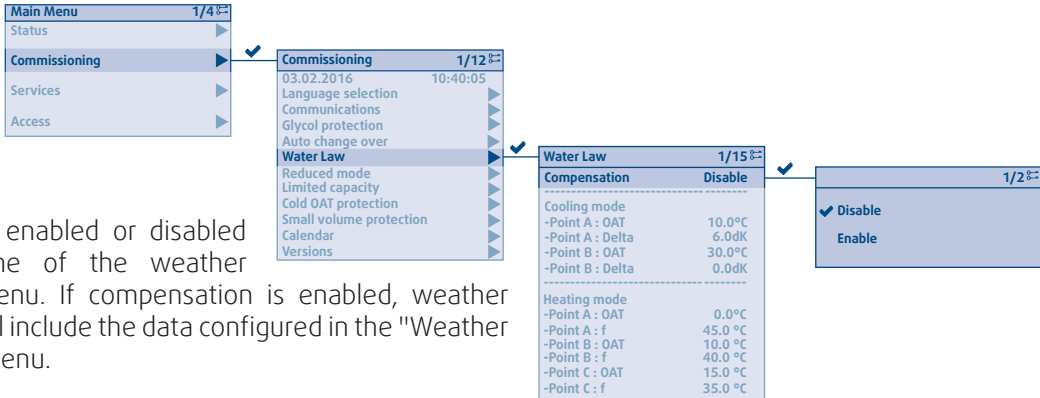

Compensation is enabled or disabled via the first line of the weather compensation menu. If compensation is enabled, weather compensation will include the data configured in the "Weather compensation" menu.

**Caution**


If the automatic heat/cool changeover mode is selected, weather compensation is enabled by default. The default weather compensation values are applied without using the weather compensation menu settings.

13.4.6.1. COOL MODE

The water law introduces correction  $\Delta$  which depends on the OAT outside temperature:

$\Delta$  water law setpoint = cool mode temperature setpoint +  $\Delta$ (OAT)

Correction  $\Delta$  is restricted between 0 and 8K. It is defined by points A and B in the graph below. The values indicated are factory values.

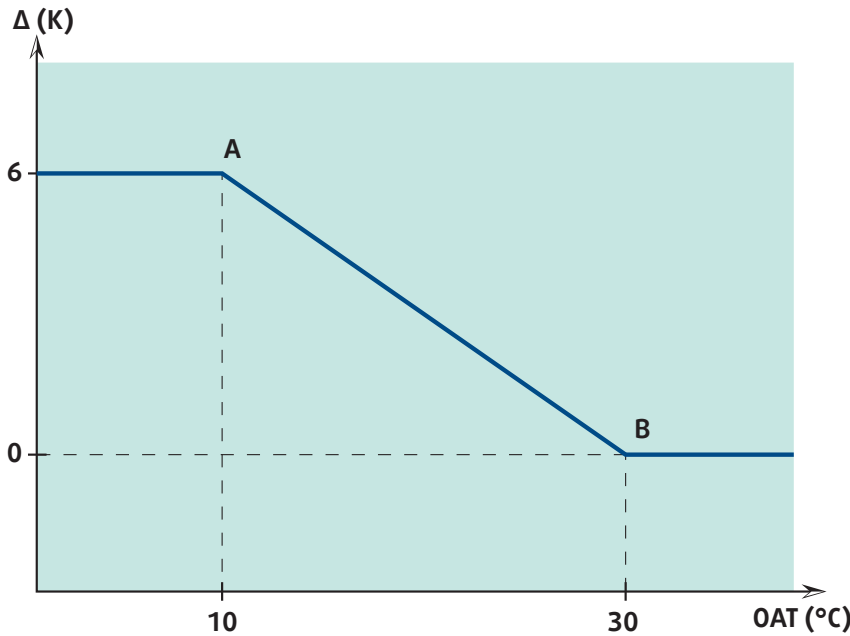

Water Law 1/15	
Compensation	Disable
-----	
<b>Cooling mode</b>	
-Point A : OAT	10.0°C
-Point A : Delta	6.0dK
-Point B : OAT	30.0°C
-Point B : Delta	0.0dK
-----	
<b>Heating mode</b>	
-Point A : OAT	0.0°C
-Point A : f	45.0 °C
-Point B : OAT	10.0 °C
-Point B : f	40.0 °C
-Point C : OAT	15.0 °C
-Point C : f	35.0 °C


Points	Coordinates	unit	Values		
			Min	Max	Default
A	OAT	°C	10	30	10
	$\Delta$	K	$\Delta_B$	8	6
B	OAT	°C	20	36	30
	$\Delta$	K	0	$\Delta_A$	0

### 13.4.6.2. HEAT MODE

The water law replaces the heat mode setpoint with the f function of the OAT outside temperature:

➤ water law setpoint =  $f(\text{OAT})$


Function f is restricted between 20 and 50°C. It is defined by points A, B and C in the graph below. The values indicated are factory values.

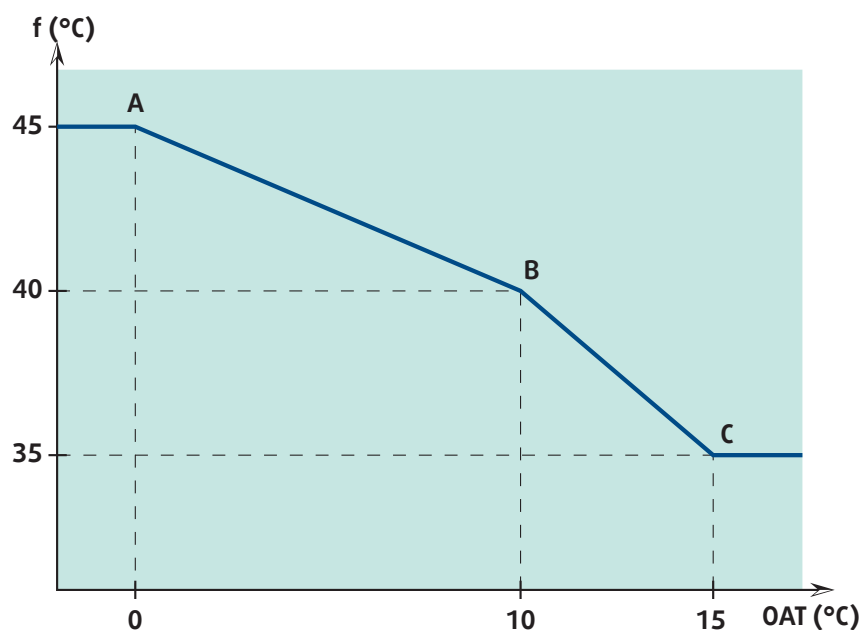

<b>Water Law</b>	1/15
<b>Compensation</b>	Disable
<b>Cooling mode</b>	
-Point A : OAT	10.0°C
-Point A : Delta	6.0dK
-Point B : OAT	30.0°C
-Point B : Delta	0.0dK
<b>Heating mode</b>	
-Point A : OAT	0.0°C
-Point A : f	45.0 °C
-Point B : OAT	10.0 °C
-Point B : f	40.0 °C
-Point C : OAT	15.0 °C
-Point C : f	35.0 °C

Points	Coordinates	unit	Values		
			Min	Max	Default
A	OAT	°C	-20	OAT <sub>B</sub>	0
	f	°C	f <sub>B</sub>	50	45
B	OAT	°C	OAT <sub>A</sub>	OAT <sub>C</sub>	10
	f	°C	f <sub>C</sub>	f <sub>A</sub>	40
CC	OAT	°C	OAT <sub>B</sub>	50	15
	f	°C	20	f <sub>B</sub>	35

### 13.4.7. "VARIABLE PRIMARY FLOW" OPTION

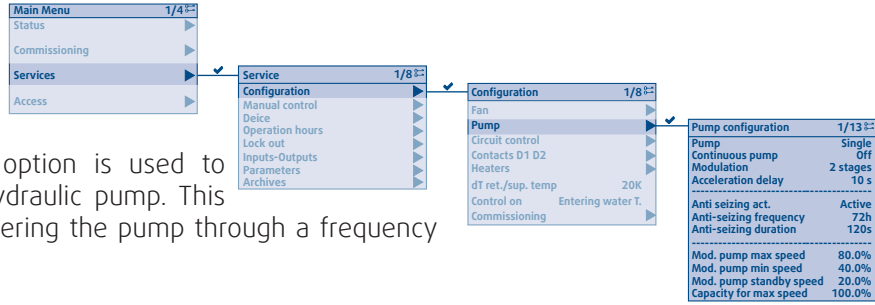

The "Variable Primary Flow" option is used to modulate the power of the hydraulic pump. This modulation is obtained by powering the pump through a frequency inverter.



**Caution**

The minimum frequency of the pump must not be less than the manufacturer's recommendations (e.g. 30Hz) and must ensure a sufficient rate for the unit (Refer to the § PHYSICAL CHARACTERISTICS, page 8).

#### 13.4.7.1. CONSTANT SPEED MODE

The pump operates at a fixed speed whatever the unit capacity. This speed is determined during commissioning to adjust the power of the pump to the load drops of the installation.




Setting	default	min	max
Mod. pump max speed	100%	0%	100%
Mod. pump standby speed	60%	0%	100%



### 13.4.7.2. CONSTANT SPEED MODE VS CAPACITY

The speed of the pump depends on the capacity of the unit. This speed range is determined during commissioning to adjust the power of the pump to the load drops of the installation.

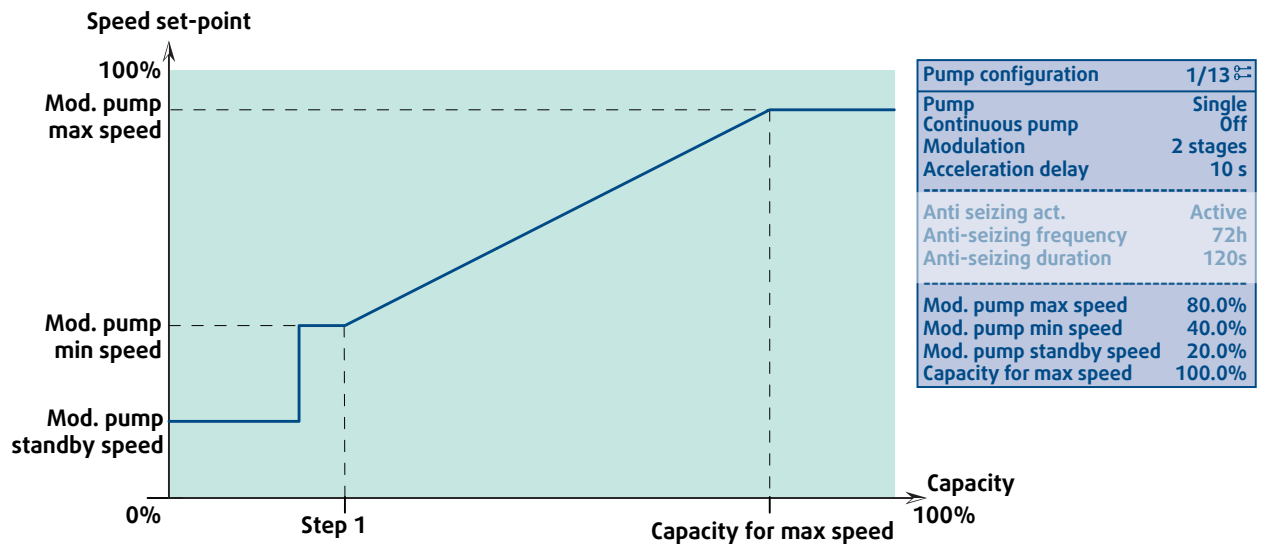

Setting	default	min	max
Mod. pump max speed	100%	0%	100%
Mod. pump min speed	70%	0%	100%
Mod. pump standby speed	60%	0%	100%
Capacity for max speed	100%	0%	100%


### 13.4.7.3. CONSTANT OUTPUT PRESSURE MODE

The frequency inverter controls the pump's speed to maintain an even water pressure at the output of the unit, regardless of the number of operating terminals.



#### Caution

The hydraulic facility must include a system that retains the required minimum water pressure when the terminals' two-way valves are shut.

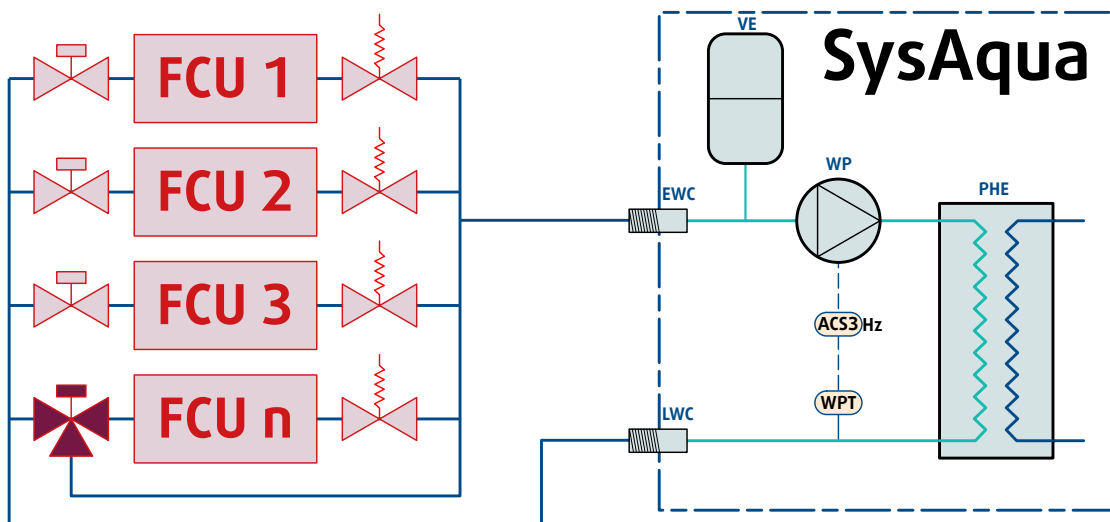


Installation of one or more three-way valves on the facility to maintain the minimum required pressure.

It is necessary to determine the pressure setting to be maintained in the system then set the frequency inverter according to this pressure value.

### 13.4.7.3.1. DETERMINATION OF THE PRESSURE SETTING

The frequency inverter **ACS3** displays the reading via the pressure transducer **WPT**.


1. Set all units in demand to open all the valves (load = 100%).
2. Check that the output is in line with **SYSAQUA** requirements.
3. Read the pressure value from the transducer (example: 3.5 bar).

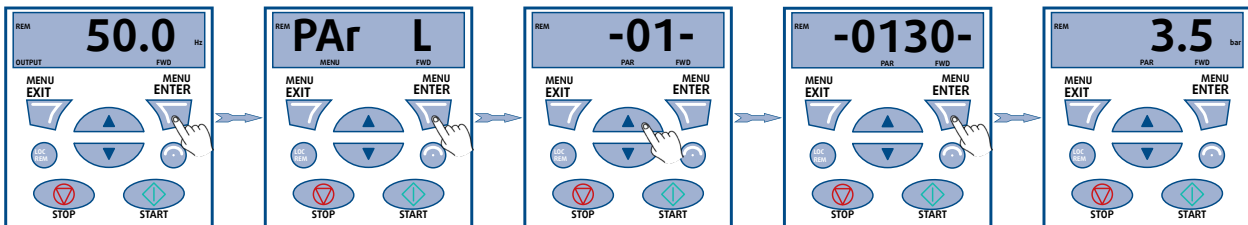

### 13.4.7.3.2. SETTING THE PRESSURE SETTING

The pressure setting is set in two stages:


1. Access parameter **4006** and set it to **22** to display units in bar.
2. Access parameter **4011** then set the required pressure setting (example 3.5 bar).

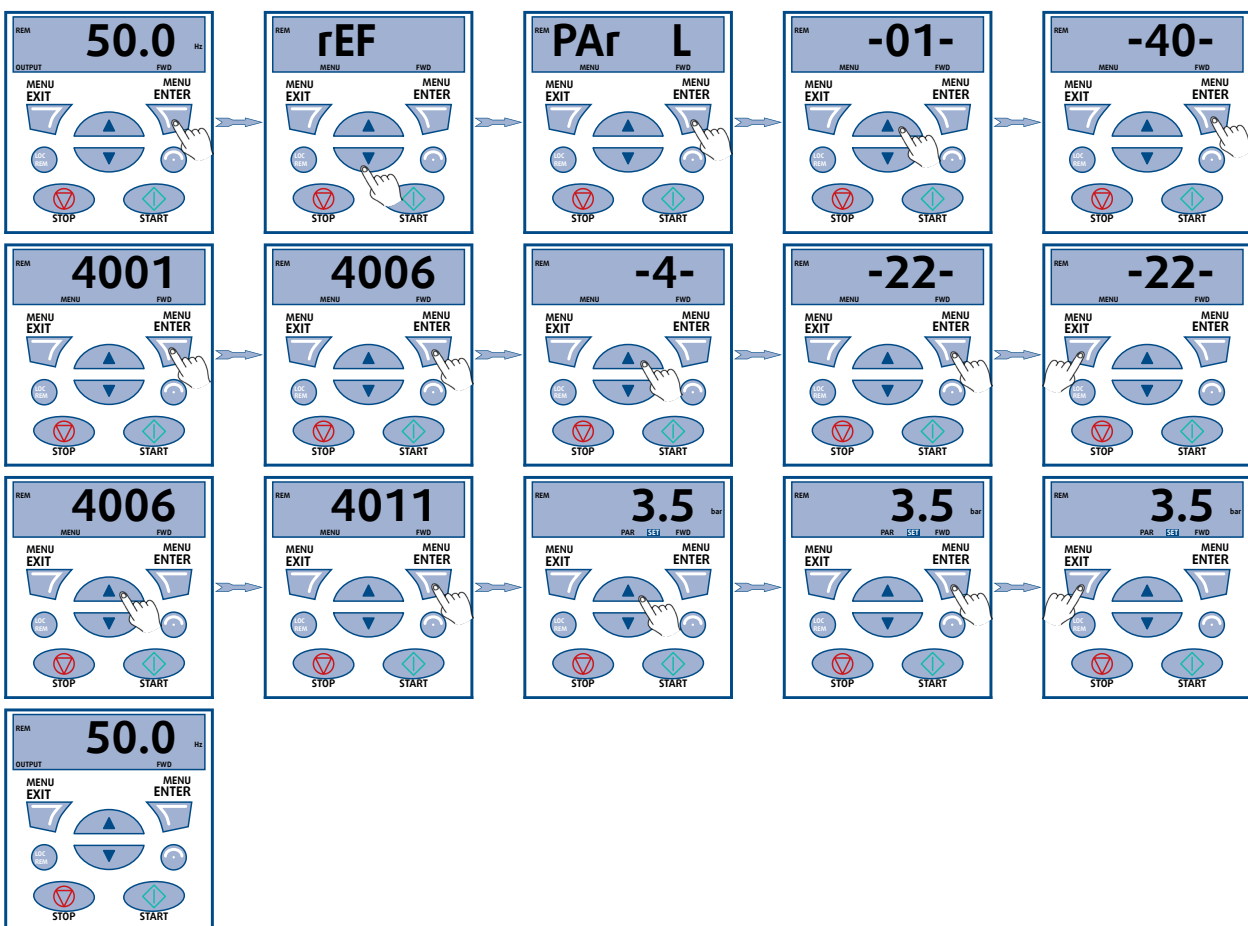

When the pressure setting is set, check that the system is operational in the following conditions:

- when in partial load, the pressure is constant.
- when at zero load (all units off), check that the inverter frequency has dropped to the minimum value and that no water pressure alarm is triggered

### 13.4.8. REDUCED MODE

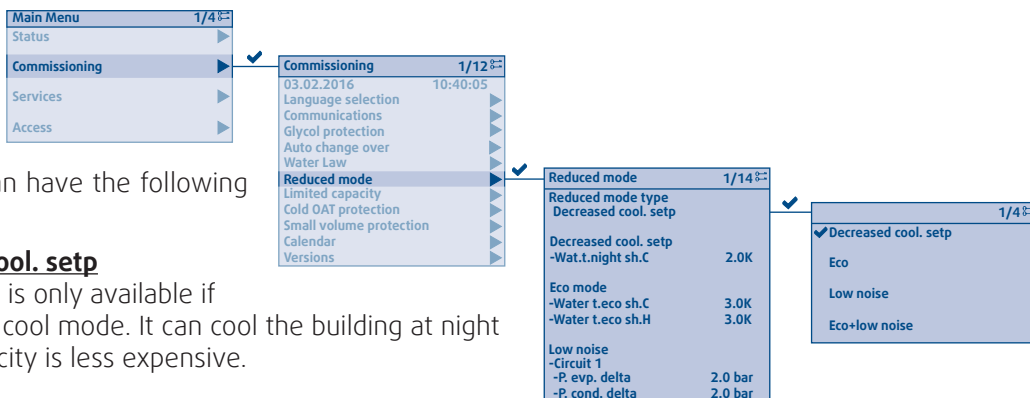

Reduced mode can have the following configurations:


- **Decreased cool. setp**  
This function is only available if the unit is in cool mode. It can cool the building at night when electricity is less expensive.
- **Eco**  
Heat and cool setpoints are respectively lowered and raised to reduce the unit's electrical consumption.
- **Low noise**  
In cool mode, the condensation pressure setpoint is increased to reduce the noise generated by the ventilators.
- **Eco + Low noise**

The "reduced mode" mode activation can be triggered in the following ways:

- directly on the **SYSAQUA** via the user interface
- communication network (Modbus/Bacnet/Cloud)
- external dry contact D2 if entry configured.

### 13.4.9. LIMITED CAPACITY

Limited capacity is occasionally used to limit the electricity consumption of the **SYSAQUA** to prevent exceeding the electric power capacity of the installation site.

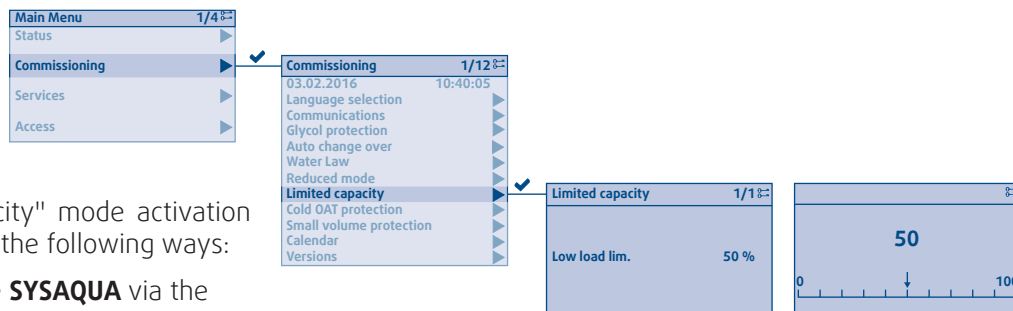


The "limited capacity" mode activation can be triggered in the following ways:




- directly on the **SYSAQUA** via the user interface
- communication network (Modbus/Bacnet/Cloud)
- external dry contact **D2** if entry configured.



13.5. ALARMS

**Trigger all circuit breakers. Silence the alarm.**

If at least one alarm or warning is in progress, the alarm button flashes.

Press the 'Alarm' button  to access the latest current alarm. The screen displays the latest alarm activated with a description, the date and time at which it occurred.


Pressing the button  a second time gives access to the list of alarms and warnings that are currently active. You can scroll the alarm list and obtain details by clicking on the "Enter" button . To exit the alarm detail and return to the alarm list menu, press the "Escape" button .

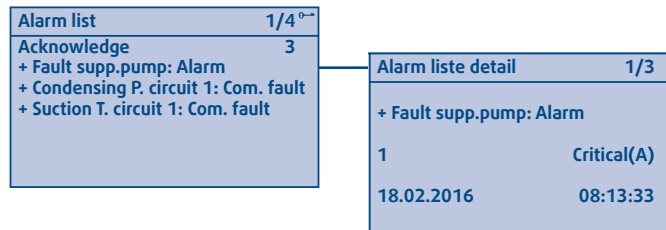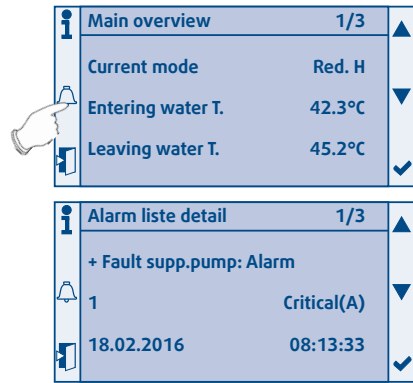


The first "Remove" line is used to remove alarms that are not active but require acknowledgment. To do this:

- ensure that you have an "Installation" or "Maintenance" access level
- select this line, validate and select "Execute".

The number on the first line shows the number of alarms or warnings that are currently active.

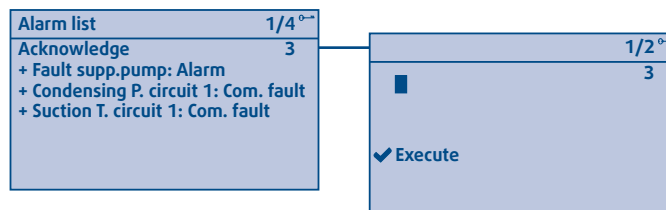


If the list of alarms is displayed, pressing the "Alarm" button takes you to the alarm history. Here again, the detail of the alarms can be displayed (max. 50).

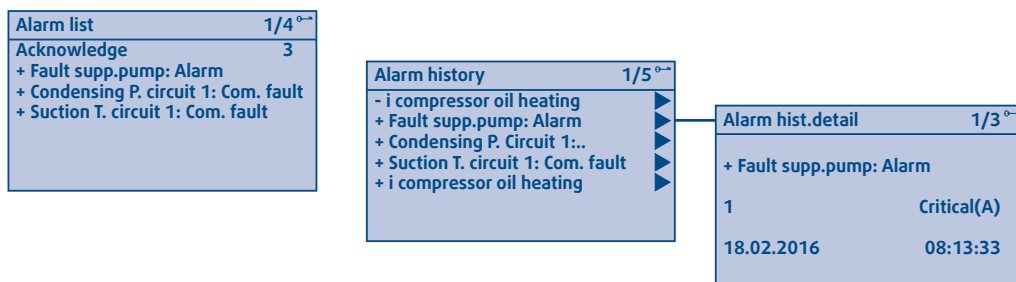

In the alarm history, a line beginning with a + identifies when an alarm is activated. A line beginning with a - shows that the alarm was reset or acknowledged.

### 13.6. SCHEDULE

The first line displayed shows the current mode at the level of time programming.

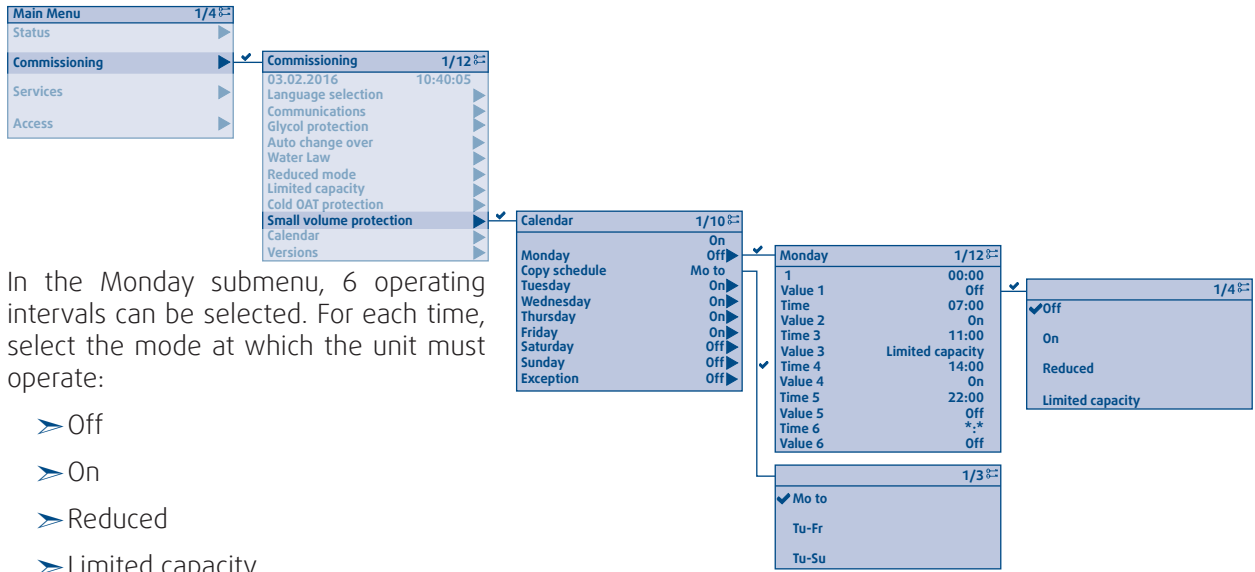

In the Monday submenu, 6 operating intervals can be selected. For each time, select the mode at which the unit must operate:

- Off
- On
- Reduced
- Limited capacity

To deactivate an operating interval, configure the corresponding time as follows: \*.\*.


The "Copy calendar" line copies the configuration made on Monday from Tuesday to Friday or from Tuesday to Sunday.

The configuration of the weekdays can also be changed separately.



#### Caution

So that the mode indicated in the calendar is activated, the unit must operate in "Delegate" mode.

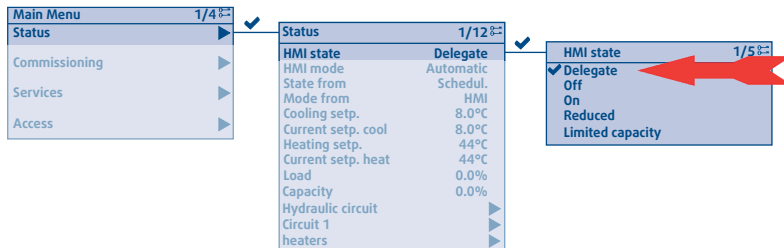

## 14. COMMISSIONING



### Caution

When performing startup and service, thorough safety precautions shall always be taken.

Only qualified individuals should perform these functions.

#### 14.1. PRE-START CHECK LIST

Before commissioning the system, you must carry out a certain number of installation checks to ensure that the appliance will operate in the best possible conditions. The following list of checks is not exhaustive and only serves as a minimum reference guide.

1. Check that the oil heating resistances have been energised for at least 12 hours.

##### 14.1.1. VISUAL CHECK

1. Check the lack of debris or cardboard in the unit.
2. Check free clearances around the unit :
  - ✓ exchanger air intake
  - ✓ exchanger air outlet
  - ✓ access or maintenance work.
3. Unit mounted as specified.
4. Check that the unit is level and that condensates drain freely away from the unit (pouHeat pump units).
5. Check that there is no possibility of blown air being recycled through the fans due to wind exposure.
6. In arduous climates (sub-zero temperature, snow, high humidity), check that the appliance is raised 10 cm off ground.
7. For loose or missing bolts or screws.
8. For refrigerant leaks in connections and components.

##### 14.1.2. ELECTRICAL CHECK

1. Electrical installation has been carried out according to unit wiring diagram and the Supply Authority Regulations in effect.
2. Size fuses or circuit breaker has been installed at the main switchboard.
3. Supply voltages as specified on unit wiring diagram.
4. **Check that all of the appliance's electrical connections have been tightened.**
5. Check that the electric motors are planned for the network supply voltage.
6. the cables and wires are clear of or protected from pipework and sharp edges.
7. Check the electrical grounding of the appliance.

##### 14.1.3. HYDRAULIC CHECK

1. Check that the external water circuit components (pumps, user equipment, filters, expansion tank and reservoir if supplied) have been correctly installed in accordance with the manufacturer's recommendations and that the water inlet and outlet connections are correct.
2. Check that the water quality complies with the indicated standards (Refer to the § **WATER QUALITY**, page 16).
3. Check that venting and draining caps are properly closed.
4. **Check the presence, direction and position of the water filter upstream of the appliance (mailles ≤ 800µm).**
5. Check the presence and position of the stop valves to isolate the unit during maintenance periods.
6. Check that the hydraulic circuit is filled correctly and that the fluid flows freely without any signs of leaks or air bubbles. When glycol anti-freeze is used, check that the concentration level is correct.
7. Check that the pump liners are not stuck. The shaft of the motor must turn freely "by hand". If necessary, free up the shaft using a tool.
8. Check the direction of rotation of the pump and leave the fluid to circulate for at least 12 hours for each pump. Then clean the pump inlet water filter.
9. Adjust the water flow in order to comply with the specifications.

## 14.2. OPERATING CHECK LIST

### 14.2.1. GENERAL

Check for any unusual noises or vibration in the running components.

### 14.2.2. PHASE ROTATION PROTECTION

If the phase of the power supply are not correct, the phase rotation protection device will prevent the machine from starting.

### 14.2.3. ELECTRICAL

#### 14.2.3.1. SET POINTS

1. Compressors circuit breaker settings.
2. Pump Circuit Breaker and Fan Circuit breaker settings.

NOTE : The outdoor fan motor is equipped with an internal safety device with automatic reset.

#### 14.2.3.2. OPERATING VOLTAGE

Recheck voltage at unit supply terminals.

#### 14.2.3.3. CONTROL

1. Verify that on/off switch and pump 1/2 switch works perfectly.
2. Check unit is wired for correct control of unit fan, cooling and heating modes.
3. Verify all sensor values available with the controller display.

### 14.2.4. HYDRAULIC CIRCUIT

1. Check the filter's cleanliness
2. Check the presence and position of the stop valves to isolate the unit during maintenance periods
3. Adjust the water flow to specifications. (see graphs appended).
  - ✓ Check pressure at the inlet and outlet of the plate exchanger
  - ✓ Determine the water flow using a flowmeter or the load loss of the plate exchanger
4. Check the installation is protected against frost (heat insulation, glycol ethylene percentage of the unit if its presence is necessary...)
5. Check that the bleeder present in the unit has actually been opened.

The unit must work with a water flow rate in agreement with recommended values displayed in the table in § **PHYSICAL CHARACTERISTICS**, page 8. Running the unit with a low water flow is dangerous, as it could result in irreversible damage to the components as well as to the plate exchanger. If the unit is run with insufficient flow, its performance will not be optimum.

---

#### 14.2.5. COMPRESSOR AND REFRIGERATION SYSTEM

1. Running check: Start the compressor. Check for any unusual noise or vibration.
2. Operating Pressures: Operate the unit for at least 20 minutes and ensure that the refrigerant pressures are stabilised, and check that they are within the normal operating ranges.
3. Operating Temperature: Check discharge, suction and liquid temperatures.
4. Discharge temperature on cooling cycle should normally not exceed 115°C.
5. Suction superheat should be 6K ±2K.

#### 14.2.6. FINAL CHECK

1. All panels and fan guards are in place and secured.
2. Unit clean and free of remainder installation material.

### 15. IN CASE OF WARRANTY - MATERIAL RETURN PROCEDURE

Material must not be returned without permission of our After Sales Department.

To return the material, contact your nearest sales office and ask for a "return form". The return form shall be sent with the returned material and shall contain all necessary information concerning the problem encountered.

The return of the part is not an order for replacement. Therefore, a purchase order must be entered through your nearest distributor or regional sales office. The order should include part name, part number, model number and serial number of the unit involved.

Following our personal inspection of the returned part, and if it is determined that the failure is due to faulty material or workmanship, and in warranty, credit will be issued on customer's purchase order. All parts shall be returned to our factory, transportation charges prepaid.

### 16. ORDERING SERVICE AND SPARE PARTS ORDER

The part number, the order confirmation and the unit serial number indicated on the name plate must be provided whenever service works or spare parts are ordered.

For any spare part order, indicate the date of unit installation and date of failure. Use the part number provided by our service spare parts, if it not available, provide full description of the part required.

---



## 17. MAINTENANCE



### Caution

The user is responsible for ensuring that the unit is in perfect working order and that the technical installation and **minimum maintenance** operations have been performed by a qualified technician in accordance with the procedures described in the present manual.

Depending on actual operational constraints and regulatory changes, the installer might recommend increased maintenance operations and more frequent inspections.

Simple preventive maintenance ensures longevity of your **SYSAQUA** :

- Better refrigeration performance
- Reduced power consumption
- Accidental component breakage prevention
- Prevention of heavy, late, and expensive interventions
- Environment protection



### Caution

**All refrigerating fluid charging, sampling and draining operations must be performed by a skilled technician using equipment adapted to the unit, in agreement with authority regulation in effect on site.**

**Any inappropriate handling may cause uncontrolled fluid venting into the atmosphere.**



### Warning

- Isolate unit from power supply before working on unit.



### Warning

- Opening the refrigeration circuit then involves vacuum drawing, checking the circuit sealing and recharging refrigerating fluid. For any intervention on the refrigerating fluid circuit, first drain the unit's charge using a refrigerating fluid collection station.

### 17.1. WEEKLY CHECK

Inspect the entire running installation, while paying particular attention to :

- any damage on the **SYSAQUA** housing
- any traces of oil (sign of refrigerating fluid leak)
- any water leak
- the presence of removed protections, doors or lids improperly closed
- the coil's cleanliness.

Check:

- the oil level of the compressors (use sight glass on the oil equalization pipe of compressor tandems)
- the humidity rate of the refrigerating fluid using the fluid indicator
- the operating pressure of the installation
- the water temperature at the plate exchanger inlet and outlet.

When the **SYSAQUA** is running, perform a sound check of the compressors, pump and fans. Also check that no vibration can cause breakage or wear by vibrating contact.

## 17.2. PERIODIC TABLE OF SERVICE AND MAINTENANCE

TASKS PER COMPONENTS	ACTIONS	1 month	3 months	6 months	12 months	24 months
		Recommended inspection and maintenance interval				
<b>1 - Casing</b>						
1.1	Control possible contaminations, damage and/or corrosion.	Clean and repair if required.			X	
1.2	Check the possible presence of water (condensates, leakages,...).	Clean and look for the cause, then repair.		X		
1.3	Verify thermal insulation aspect	Replace if required.			X	
1.4	Check the state of the anti-vibration pads	Replace if required.			X	
1.5	Check the condition of door gasket.	Replace if required.	At each inspection			
<b>2 - REFRIGERANT CIRCUIT</b>						
2.1	Verify oil compressor level when compressors are off		X			
2.2	Check the lack of gas bubbles in the fluid line		X			
2.3	Check the lack of humidity in the refrigerating fluid		X			
2.4	Check the pipes or capillaries do not rub and vibrate.			X		
2.5	Check the compressors do not emit abnormal noise or vibration.		X			
2.6	Check the backflow temperature.	X				
2.7	Record the operating pressure	Check it is above or below those recorded when the unit was started up.	X			
2.8	Check the compressor fastening screws are tight.			X		
2.9	Check the crankcase heater are powered on during the stop cycle.		X			
2.10	Check the cleanliness of the coil.	Clean if required.	X			
2.11	Test the oil for contamination.	Change the oil if required.			X	
2.12	Check the filter drier clogging.	Replace if required	X			
2.13	Check the operation of the high pressure switch.	Replace if required	X			
2.14	Check the lack of refrigerating fluid leak (visuel + détecteur si nécessaire)	Repair			X	
2.15	Check the cycle reversal valve			X		
2.16	Check the condition of the anti-vibration studs	Replace if required		X		
<b>3 - HYDRAULIC CIRCUIT</b>						
3.1	Check the state of the function, check there is no damage nor corrosion.	Clean and repair.	X			
3.2	Check the condition of the exchanger, in terms of corrosion and functionality.	Clean and repair.		X		
3.3	Check the tightening of the pipe connections and fastening	Readjust and repair if necessary.			X	
3.4	Verify the pressure value of the hydraulic circuit				X	
3.5	Bleed the air.				X	
3.6	Run the isolation valves					
3.7	Check there is no ice set.				X	
3.8	Check the state of the piping thermal insulation.	Repair and replace if required.				
3.9	Check the frost protection devices (glycol-based water, thermostat, ...).	Repair and replace if required. When air temperatures are wintery, and after general stoppage of the installation, the water contained in the plate exchanger may freeze. To prevent such problems, fully drain the unused plate exchanger or protect it by pouring an antifreeze solution into the hydraulic circuit or other devices. ⚠ The manufacturer waives any liability for damage to the plate exchanger caused by water freezing inside the unit.	Whenever there is a risk of freezing			

TASKS PER COMPONENTS		ACTIONS	1	3	6	12	24
			month	months	months	months	months
			Recommended inspection and maintenance interval				
3.10	Check filter cleanliness.	Clean	X				
3.11	Check that the hydraulic circuit is filled properly		X				
3.12	Check the condition of the expansion tank (presence of excess corrosion, or gas pressure loss)	Replace if required.	X				
3.13	Check the water pump	If the unit has not been used for a long time, manually rotate the pump shaft and check that it turns freely. For a unit equipped with a double pump, it is recommended to switch from one pump to the other every month or to check that the pump shaft turns freely to prevent the liners sticking.	X				
		Change the pump liner after 15,000 hours running with anti-freeze or 25,000 hours running with water.		X			
3.14	Verify that low water pressure sensor works perfectly		X				
3.15	Record the water temperatures at the plate exchanger inlet and outlet.		X				
<b>4 - ELECTRIC CIRCUIT</b>							
4.1	Check the electrical voltage applied to the unit, which must remain stable within the tolerances specified in the information plates.			X			
4.2	Check that the main supply cable is void of alterations likely to impact the insulation.	Replace if required.		X			
4.3	Check the grounding of the metallic structure	Repair if required.	X				
4.4	Inspect the contacts.	Replace if required.	X				
4.5	Check that all electrical connections of the device are tight	Tighten if required.	X			X	
4.6	Check the thermal protection relays of the motors	Replace if required.	X				
4.7	Check the nominal intensity and condition of the fuses.		X				
4.8	Check the condition of the condensers.		X				
4.9	Clean the compressed air electrical unit to remove any dust or other contaminants building up.			X		X	
4.10	Check the motor windings are insulated.			X			
<b>5 - FAN(S)</b>							
5.1	Check the lack of contamination, corrosion or damage.	Clean if required			X		
5.2	Check proper fastening of the fan.	Tighten if required.			X		
5.3	Check the vanes to guarantee balancing.	Clean if required.				X	
5.4	Check the bearings for noise.	Repair if required.	X				
5.5	Check the condition of the grease and greasers (unless if permanently lubricated).	Re-grease if required (Lithium soap grease DIN 51825-K3N for fans type K, K1, K2).		T>70 °C	X		
5.6	Check the condition of the fan motor.			X			
<b>6 - REGULATION</b>							
6.1	Check the condition of the alarms	Acknowledge them after taking them into consideration	X				
6.2	Check the setting points		X				
6.3	Check the operation of all probes		X				

## 17.3. MAINTENANCE PROCEDURES

### 17.3.1. REFRIGERANT CIRCUIT

This equipment must be submitted to sealing checks **minimum once per year, by a professional authorized to perform such an operation**. Refer to national requirements for the frequency of these checks.



#### Caution

**Never use the compressor as a vacuum pump to drain the installation.**

#### 17.3.1.1. REFRIGERATING FLUID CHARGE

Run the unit in refrigerating mode to determine whether the group's charge is correct by checking actual sub-refrigeration.

#### 17.3.1.2. COMPRESSOR OIL

Oil for refrigeration equipment is light and transparent. It maintains its colour for a long operating period.

As a refrigeration system designed and installed properly will run without problem, the compressor oil does not require replacement, even after a long operating period.

Blackened oil has been exposed to impurities in the refrigeration piping system, or excess temperatures on the compressor backflow side, which inevitably degrades oil quality. Blackening oil or degradation of its qualities may also be caused by humidity in the system. Change the oil when its colour changes or when it is degraded.

In this case, before restarting the unit, the refrigeration circuit must be emptied.



#### Caution

Compressors use polyester oil. During maintenance interventions on the compressor, or if the refrigeration circuit has to be opened in any point, do not forget that this type of oil is highly hygroscopic, and avoid exposing it to the atmosphere during long periods, which would require to change the oil.



#### Warning

Protect the **SYSAQUA** frame so as to get back oil that could flow out accidentally.

#### 17.3.1.3. FILTER DRIER

Refrigeration circuits are fitted with filters drier.

The fluid indicator is used to check the refrigeration flow and humidity rate of the refrigerating fluid. The presence of bubbles indicates that the filter drier is clogged or the charge insufficient.

If you notice that air bubbles are still there even after the filter has been replaced, this means the device has lost part of its cooling product in one or several places, which will need to be detected and repaired.

The glass window contains a colour indicator. Comparing the indicator colour with the scale present on the glass window allows to calculate the humidity rate of the refrigerating fluid. If excessive, change the filter, run the system for one day, then check the humidity rate again.

A humidity rate within the preset limits requires no further intervention. If the humidity rate remains too high, change the filter drier again, start the unit, and run it for another day.

### 17.3.1.4. AIR COOLED CONDENSER



#### Caution

**Fin edges are sharp and can cause injury hazard. Avoid contact with them.**

Condenser coils are composed of copper tubes and aluminium fins. In case of leaks due to damage or shock, the coils must be repaired by one of the authorized Support Centres. To guarantee the best possible operation of the condenser bank, the condenser surface must be maintained as clean as possible, and it must be void of foreign materials (leaves, wires, insects, slag, etc.). A dirty coil will see its absorbed electrical power increase. In addition, condensation pressure could increase and trigger a high pressure alarm.

Clean the air exchanger using a special product for aluminium-copper coils and rinse with water. Do not use hot water nor steam, as these may increase the refrigerating fluid's pressure.



#### Caution

**Avoid damaging the aluminium fins during cleaning. Never use pressurized water without a wide diffuser. Concentrated and/or rotating water jets are strictly forbidden.**

### 17.3.2. HYDRAULIC CIRCUIT

#### 17.3.2.1. PLATE HEAT EXCHANGEUR

Verify the pressure difference between the inlet and the outlet of the heat plate exchanger. If the water pressure and flow rate values do not correspond to the pressure loss curves available in § **HYDRAULIC PUMPS CURVES**, page XI , the heat plate exchanger may be foul up. To clean it, use a non corrosive solvent to remove calcareous deposits. The equipment used for the external water flow, the quantity of solvent and safety measures applied must be approved by the company supplying the cleaning products, or the one performing these operations.

### 17.3.3. WINTER PROTECTION

In winter, after a general stoppage of the installation or a regulation malfunction, the water contained in the hydraulic circuit may start freezing.

To prevent any problems if the hydraulic circuit is not glycolated, it is recommended to fully drain any circuits not used and to pressurize them with nitrogen or protect them by adding an anti-freeze solution or other measures.

**The concentration of anti-freeze solution must be regularly and carefully checked before each winter season.**



#### Caution

**The manufacturer waives any liability for damage of a plate exchanger caused by water freezing of water contained inside does not engage the responsibility of the manufacturer with respect to this incident (low winter temperature or water start temperature below 5°C in summer mode).**



#### CAUTION

**BEFORE CARRYING OUT ANY OPERATION ON THE EQUIPMENT, CHECK THAT THE ELECTRICAL POWER SUPPLY IS SWITCHED OFF AND THAT IT CANNOT BE SWITCHED ON INADVERTENTLY.**

**IT IS RECOMMENDED THAT THE DISCONNECT SWITCH BE PADLOCKED**

## 18. TROUBLE SHOOTING

Problem	Probable cause	Solution
Unit operates continuously but without generating cooling	Insufficient refrigerant fluid charge.	Top up the refrigerant fluid charge.
	Clogged dehumidification filter.	Replace the dehumidification filter.
	Reduced output from one or both circuits	Check the compressor valves and change them if necessary.
Frozen intake line	The overheating setting on the thermostatic pressure relief valve is too low.	Increase the setting.
		Check the refrigerant fluid charge
Excessive noise	Vibrating pipe work	Attach the pipe work correctly.
		Check the pipe work attachments.
	Whistling noise from the thermostatic pressure relief valve	Top up the refrigerant fluid charge.
		Check and replace the dehumidification filter if necessary.
Noisy compressor	Check the condition of the valves.	
	Seized bearings. Replace the compressor	
Low oil level in the compressor	Check the tightness of the compressor attachment nuts.	
	Presence of one or several oil or gas leaks in the circuit	Locate and repair the leaks
	Mechanical compressor damage.	Contact an approved Service Centre.
One or both compressors do not operate.	Sump oil heater resistance fault.	Check the electrical circuit and the condition of the resistance. Replace defective parts if necessary.
	Electrical circuit cut.	Check the electrical circuit and seek out any grounding and/or short-circuits. Check the fuses.
	High pressure pressostat activated.	Reset the pressostat from the control panel and restart the unit. Identify and eliminate the causes of this activation.
	Control circuit fuse blown.	Check the control circuit and seek out any grounding and/or short-circuits. Replace the fuses.
	Connection problem	Check the tightness of all the electrical connection terminals.
	Electrical circuits thermal protection cuts in.	Check the operation of the control and safety devices. Identify and eliminate the cause of the activation.
	Incorrect wiring.	Check the wiring of the control and safety devices.
	Mains voltage too low.	Check the power line. Eliminate any possible problems associated with the system. If the problem is due to the network, inform the Electricity Company.
	Compressor motor short-circuited.	Check the continuity of the motor winding.
Compressor seized	Replace the compressor.	

Problem	Probable cause	Solution
Circuit stoppage further to the low pressure thermostat being activated.	Presence of a leak.	Identify and repair the leak.
	Insufficient refrigerant fluid charge.	Top up the refrigerant fluid charge.
	Pressostat operating fault.	Replace the pressostat.
Circuit stoppage further to the high pressure thermostat being activated.	Incorrect operation of the high pressure pressostat.	Check the operation of the pressostat. Replace it if required.
	Outlet valve partially closed.	Open the valve. Replace it if required.
	Non-condensable particles in the circuit.	Bleed the circuit
	Condenser fan(s) not operating.	Check the wiring and the motors. Repair and replace if required.
Liquid line too hot	Insufficient refrigerant fluid charge.	Locate and eliminate the causes of charge losses and top up the refrigerant fluid charge.
Liquid line frozen	Liquid line valve partially closed.	Checking the opening of all the valves.
	Clogged dehumidification filter.	Replace the filter cartridge.
Fans do not operate.	Electrical circuit problems.	Check the connections.
	Internal circuit thermal cut-out activated.	Contact an approved Service Centre.
Reduced output in both Heating and Cooling mode	Compressor operating fault	Contact an approved Service Centre.
	Dirt in the evaporator water circuit.	Chemical cleaning of the evaporator water circuit.
	Condenser battery blocked.	Clean the condenser battery.
	Insufficient refrigerant fluid charge.	Top up the refrigerant fluid charge.
Evaporator heater is not operating.	No power supply.	Check the main fuse and the auxiliary fuses.
	Heater circuit open	Check the heater and replace if required.
No/ little control over water temperature.	Incorrect thermostat setting.	Check the temperature setting on the control panel.
	Incorrect temperature differential between evaporator inlet and outlet.	Check the water flow and the quantity of liquid in the water circuit.
	Electronic control system malfunction.	Contact an approved Service Centre.
Insufficient water circulation.	Air in the circuit	Bleed the air via the safety valve.
	Deposits or impurities in the evaporator.	Wash out the evaporator by back-flushing.
Unit not operating, no alarm activation	Water circulation fault	Check the pump.
	Flow controller inoperable.	Check the flow controller.
	Differential pressostat inoperable.	Check the differential pressostat.





**APPENDIX**  
**ANNEXE**  
**ANLAGE**  
**ALLEGATO**  
**ANEXO**

---

# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

## APPENDIX

<b>DIMENSIONS</b> .....	<b>III</b>	<b>WIRING DIAGRAM</b> .....	<b>XII</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	III	LEGEND.....	XIII
SYSAQUA 20 - 25 - 30 - 35 - 40 WITH BUFFER TANK.....	IV	SYSAQUA 20 - 25 - 30 - 35 - 40.....	XVII
DUCT OUTLET DIMENSIONS.....	V	CONTROL - POL423.....	XVII
SYSAQUA 25 - 30 - 35 - 40.....	V	POWER - POL423.....	XVIII
<b>REFRIGERANT CIRCUIT DIAGRAM</b> .....	<b>VI</b>	CONTROL - POL688.....	XIX
SYSAQUA L.....	VII	POWER - POL688.....	XX
SYSAQUA H.....	VII	TTS - CONTROL - POL423.....	XXI
<b>HYDRAULIC CIRCUIT DIAGRAM</b> .....	<b>VIII</b>	TTS - POWER - POL423.....	XXII
WITHOUT PUMP.....	IX	TTS - CONTROL - POL688.....	XXIII
WITH 1 PUMP.....	IX	TTS - POWER - POL688.....	XXIV
<b>PRESSURE LOSSES OF THE PLATE HEAT EXCHANGER</b> .....	<b>X</b>	<b>SOFT STARTER</b> .....	<b>XXV</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	X	POL423.....	XXV
<b>HYDRAULIC PUMPS CURVES</b> .....	<b>XI</b>	POL688.....	XXVI
SYSAQUA 20 - 25 - 30.....	XI	<b>VARIABLE FLOW SIMPLE PUMP</b> .....	<b>XXVII</b>
SYSAQUA 35 - 40.....	XI	POL423.....	XXVII
		POL688.....	XXVIII

## ANNEXE

<b>DIMENSIONS</b> .....	<b>III</b>	<b>SCHEMAS ELECTRIQUES</b> .....	<b>XII</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	III	LEGENDE.....	XIII
SYSAQUA 20 - 25 - 30 - 35 - 40 AVEC BALLON TAMPON.....	IV	SYSAQUA 20 - 25 - 30 - 35 - 40.....	XVII
DIMENSIONS DEPART DE GAINES.....	V	COMMANDE - POL423.....	XVII
SYSAQUA 25 - 30 - 35 - 40.....	V	PUISSANCE - POL423.....	XVIII
<b>SCHEMA DU CIRCUIT FRIGORIFIQUE</b> .....	<b>VI</b>	COMMANDE - POL688.....	XIX
SYSAQUA L.....	VII	PUISSANCE - POL688.....	XX
SYSAQUA H.....	VII	TTS - COMMANDE - POL423.....	XXI
<b>SCHEMA DU CIRCUIT HYDRAULIQUE</b> .....	<b>VIII</b>	TTS - PUISSANCE - POL423.....	XXII
SANS POMPE.....	IX	TTS - COMMANDE - POL688.....	XXIII
AVEC 1 POMPE.....	IX	TTS - PUISSANCE - POL688.....	XXIV
<b>PERTE DE CHARGE DE L'ECHANGEUR A PLAQUES</b> .....	<b>X</b>	<b>SOFT STARTER</b> .....	<b>XXV</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	X	POL423.....	XXV
<b>COURBES DES POMPES HYDRAULIQUES</b> .....	<b>XI</b>	POL688.....	XXVI
SYSAQUA 20 - 25 - 30.....	XI	<b>SIMPLE POMPE A DEBIT VARIABLE</b> .....	<b>XXVII</b>
SYSAQUA 35 - 40.....	XI	POL423.....	XXVII
		POL688.....	XXVIII

## ANLAGE

<b>ABMESSUNGEN</b> .....	<b>III</b>	<b>STROMLAUFPLANS</b> .....	<b>XII</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	III	ERLÄUTERUNG.....	XIII
SYSAQUA 20 - 25 - 30 - 35 - 40 MIT VORRATSBEHÄLTER.....	IV	SYSAQUA 20 - 25 - 30 - 35 - 40.....	XVII
ABMESSUNGEN DER KANALABGÄNGE.....	V	STEUERUNG - POL423.....	XVII
SYSAQUA 25 - 30 - 35 - 40.....	V	LEISTUNG - POL423.....	XVIII
<b>KÄLTEKREISLAUFDIAGRAMM</b> .....	<b>VI</b>	STEUERUNG - POL688.....	XIX
SYSAQUA L.....	VII	LEISTUNG - POL688.....	XX
SYSAQUA H.....	VII	TTS - STEUERUNG - POL423.....	XXI
<b>HYDRAULISCHER SCHALTPLAN</b> .....	<b>VIII</b>	TTS - LEISTUNG - POL423.....	XXII
KEINE PUMPE.....	IX	TTS - STEUERUNG - POL688.....	XXIII
MIT 1 PUMPE.....	IX	TTS - LEISTUNG - POL688.....	XXIV
<b>DRUCKVERLUST PLATTENWÄRMETAUSCHER</b> .....	<b>X</b>	<b>SOFT STARTER</b> .....	<b>XXV</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	X	POL423.....	XXV
<b>KURVEN VON HYDRAULIKPUMPEN</b> .....	<b>XI</b>	POL688.....	XXVI
SYSAQUA 20 - 25 - 30.....	XI	<b>EINFACHE PUMPE MIT VARIABLEM DURCHFLUSS</b> .....	<b>XXVII</b>
SYSAQUA 35 - 40.....	XI	POL423.....	XXVII
		POL688.....	XXVIII

## ALLEGATO

<b>DIMENSIONI</b> .....	<b>III</b>	<b>SCHEMA ELETTRICO</b> .....	<b>XII</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	III	LEGGENDA.....	XIII
SYSAQUA 20 - 25 - 30 - 35 - 40 CON SERBATOIO VOLANO.....	IV	SYSAQUA 20 - 25 - 30 - 35 - 40.....	XVII
DIMENSIONI TELLE USCITE DI CONDOTTA.....	V	COMANDO - POL423.....	XVII
SYSAQUA 25 - 30 - 35 - 40.....	V	POTENZA - POL423.....	XVIII
<b>SCHEMA DEL CIRCUITO REFRIGERANTE</b> .....	<b>VI</b>	COMANDO - POL688.....	XIX
SYSAQUA L.....	VII	POTENZA - POL688.....	XX
SYSAQUA H.....	VII	TTS - COMANDO - POL423.....	XXI
<b>SCHEMA CIRCUITALE IDRAULICO</b> .....	<b>VIII</b>	TTS - POTENZA - POL423.....	XXII
NO POMPA.....	IX	TTS - COMANDO - POL688.....	XXIII
CON 1 POMPA.....	IX	TTS - POTENZA - POL688.....	XXIV
<b>PERDITA DI CARICO SCAMBIATORE A PIASTRE</b> .....	<b>X</b>	<b>SOFT STARTER</b> .....	<b>XXV</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	X	POL423.....	XXV
<b>CURVE DELLE POMPHE IDRAULICHE</b> .....	<b>XI</b>	POL688.....	XXVI
SYSAQUA 20 - 25 - 30.....	XI	<b>POMPA SEMPLICE A PORTATA VARIABLE</b> .....	<b>XXVII</b>
SYSAQUA 35 - 40.....	XI	POL423.....	XXVII
		POL688.....	XXVIII


## ANEXO

<b>DIMENSIONES</b> .....	<b>III</b>	<b>ESQUEMA ELECTRICO</b> .....	<b>XII</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	III	LEVENDA.....	XIII
SYSAQUA 20 - 25 - 30 - 35 - 40 CON BALÓN INTERMEDIO.....	IV	SYSAQUA 20 - 25 - 30 - 35 - 40.....	XVII
DIMENSIONES DE LAS SALIDAS DE CONDUCTOS.....	V	MÁNDO - POL423.....	XVII
SYSAQUA 25 - 30 - 35 - 40.....	V	POTENCIA - POL423.....	XVIII
<b>ESQUEMA DEL CIRCUITO FRIGORIFÍCO</b> .....	<b>VI</b>	MÁNDO - POL688.....	XIX
SYSAQUA L.....	VII	POTENCIA - POL688.....	XX
SYSAQUA H.....	VII	TTS - MÁNDO - POL423.....	XXI
<b>ESQUEMA CIRCULAR HIDRÁULICO</b> .....	<b>VIII</b>	TTS - POTENCIA - POL423.....	XXII
SIN BOMBA.....	IX	TTS - MÁNDO - POL688.....	XXIII
CON 1 BOMBA.....	IX	TTS - POTENCIA - POL688.....	XXIV
<b>PÉRDIDA DE CARGA INTERCAMBIADOR DE PLACAS</b> .....	<b>X</b>	<b>SOFT STARTER</b> .....	<b>XXV</b>
SYSAQUA 20 - 25 - 30 - 35 - 40.....	X	POL423.....	XXV
<b>CURVAS BOMBAS HIDRÁULICAS</b> .....	<b>XI</b>	POL688.....	XXVI
SYSAQUA 20 - 25 - 30.....	XI	<b>BOMBA SIMPLE CON FLUJO VARIABLE</b> .....	<b>XXVII</b>
SYSAQUA 35 - 40.....	XI	POL423.....	XXVII
		POL688.....	XXVIII


DIMENSIONS  
DIMENSIONS  
ABMESSUNGEN  
DIMENSIONI  
DIMENSIONES

SYSAQUA 20 - 25 - 30 - 35 - 40

FAN STANDARD

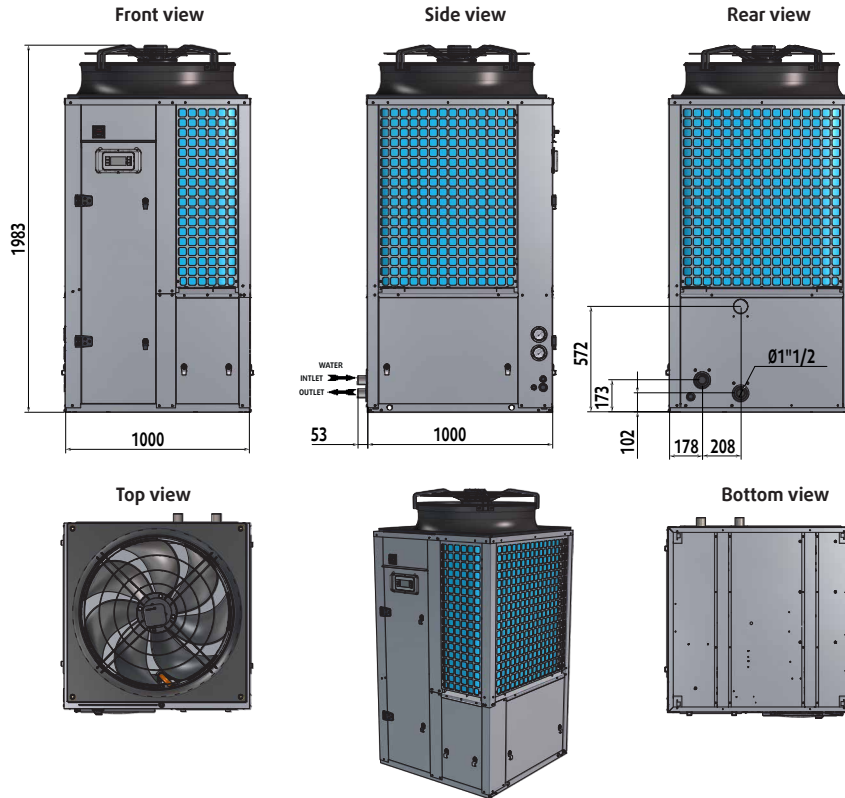


FAN HPF

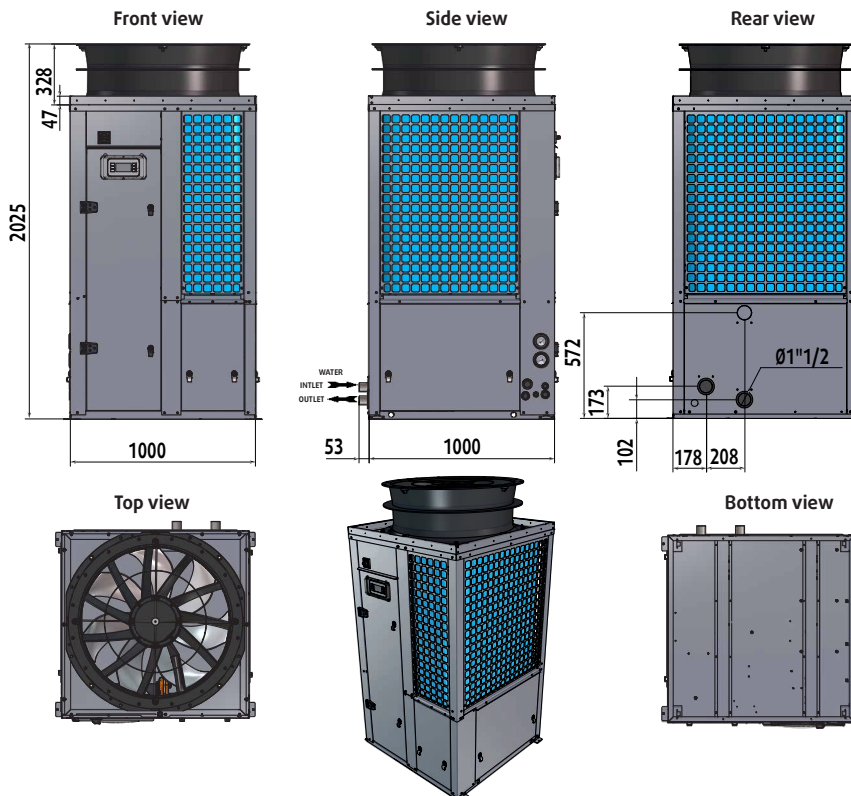


# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

SYSAQUA 20 - 25 - 30 - 35 - 40 WITH BUFFER TANK

## FAN STANDARD

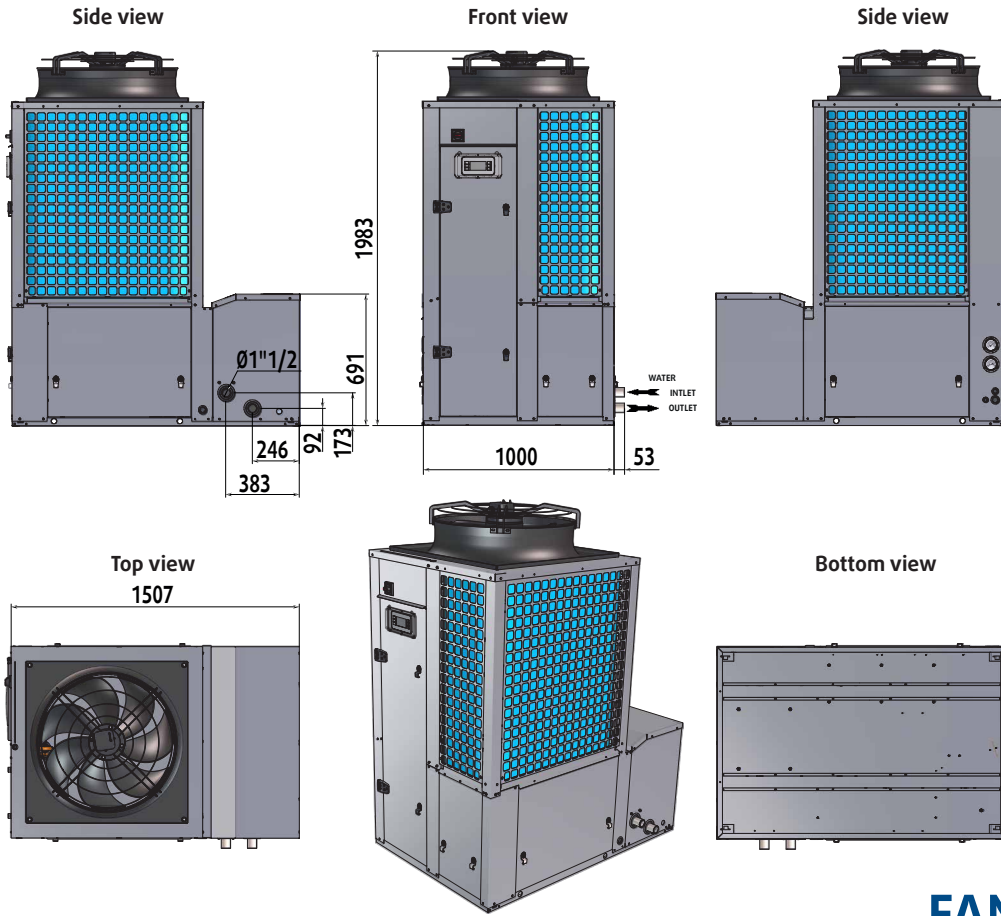


## FAN HPF

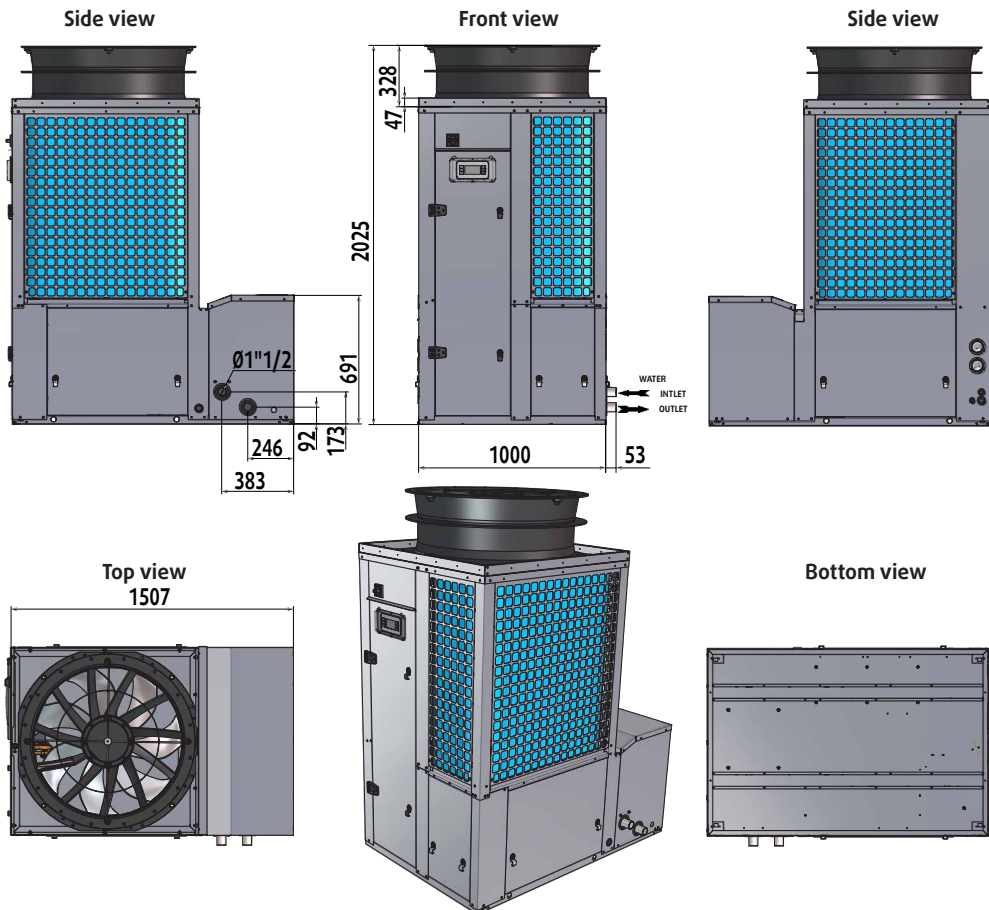

DUCT OUTLET DIMENSIONS

SYSAQUA 25 - 30 - 35 - 40

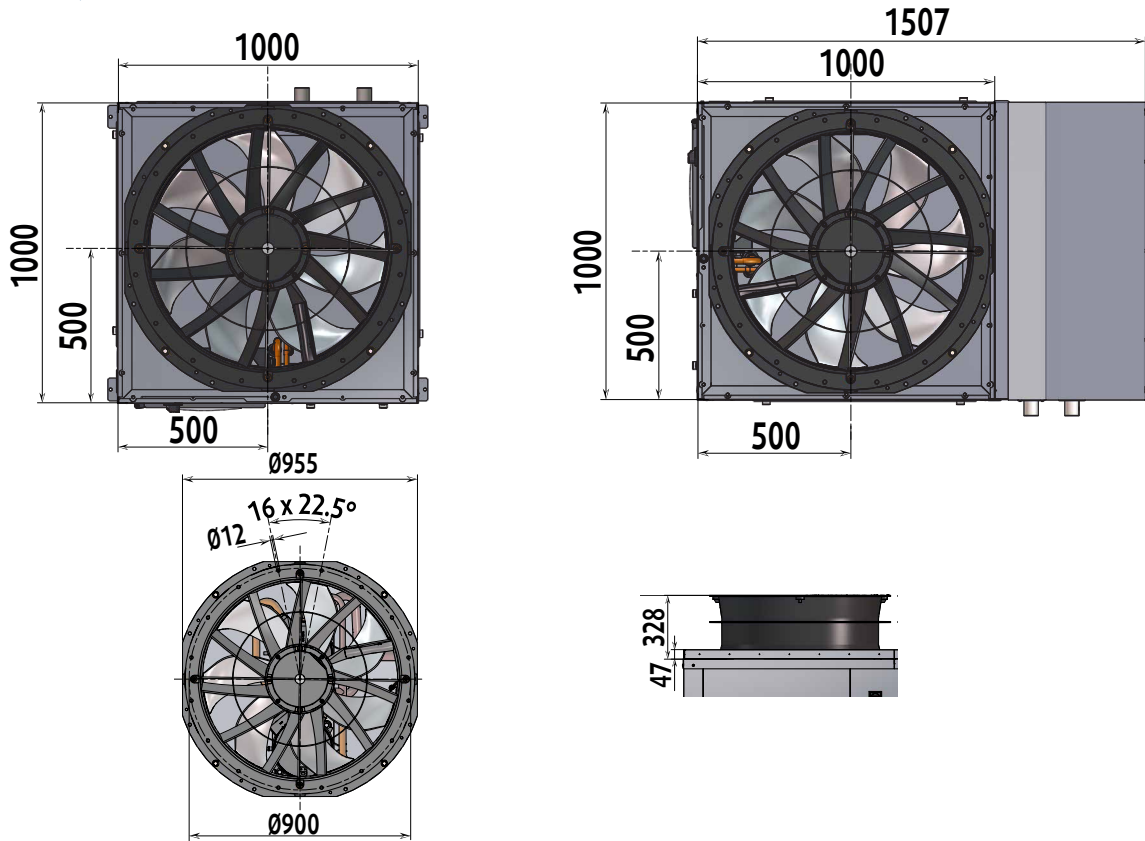

## REFRIGERANT CIRCUIT DIAGRAM SCHEMA DU CIRCUIT FRIGORIFIQUE KÄLTEKREISLAUFDIAGRAMM SCHEMA DEL CIRCUITO REFRIGERANTE ESQUEMA DEL CIRCUITO FRIGORIFÍCO

### English

<b>M1/2</b>	Compressors 1 et 2
<b>RV1</b>	Cycle reversal valve
<b>OF1/2</b>	Outdoor fan motor
<b>3</b>	Air cooled condenser
<b>4</b>	Filter drier
<b>5</b>	Sight glass
<b>6</b>	Thermostatic expansion valve
<b>7</b>	Liquid reservoir
<b>8</b>	Plate heat exchanger
$\perp$	Pressure tapping point 5/16"
<b>FPC</b>	High pressure transducer
<b>HP</b>	High pressure switch
<b>CDT</b>	Discharge temperature sensor
<b>FPE</b>	Low pressure transducer
<b>PS</b>	Expansion valve pressure tap
<b>T</b>	Expansion valve bulb
<b>OAT</b>	Outdoor air temperature sensor
<b>OCT</b>	Condenser outdoor temperature sensor

### Français

<b>M1/2</b>	Compresseurs 1 et 2
<b>RV1</b>	Vanne inversion de cycle
<b>OF1/2</b>	Moteur de la ventilation extérieure
<b>3</b>	Condenseur à air
<b>4</b>	Filtre déshydrateur
<b>5</b>	Voyant liquide
<b>6</b>	Détendeur thermostatique
<b>7</b>	Bouteille accumulation liquide
<b>8</b>	Evaporateur à plaques
$\perp$	Prise de pression 5/16"
<b>FPC</b>	Transducteur haute pression
<b>HP</b>	Pressostat haute pression
<b>CDT</b>	Sonde température refoulement
<b>FPE</b>	Transducteur basse pression
<b>PS</b>	Prise pression détendeur
<b>T</b>	Bulbe détendeur
<b>OAT</b>	Sonde température air extérieur
<b>OCT</b>	Sonde température sortie condenseur

### Deutsch

<b>M1/2</b>	Verdichter 1 und 2
<b>RV1</b>	Umkehrzyklusventil
<b>OF1/2</b>	Motor der externen Lüftung
<b>3</b>	Verflüssigerbündel
<b>4</b>	Filtertrockner
<b>5</b>	Schauglas
<b>6</b>	Thermostatisches Expansionsventil
<b>7</b>	Sammler
<b>8</b>	Plattenverdampfer
$\perp$	5/16" Druckanschluss
<b>FPC</b>	Hochdruckgeber
<b>HP</b>	Überdruckschalter
<b>CDT</b>	Auslass-Temperaturfühler
<b>FPE</b>	Niederdruckgeber
<b>PS</b>	Expansionsventil-Druckanschluss
<b>T</b>	Expansionsventil-Fühlerkopf
<b>OAT</b>	Außenlufttemperaturfühler
<b>OCT</b>	Verflüssigeraustritt-Temperaturfühler


### Italiano

<b>M1/2</b>	Compressore 1 e 2
<b>RV1</b>	Valvola di inversione ciclo
<b>OF1/2</b>	motore della ventilazione esterna
<b>3</b>	Condensatore ad aria
<b>4</b>	Filtro-essiccatore
<b>5</b>	Spia di vetro
<b>6</b>	Valvola di espansione termostatic
<b>7</b>	Accumulatore di liquido
<b>8</b>	Evaporatore a piastre
$\perp$	Presa di pressione 5/16"
<b>FPC</b>	Trasduttore di alta pressione
<b>HP</b>	Pressostato di alta pressione
<b>CDT</b>	Sonda temperatura di scarico
<b>FPE</b>	Trasduttore di bassa pressione
<b>PS</b>	Presa di pressione della valvola di espansione
<b>T</b>	Bulbo di valvola di espansione
<b>OAT</b>	Sonda di temperatura d'arie esterna
<b>OCT</b>	Sonda di temperatura di Condensazione


### Español

<b>M1/2</b>	Compresores 1 y 2
<b>RV1</b>	Válvula de inversión de ciclo
<b>OF1/2</b>	Motor de la ventilación exterior
<b>3</b>	Condensador de aire
<b>4</b>	Filtro deshidratador
<b>5</b>	Indicador luminoso de líquido
<b>6</b>	Reductor termostático
<b>7</b>	Botella de acumulación de líquido
<b>8</b>	Evaporador de placas
$\perp$	Toma de presión 5/16"
<b>FPC</b>	Transductor de alta presión
<b>HP</b>	Presóstato de alta presión
<b>CDT</b>	Sonda de temperatura descarga
<b>FPE</b>	Transductor de baja presión
<b>PS</b>	Toma de presión reductor
<b>T</b>	Bulbo reductor
<b>OAT</b>	Sonda de temperatura de aire exterior
<b>OCT</b>	Sonda temperatura salida condensador

SYSAQUA.L

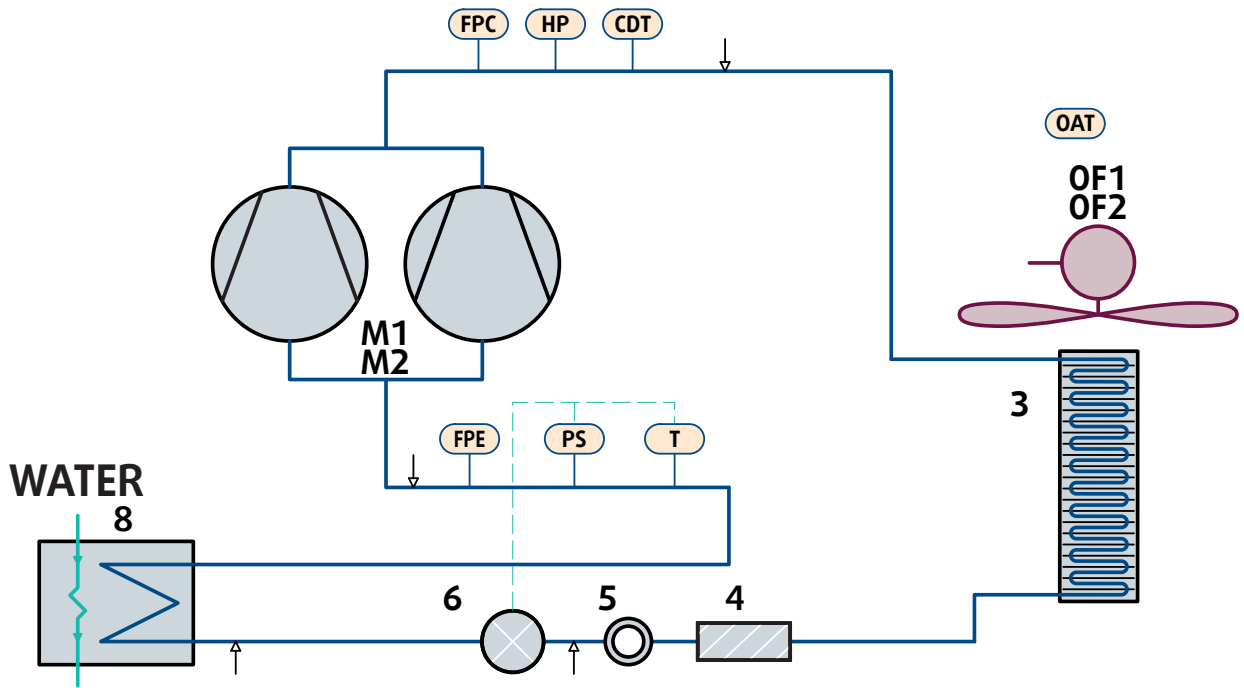

SYSAQUA.H

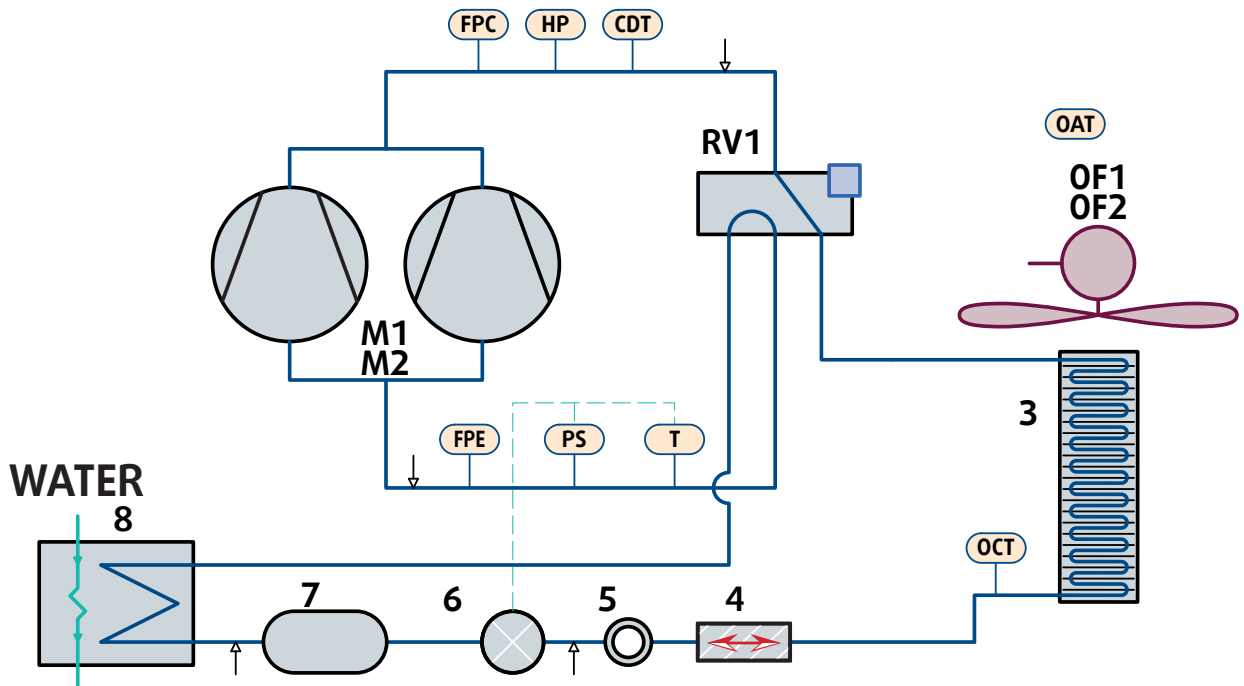

## HYDRAULIC CIRCUIT DIAGRAM SCHEMA DU CIRCUIT HYDRAULIQUE HYDRAULISCHER SCHALTPLAN SCHEMA CIRCUITALE IDRAULICO ESQUEMA CIRCULAR HIDRÁULICO

### English

#### RECOMMENDED INSTALLATION

<b>CF</b>	Connexion flexible
<b>VV</b>	Drain valve
<b>VA</b>	Globe valve
<b>VR</b>	Water charging valve
<b>MN</b>	Manometer

#### HYDRAULIC CIRCUIT SYSAQUA

<b>FT</b>	Filter (supplied loose)
<b>EWC/LWC</b>	Intlet/outlet gas male connection ➤ SYSAQUA 20-40: 1" 1/2"
<b>VE</b>	Pressure expansion tank
<b>WPS</b>	Lack of water pressure switch (Optional)
<b>SS</b>	Safety valve
<b>WP</b>	Pump
<b>PA</b>	Automatic air vent
<b>CL</b>	Pressure tap 3/8"
<b>EWT</b>	Intlet water temperature sensor
<b>LWT</b>	Outlet water temperature sensor
<b>PHE</b>	Plate heat exchanger
<b>RAG</b>	Antifreeze heater
<b>FS</b>	Flow switch
<b>WT</b>	Water tank
<b>VD</b>	Drain valve
<b>WPT</b>	Pressure transducer (option)

### Français

#### INSTALLATION RECOMMANDÉE

<b>CF</b>	Connexion flexible
<b>VV</b>	Vanne de vidange
<b>VA</b>	Vanne d'arrêt
<b>VR</b>	Vanne de remplissage
<b>MN</b>	Manomètre

#### CIRCUIT HYDRAULIQUE SYSAQUA

<b>FT</b>	Filtre à tamis (Livré non monté)
<b>EWC/LWC</b>	Connexion entrée /sortie d'eau GAS "M" ➤ SYSAQUA 20-40: 1" 1/2"
<b>VE</b>	Vase d'expansion
<b>WPS</b>	Pressostat manque d'eau (Option)
<b>SS</b>	Soupape
<b>WP</b>	Pompe
<b>PA</b>	Purgeur automatique
<b>CL</b>	Prise de pression 3/8"
<b>EWT</b>	Sonde température d'entrée d'eau
<b>LWT</b>	Sonde température sortie d'eau
<b>PHE</b>	Echangeur à plaques
<b>RAG</b>	Résistances antigel
<b>FS</b>	Détecteur de débit
<b>WT</b>	Ballon tampon
<b>VD</b>	Vanne de vidange
<b>WPT</b>	Transducteur de pression hydraulique (option)

### Deutsch

#### EMPFOHLENE INSTALLATION

<b>CF</b>	Schlauchverbindung
<b>VV</b>	Ablassventil
<b>VA</b>	Absperrhahn
<b>VR</b>	Füllventil
<b>MN</b>	Manometer

#### WASSERKREISLAUF SYSAQUA

<b>FT</b>	Siebfilter (nicht montiert geliefert)
<b>EWC/LWC</b>	Verbindung Wassereintritt / -austritt GAS "M" ➤ SYSAQUA 20-40: 1" 1/2"
<b>VE</b>	Expansionsgefäß
<b>WPS</b>	Wassermangel-Druckwächter (Option)
<b>SS</b>	Ventil
<b>WP</b>	Pumpe
<b>PA</b>	Automatische Entlüftung
<b>CL</b>	3/8" Druckanschluss
<b>EWT</b>	Wassereintritt-Temperaturfühler
<b>LWT</b>	Wasseraustritt-Temperaturfühler
<b>PHE</b>	Plattenwärmetauscher
<b>RAG</b>	Frostschutz-Widerstände
<b>FS</b>	Strömungswächter
<b>WT</b>	Vorratsbehälter
<b>VD</b>	Ablassventil
<b>WPT</b>	Druckwandler (Option)

### Italiano

#### INSTALLAZIONE CONSIGLIATA

<b>CF</b>	Collegamento flessibile
<b>VV</b>	Valvola di scarico
<b>VA</b>	Valvola di arresto
<b>VR</b>	Valvola di riempimento
<b>MN</b>	Manometro

#### CIRCUITO IDRAULICO SYSAQUA

<b>FT</b>	Filtro fine a rete (Fornito non montato)
<b>EWC/LWC</b>	Collegamento ingresso/uscita dell'acqua GAS "M" ➤ SYSAQUA 20-40: 1" 1/2"
<b>VE</b>	Vaso di espansione
<b>WPS</b>	Pressostato mancanza di acqua (Opzione)
<b>SS</b>	Valvola
<b>WP</b>	Pompa
<b>PA</b>	Sfiato automatico
<b>CL</b>	Presa di pressione 3/8"
<b>EWT</b>	Sonda temperatura di ingresso dell'acqua
<b>LWT</b>	Sonda temperatura di uscita dell'acqua
<b>PHE</b>	Scambiatore a piastre
<b>RAG</b>	Resistenze antigelo
<b>FS</b>	Sensore di portata
<b>WT</b>	Serbatoio inerziale
<b>VD</b>	Valvola di scarico
<b>WPT</b>	Trasduttore di pressione idraulica (opzionale)

### Español

#### INSTALACIÓN RECOMENDADA


<b>CF</b>	Conexión flexible
<b>VV</b>	Válvula de vaciado
<b>VA</b>	Válvula de parada
<b>VR</b>	Válvula de llenado
<b>MN</b>	Manómetro

#### CIRCUITO HIDRÁULICO SYSAQUA


<b>FT</b>	Filtro de tamiz (suministrado no montado)
<b>EWC/LWC</b>	Conexión entrada/salida de agua GAS "M" ➤ SYSAQUA 20-40: 1" 1/2"
<b>VE</b>	Vaso de expansión
<b>WPS</b>	Presóstato falta de agua (opcional)
<b>SS</b>	Válvula
<b>WP</b>	Bomba
<b>PA</b>	Purgador automático
<b>CL</b>	Toma de presión 3/8"
<b>EWT</b>	Sonda de temperatura de entrada de agua
<b>LWT</b>	Sonda de temperatura de salida de agua
<b>PHE</b>	Intercambiador de placas
<b>RAG</b>	Resistencia anticongelación
<b>FS</b>	Detector de caudal
<b>WT</b>	Balón intermedio
<b>VD</b>	Válvula de vaciado
<b>WPT</b>	Transductor de presión hidráulica (opcional)



WITHOUT PUMP

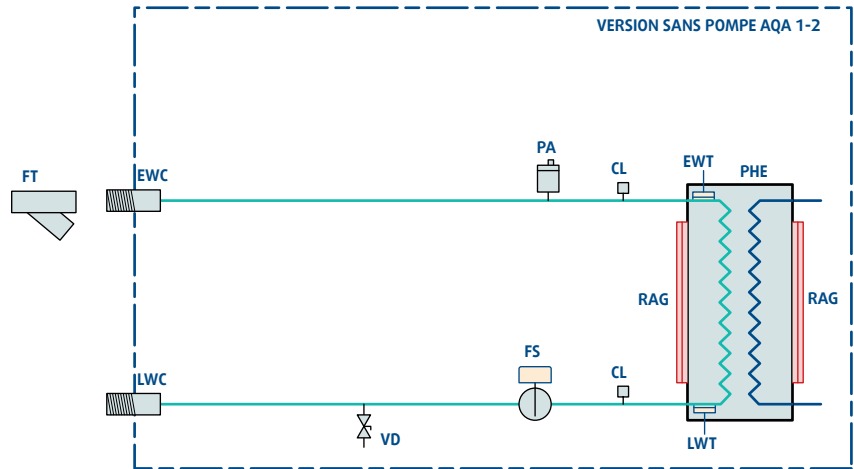


WITH 1 PUMP

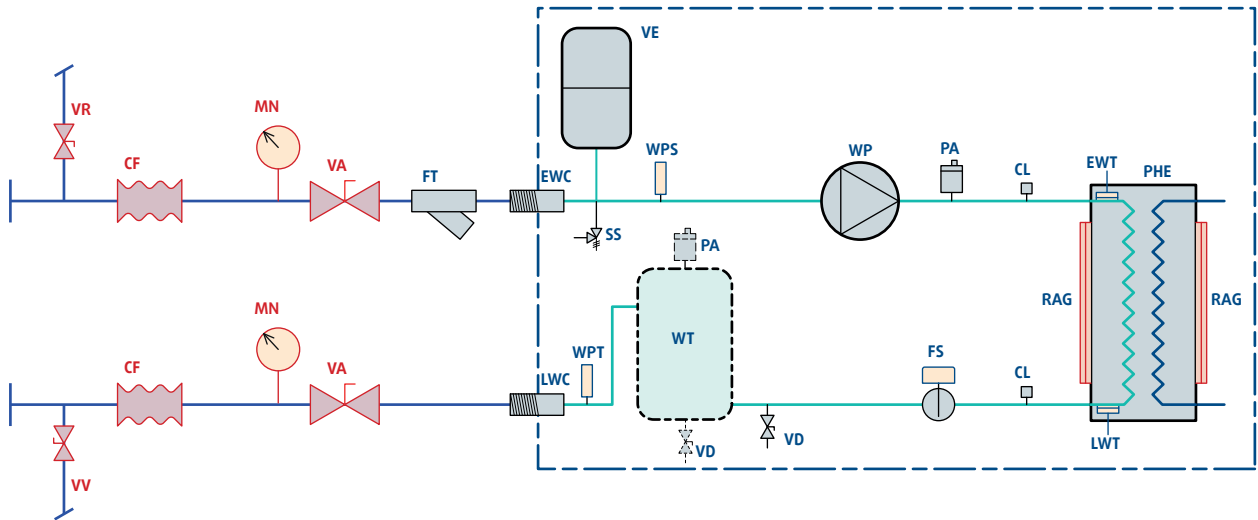

# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO



## PRESSURE LOSSES OF THE PLATE HEAT EXCHANGER PERTE DE CHARGE DE L'ECHANGEUR A PLAQUES DRUCKVERLUST PLATTENWÄRMETAUSCHER PERDITA DI CARICO SCAMBIATORE A PIASTRE PÉRDIDA DE CARGA INTERCAMBIADOR DE PLACAS

SYSAQUA 20 - 25 - 30 - 35 - 40


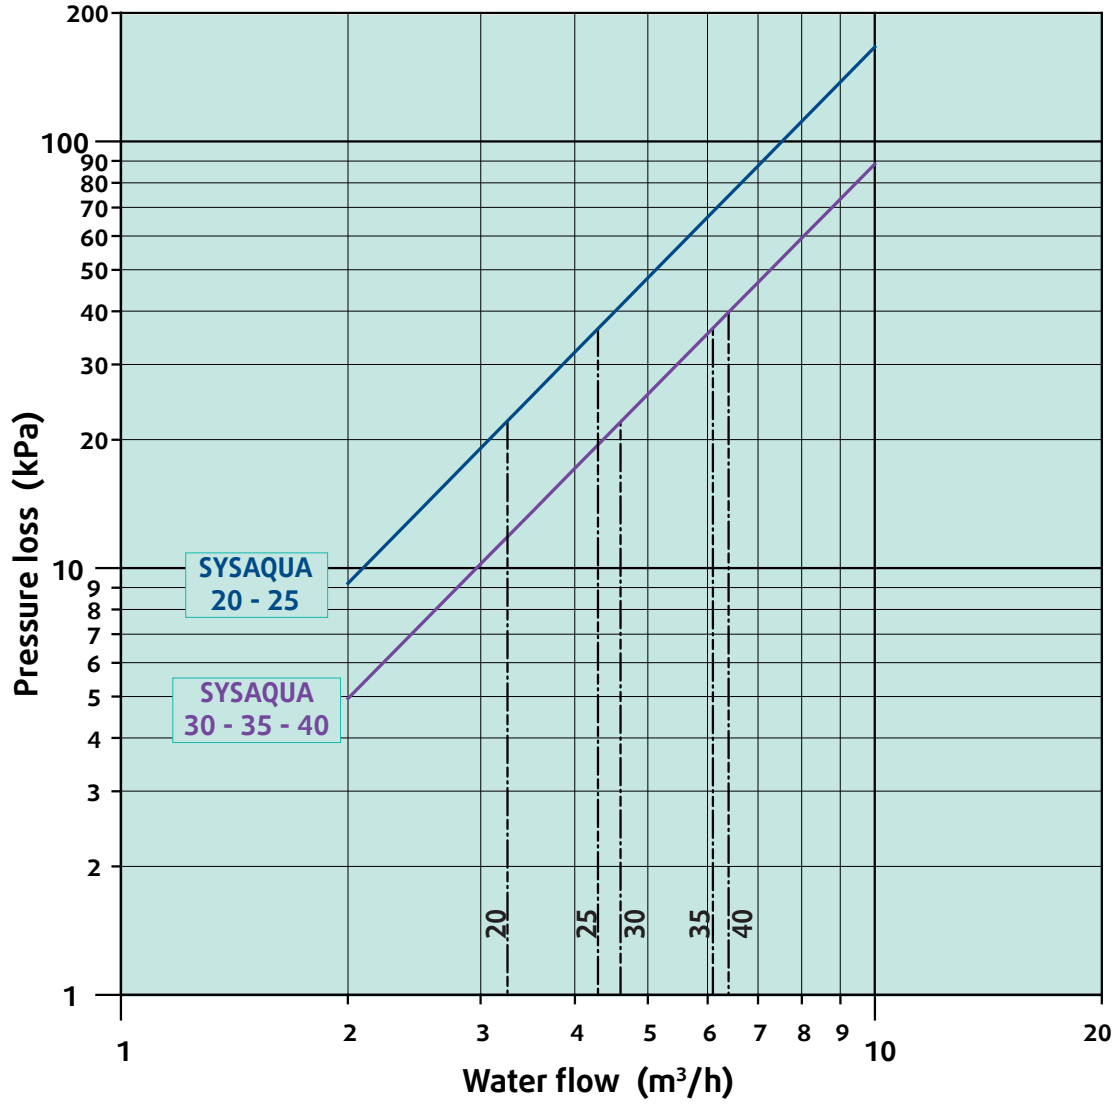


HYDRAULIC PUMPS CURVES  
 COURBES DES POMPES HYDRAULIQUES  
 KURVEN VON HYDRAULIKPUMPEN  
 CURVE DELLE POMPE IDRAULICHE  
 CURVAS BOMBAS HIDRÁULICAS

SYSAQUA 20 - 25 - 30

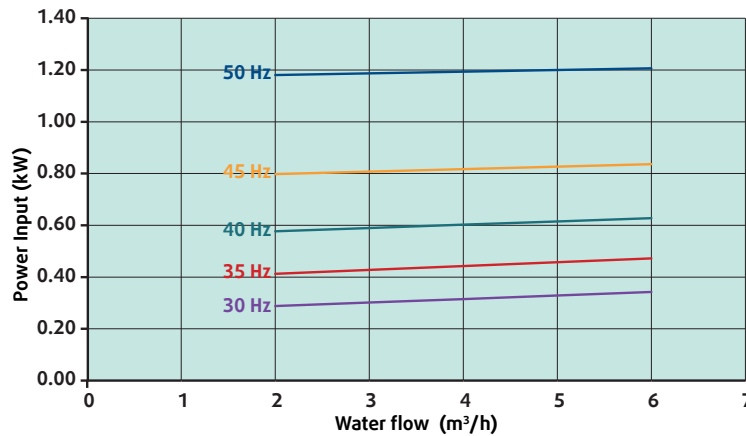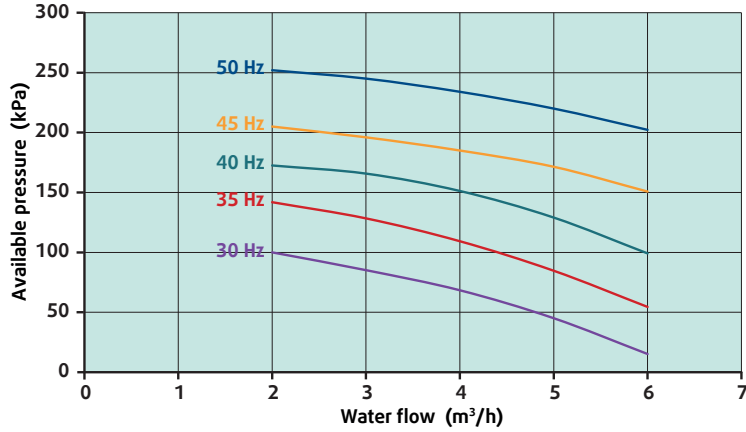

SYSAQUA 35 - 40

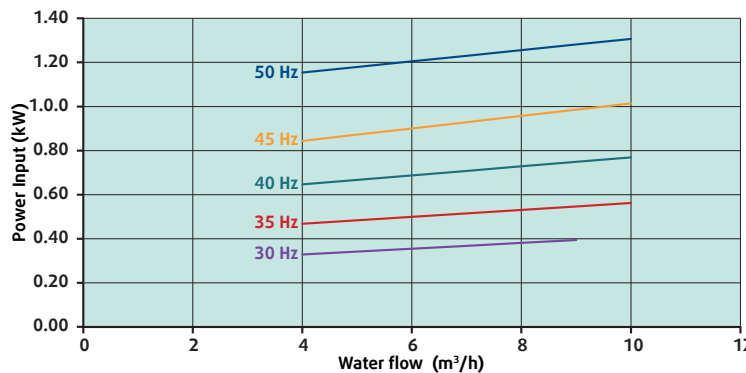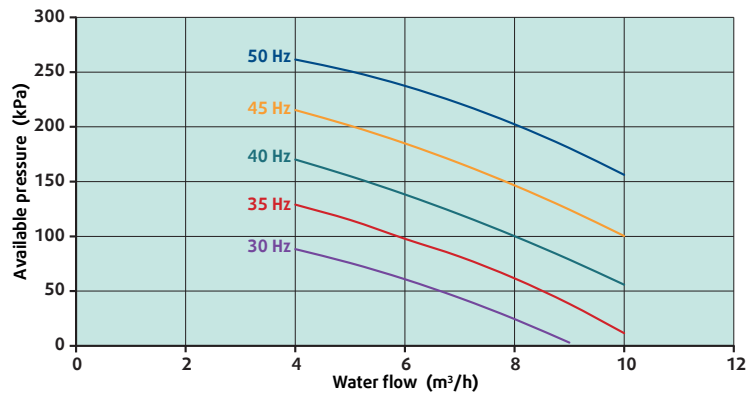

### WIRING DIAGRAM SCHEMAS ELECTRIQUES STROMLAUFPLANS SCHEMA ELETRICO ESQUEMA ELECTRICO

#### TAKE CARE!

These wiring diagrams are correct at the time of publication. Manufacturing changes can lead to modifications. Always refer to the diagram supplied with the product.

#### ATTENTION

Ces schémas sont corrects au moment de la publication. Les variantes en fabrication peuvent entraîner des modifications. Reportez-vous toujours au schéma livré avec le produit.

#### ACHTUNG!

Diese Stromlaufpläne sind zum Zeitpunkt der Veröffentlichung gültig. In Herstellung befindliche Varianten können Änderungen mit sich bringen. In jedem Fall den mit dem Produkt gelieferten Stromlaufplan hinzuziehen.

#### ATTENZIONE !

Questi schemi sono corretti al momento della pubblicazione. Le varianti apportate nel corso della fabbricazione possono comportare modifiche. Far sempre riferimento allo schema fornito con il prodotto.

#### ATENCIÓN !

Esto esquemas son correctos en el momento de la publicación. Pero las variantes en la fabricación pueden ser motivo de modificaciones. Remítase siempre al esquema entregado con el producto.

**POWER SUPPLY MUST BE SWITCHED OFF BEFORE STARTING TO WORK IN THE ELECTRIC CONTROL BOXES!**

**MISE HORS TENSION OBLIGATOIRE AVANT TOUTE INTERVENTION DANS LES BOITIERS ELECTRIQUES.**

**VOR JEDEM EINGRIFF AN DEN ANSCHLUßKÄSTEN UNBEDINGT DAS GERÄT ABSCHALTEN!**

**PRIMA DI OGNI INTERVENTO SULLE CASSETTE ELETTRICHE ESCLUDERE TASSATIVAMENTE L'ALIMENTAZIONE !**

**PUESTA FUERA DE TNESIÓN OBLIGATORIA ANTES DE CUALQUIER INTERVENCIÓN EN LAS CAJAS ELÉCTRICAS!**



LEGEND

	English	Français	Deutsch	Italiano	Español
	<b>POWER SUPPLY</b>	<b>SCHEMAS DE PUISSANCE</b>	<b>LEISTUNGSPÄNE</b>	<b>SCHEMI DI POTENZA</b>	<b>ESQUEMAS DE POTENCIA</b>
	<b>DESCRIPTION</b>	<b>DESIGNATION</b>	<b>BEZEICHNUNG</b>	<b>DENOMINAZIONE</b>	<b>DESCRIPCION</b>
QG	main section switch	interrupteur sectionneur principal	Hauptschalter	interruttore principale	interruptor seccionador principal
KA1	three-phase network control relay (phase sequence and cut-out)	module de contrôle d'ordre et de coupure de phases	Phasenabschaltungs- und reihenfolge Kontrollmodul	modulo di controllo d'ordine e di interruzione di fasi	módulo de control de orden y de corte de fases
FT1/2	M1/2 compressors magneto-thermal circuit breaker	dijoncteurs magnétothermiques des compresseurs M1/2	Magnétothermische Schutzschalter der Verdichter M1/2	disgiuntori magnetotermici dei compressori M1/2	disyuntores magnetotérmicos de los compresores M1/2
K1/2	M1/2 compressors power circuit contactor	contacteurs de puissance des compresseurs M1/2	Leistungsschütze der Verdichter M1/2	contattori di potenza dei compressori M1/2	contactores de potencia de los compresores M1/2
M1/2	compressors 1 and 2	compresseurs 1 et 2	Verdichter 1 und 2	compressori 1 e 2	compresores 1 y 2
R1/2	compressors crankcase heater	résistances de carter des compresseurs M1/2	Ölsumpfeizungen der Verdichter M1/2	resistenze del carter dei compressori M1/2	resistencias de cárter de los compresores M1/2
FTC	control circuit magneto-thermal circuit breaker	dijoncteur magnétothermique du circuit de commande	Magnétothermischer Schutzschalter des Steuerkreises	disgiuntore magnetotermico del circuito di comando	disyuntor magnetotérmico del circuito de comando
FTOF-L	outdoor fans magneto-thermal breaker	dijoncteur magnétothermique de la ventilation extérieure	Magnétothermischer Schutzschalter der externen Lüftung	disgiuntore magnetotermico della ventilazione esterna	disyuntor magnetotérmico de la ventilación exterior
FTOF-H	outdoor fans magneto-thermal circuit breaker	dijoncteur magnétothermique de la ventilation extérieure	Magnétothermischer Schutzschalter der externen Lüftung	disgiuntore magnetotermico della ventilazione esterna	disyuntor magnetotérmico de la ventilación exterior
KOF	outdoor fans power contactors	contacteur de puissance de la ventilation extérieure	Leistungsschütz der externen Lüftung	contattore di potenza della ventilazione esterna	contactor de potencia de la ventilación exterior
KOF-L	outdoor fans power contactors	contacteur de puissance de la ventilation extérieure	Leistungsschütz der externen Lüftung	contattore di potenza della ventilazione esterna	contactor de potencia de la ventilación exterior
KOF-H	outdoor fans power contactors	contacteur de puissance de la ventilation extérieure	Leistungsschütz der externen Lüftung	contattore di potenza della ventilazione esterna	contactor de potencia de la ventilación exterior
OF1/2	outdoor fan motor	moteur de la ventilation extérieure	Motor der externen Lüftung	motore della ventilazione esterna del circuito	motor de la ventilación exterior
S1	compressor internal safety device 1	sécurité interne compresseur 1	Eingebauter Wärmeschutzschalter Verdichter 1	sicurezza interna compressore 1	seguridad interna compresor 1
	<b>English</b>	<b>Français</b>	<b>Deutsch</b>	<b>Italiano</b>	<b>Español</b>
	<b>CONTROL AND REGULATION</b>	<b>SCHEMAS DE COMMANDE</b>	<b>STEUERPLÄNE</b>	<b>SCHEMI DI COMANDO</b>	<b>ESQUEMAS DE COMANDO</b>
	<b>DESCRIPTION</b>	<b>DESIGNATION</b>	<b>BEZEICHNUNG</b>	<b>DENOMINAZIONE</b>	<b>DESCRIPCION</b>
POL 423.5	regulation	régulation	Regelung	regolazione	regulación
POL 688	transformer 230V/24V-25VA	transformateur 230V/24V-25VA	Transformator 230V/24V-25VA	trasformatore 230V/24V-25VA	transformador 230V/24V-25VA
T1	fuse terminal + fuse 1A	borne fusible + fusible 1A	Sicherungsklemme + Sicherung 1A	portafusibile + fusibile 1A	terminal de fusible + fusible 1A
FFT	1 and 2 compressors additional magneto-thermal circuit breaker	contacts additionnels disjoncteur magnétothermique des compresseurs 1 et 2	Zusätzliche Kontakte des magnétothermischen Schutzschalters der Verdichter 1 und 2	contatti aggiuntivi disgiuntore magnetotermico dei compressori 1 e 2	contactos adicionales disyuntor magnetotérmico de los compresores 1 y 2
FT1/2	outdoor fans additional magneto-thermal circuit breaker	contact additionnel disjoncteur magnétothermique de la ventilation extérieure	Zusätzlicher Kontakt des magnétothermischen Schutzschalters der externen Lüftung	contatto aggiuntivo disgiuntore magnetotermico della ventilazione esterna	contacto adicional disyuntor magnetotérmico de la ventilación exterior

# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

English	Français	Deutsch	Italiano	Español
CONTROL AND REGULATION	SCHEMAS DE COMMANDE	STUERPLÄNE	SCHEMI DI COMANDO	ESQUEMAS DE COMANDO
DESCRIPTION	DESIGNATION	BEZEICHNUNG	DENOMINAZIONE	DESIGNACIÓN
outdoor fans additional magnetothermal circuit breaker	contact additionnel disjoncteur magnétothermique de la ventilation extérieure	Zusätzlicher Kontakt des magnétothermischen Schutzschalters der externen Lüftung	contatto aggiuntivo disgiuntore magnetotermico della ventilazione esterna	contacto adicional disyuntor magnetotérmico de la ventilación exterior
outdoor fans motors internal protection	sécurité interne du moteur de la ventilation extérieure	Eingebauter Wärmeschutzschalter des Motors der externen Lüftung	sicurezza interna del motore della ventilazione esterna	seguridad interna del motor de la ventilación exterior
flow switch	détecteur de débit d'eau (flow switch)	Strömungswächter (flow switch)	sensores di portata di acqua (flussostato)	detector de caudal de agua (flow switch)
water low pressure switch (option)	pressostat manque d'eau (option)	Wassermangel-Druckwächter (Option)	pressostato mancanza di acqua (opzionale)	presostato falta de agua (opcional)
high pressure safety relay	relais de sécurité haute pression	Hochdruck-Sicherheitsrelais	relé di sicurezza ad alta pressione	relé de seguridad alta presión
automatic reset high-pressure pressostats	pressostat haute pression à réarmement automatique.	Überdruckwächter mit automatischer Wiedereinschaltung	pressostato alta pressione a riarmo automatico.	presostato alta presión con rearme automático
M1/2 compressors power circuit contactor	contacteurs de puissance des compresseurs M1/2	Leistungsschütze der Verdichter M1/2	contattori di potenza dei compressori M1/2	contactores de potencia de los compresores M1/2
antifreeze electric heater	résistance anti-gel	Frostschutz-Widerstand	resistenza antigelo	resistencia anticongelación
4-way cycle changeover valves (option)	vanne d'inversion de cycle (option)	Umkehrzyklusventil (Option)	valvole di inversione di ciclo (opzionale)	válvula de inversión de ciclo (opcional)
three-phase network control contactor	contact du module de contrôle d'ordre et de coupure de phases	Kontakt des Phasenabschaltungs- und reihenfolge Kontrollmoduls	contatto del modulo di controllo d'ordine e di interruzione di fasi	contacto del módulo de control de orden y de corte de fases
pressure transducer (low pressure)	transducteur de pression (basse pression)	Druckwandler (Niederdruck)	trasduttore di pressione (bassa pressione)	transductor de presión (baja presión)
pressure transducer (high-pressure)	transducteur de pression (haute pression)	Druckwandler (Hochdruck)	trasduttore di pressione (alta pressione)	transductor de presión (alta presión)
de-icing temperature probe	sonde de température de batterie ailetée	Temperaturfühler der verrippten Batterie	sonda di temperatura della batteria alettata	sonda de temperatura de batería con aletas
outdoor temperature probe (air)	sonde de température extérieure (air)	Außentemperaturfühler (Luft)	sonda di temperatura esterna (aria)	sonda de temperatura exterior (aire)
high discharge temperature probe	sonde de température de refoulement	Auslass-Temperaturfühler	sonda di temperatura di mandata	sonda de temperatura de descarga
inlet water temperature probe	sonde de température d'entrée d'eau	Wassereintritt-Temperaturfühler	sonda di temperatura di ingresso dell'acqua	sonda de temperatura de entrada de agua
outlet water temperature probe	sonde de température de sortie d'eau	Wasseraustritt-Temperaturfühler	sonda di temperatura di uscita dell'acqua	sonda de temperatura de salida de agua
compressor internal safety device 1	sécurité interne compresseur 1	Eingebauter Wärmeschutzschalter Verdichter 1	sicurezza interna compressore 1	seguridad interna compresor 1
ON/OFF switch	interrupteur marche/arrêt	Ein-/Aus-Schalter	interruttore on/off	interruptor funcionamiento/parada
switch day / night (not supplied)	interrupteur jour/nuit (non fourni)	Tag-/Nacht-Schalter (nicht mitgeliefert)	interruttore giorno/notte (non fornito)	interruptor día/noche (no suministrado)
switch summer / winter (closed in winter) (not supplied)	interrupteur été/hiver (fermé en hiver) (non fourni)	Sommer-/Winter-Schalter (im Winter geschlossen) (nicht mitgeliefert)	interruttore estate/inverno (chiuso in inverno) (non fornito)	interruptor verano/invierno (cerrado en invierno) (no suministrado)

	English	Français	Deutsch	Italiano	Español
	OPTIONS	OPTIONS	OPTIONEN	OPZIONI	OPCIONES
	DESCRIPTION	DESIGNATION	BEZEICHNUNG	DENOMINAZIONE	DESIGNACIÓN
	OPTION PUMP	OPTION POMPE	OPTION PUMPE	OPZIONE POMPA	OPCIÓN BOMBA
WP1	water pump	pompe hydraulique	Wasserpumpe	pompa idraulica	bomba hidráulica
KWP1	water pump motor power contact (option)	contacteur de puissance du moteur de la pompe hydraulique (option)	Leistungsschütz des Wasserpumpenmotors (Option)	contattore di potenza del motore della pompa idraulica (opzionale)	contactor de potencia del motor de la bomba hidráulica (opcional)
FTWP	water pump motor magnetothermal circuit breaker (option)	disjoncteur magnétothermique du moteur de la pompe hydraulique (option)	Magnetothermischer Schutzschalter des Wasserpumpenmotors (Option)	disgiuntore magnetotermico del motore della pompa idraulica (opzionale)	disyuntor magnetotérmico del motor de la bomba hidráulica (opcional)
ACS3	three phase frequency variator of water pump motor (option)	variateur de fréquence triphasé du moteur de la pompe hydraulique (option)	Drehstrom-Frequenzumrichter der Wasserpumpenmotors (Option)	variatore di frequenza trifase del motore della pompa idraulica (opzionale)	variador de frecuencia trifásico del motor de la bomba hidráulica (opcional)
WPT	pressure transducer (option)	transducteur de pression hydraulique (option)	Druckwandler (Option)	trasduttore di pressione idraulica (opzionale)	transductor de presión hidráulica (opcional)
	OPTION DUAL PUMPS	OPTION DOUBLE POMPE	OPTION DOPPELTE PUMPE	OPZIONE POMPA DOPPIA	OPCIÓN DOBLE BOMBA
WP2	water pump	pompe hydraulique	Wasserpumpe	pompa idraulica	bomba hidráulica
FTWP	water pump motor magnetothermal circuit breaker	disjoncteur magnétothermique du moteur de la pompe hydraulique	Magnetothermischer Schutzschalter des Wasserpumpenmotors	disgiuntore magnetotermico del motore della pompa idraulica	disyuntor magnetotérmico del motor de la bomba hidráulica
KWP2	water pump motor power contact	contacteur de puissance du moteur de la pompe hydraulique	Leistungsschütz des Wasserpumpenmotors	contattore di potenza del motore della pompa idraulica	contactor de potencia del motor de la bomba hidráulica
SWP	selector of pump 1 or 2	sélecteur de la pompe hydraulique 1 ou 2	Wahlschalter für Wasserpumpe 1 oder 2	selettore della pompa idraulica 1 o 2	selector de la bomba hidráulica 1 ó 2
	OPTION ALL SEASONS	OPTION TOUTES SAISONS	OPTION GANZJAHRESBETRIEB	OPZIONE TUTTE LE STAGIONI	OPCIÓN TODAS LAS ESTACIONES DEL AÑO
FTOF1/2	magnetothermal circuit breaker	disjoncteur magnétothermique	Magnetothermischer Schutzschalter	disgiuntore magnetotermico	disyuntor magnetotérmico
ACS1/2	three phase frequency variator of outside ventilation	variateur de fréquence triphasé des moteurs de la ventilation extérieure	Drehstrom-Frequenzumrichter der Motoren der externen Lüftung	variatore di frequenza trifase della ventilazione esterna	variador de frecuencia trifásico de los motores de la ventilación exterior
KOF1	three phase frequency variator command relay	relais de commande des variateurs de fréquence triphasés	Steuerrelais der Drehstrom-Frequenzumrichter	relè di comando dei variatori di frequenza trifase	relé de comando de los variadores de frecuencia trifásicos
FPC.AS	pressure transducer (high-pressure)	transducteur de pression (haute pression)	Druckwandler (Hochdruck)	trasduttore di pressione (alta pressione)	transductor de presión (alta presión)
KAZ	auxiliary relay (reversible case)	relais auxiliaire (cas réversible)	Hilfsrelais (reversible Fall)	relè ausiliario (caso reversibile)	relé auxiliar (caso reversible)

English	Français	Deutsch	Italiano	Español
OPTIONS	OPTIONS	OPTIONEN	OPZIONI	OPCIONES
DESCRIPTION	DESIGNATION	BEZEICHNUNG	DENOMINAZIONE	DESIGNACIÓN
OPTION SOFT STARTER	OPTION SOFT STARTER	OPTION SOFT STARTER	OPZIONE SOFT STARTER	OPCIÓN SOFT STARTER
Soft Starter	démarrEURS «Soft Starter»	Anlasser «Soft Starter»	motorini di avviamento «Soft Starter»	Motor de arranque «Soft Starter»
M1/2 compressors relay	relais des compresseurs M1/2	Relais der Verdichter M1/2	relè dei compressorì M1/2	relè de los compresores M1/2
OPTION WITHOUT NEUTRAL	OPTION SANS NEUTRE	OPTION OHNE STERNPUNKT	OPTION SENZA NEUTRO	OPCIÓN SIN NEUTRO
bipolar fuse carrier	porte-fusibles bipolaires	Sicherungseinsatzträger bipolar	porta-fusibile bipolar	portafusible bipolar
transformer 400V/230V	transformateur 400V/230V	Transformator 400V/230V	trasformatori 400V/230V	transformadore 400V/230V
FAULT REPORTING OPTION	OPTION REPORT DEFAULT	OPTION STÖRMELDUNGSÜBERTRAGUNG	OPZIONE RIPORTO DIFETTO	OPCIÓN TRANSMISIÓN DE FALLO
fault report relay	relais report défaut	Relais Störmeldung	relè dei difetti	relè los fallos
fault report static relay	relais statique report défaut	statisches Relais Störmeldung	relè statico dei difetti	relè estático los fallos
NORDIC OPTION	OPTION PACK NORDIQUE	NORDISCHE OPTION	OPZIONE NORDICA	OPCIÓN NÓRDICO
thermostat electric heater	thermostat résistance pack nordique	Temperaturregler des Frostschutz-Widerstand	termostato resistenze vasche	termostato resistencia anticongelación
antifreeze electric heater	résistance pack nordique	Frostschutz-Widerstand	resistenza vasca	resistencia anticongelación
OPTION FAN OF ELECTRIC PANEL	OPTION VENTILATION DU COFFRET ELECTRIQUE	OPTION LÜFTUNG DER ELEKTRISCHEN TAFEL	OPZIONE VENTILAZIONE DEL QUADRO ELETTRICO	OPCIÓN VENTILACIÓN DE CUADRO ELECTRICO
fan thermostat of electric panel	thermostat ventilateur boîtier électrique	Temperaturregler des Lüftung der elektrischen Tafel	termostato ventilatore quadro elettrico	termostato ventilación de cuadro eléctrico
fan of electric panel	ventilateur boîtier électrique	Lüftung der elektrischen Tafel	ventilatore quadro elettrico	ventilación de cuadro eléctrico




SYSAQUA 20 - 25 - 30 - 35 - 40

CONTROL - POL423

CONTROL WIRING DIAGRAM
CHILLER 20/25/30/35
40/45/55
3991494
N805
SE 4630 A

BK	BLACK
BN	BROWN
BL	BLUE
GN	GREEN
GY	GREEN/YELLOW
GR	GREY
OR	ORANGE
RD	RED
VT	VIOLET
WH	WHITE

WIRING BY INSTALLER  
OPTIONAL

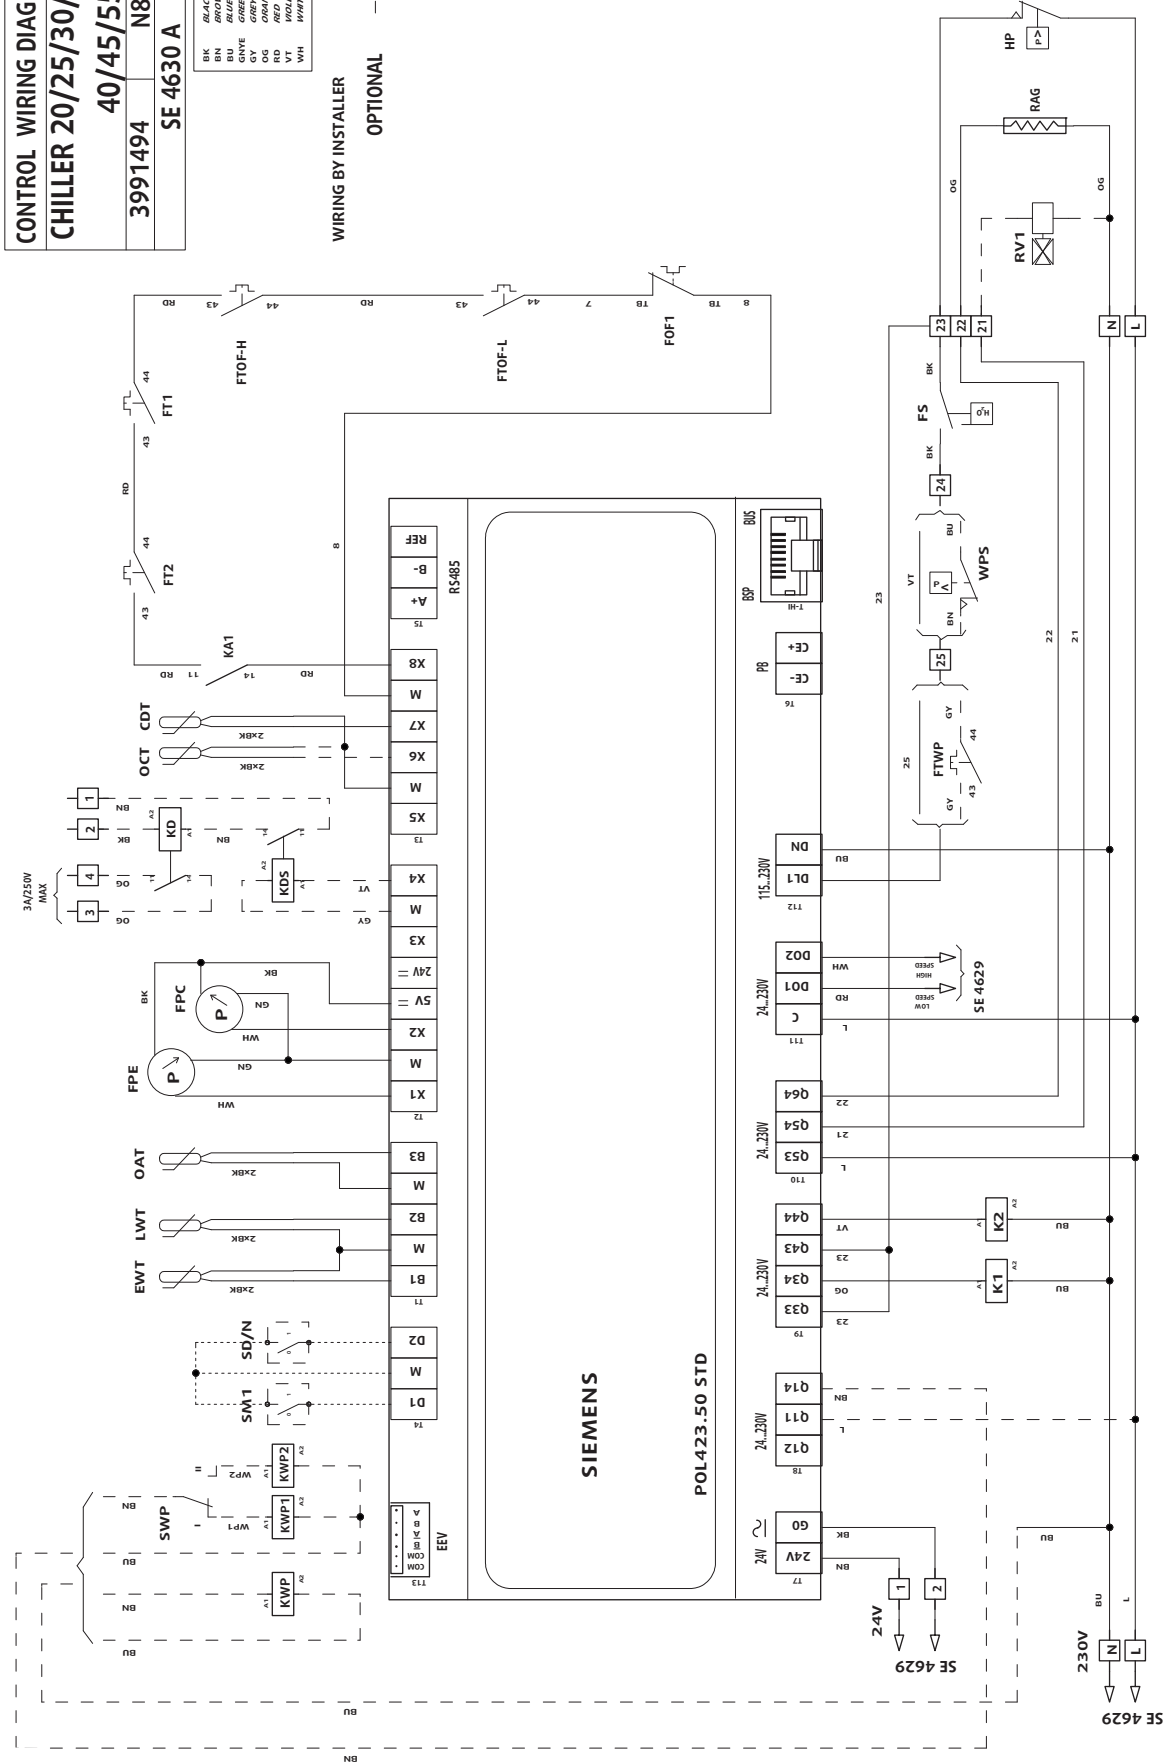


# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

POWER - POL423

<b>POWER WIRING DIAGRAM</b>	
<b>CHILLER 20/25/30/35/40/45/55</b>	
<b>3991493</b>	<b>N805</b>
<b>SE 4629 B</b>	

BK	BLACK
BN	BROWN
BU	BLUE
GV	GREEN/YELLOW
GY	YELLOW
OR	ORANGE
RD	RED
VT	VIOLET
WH	WHITE

OPTIONAL

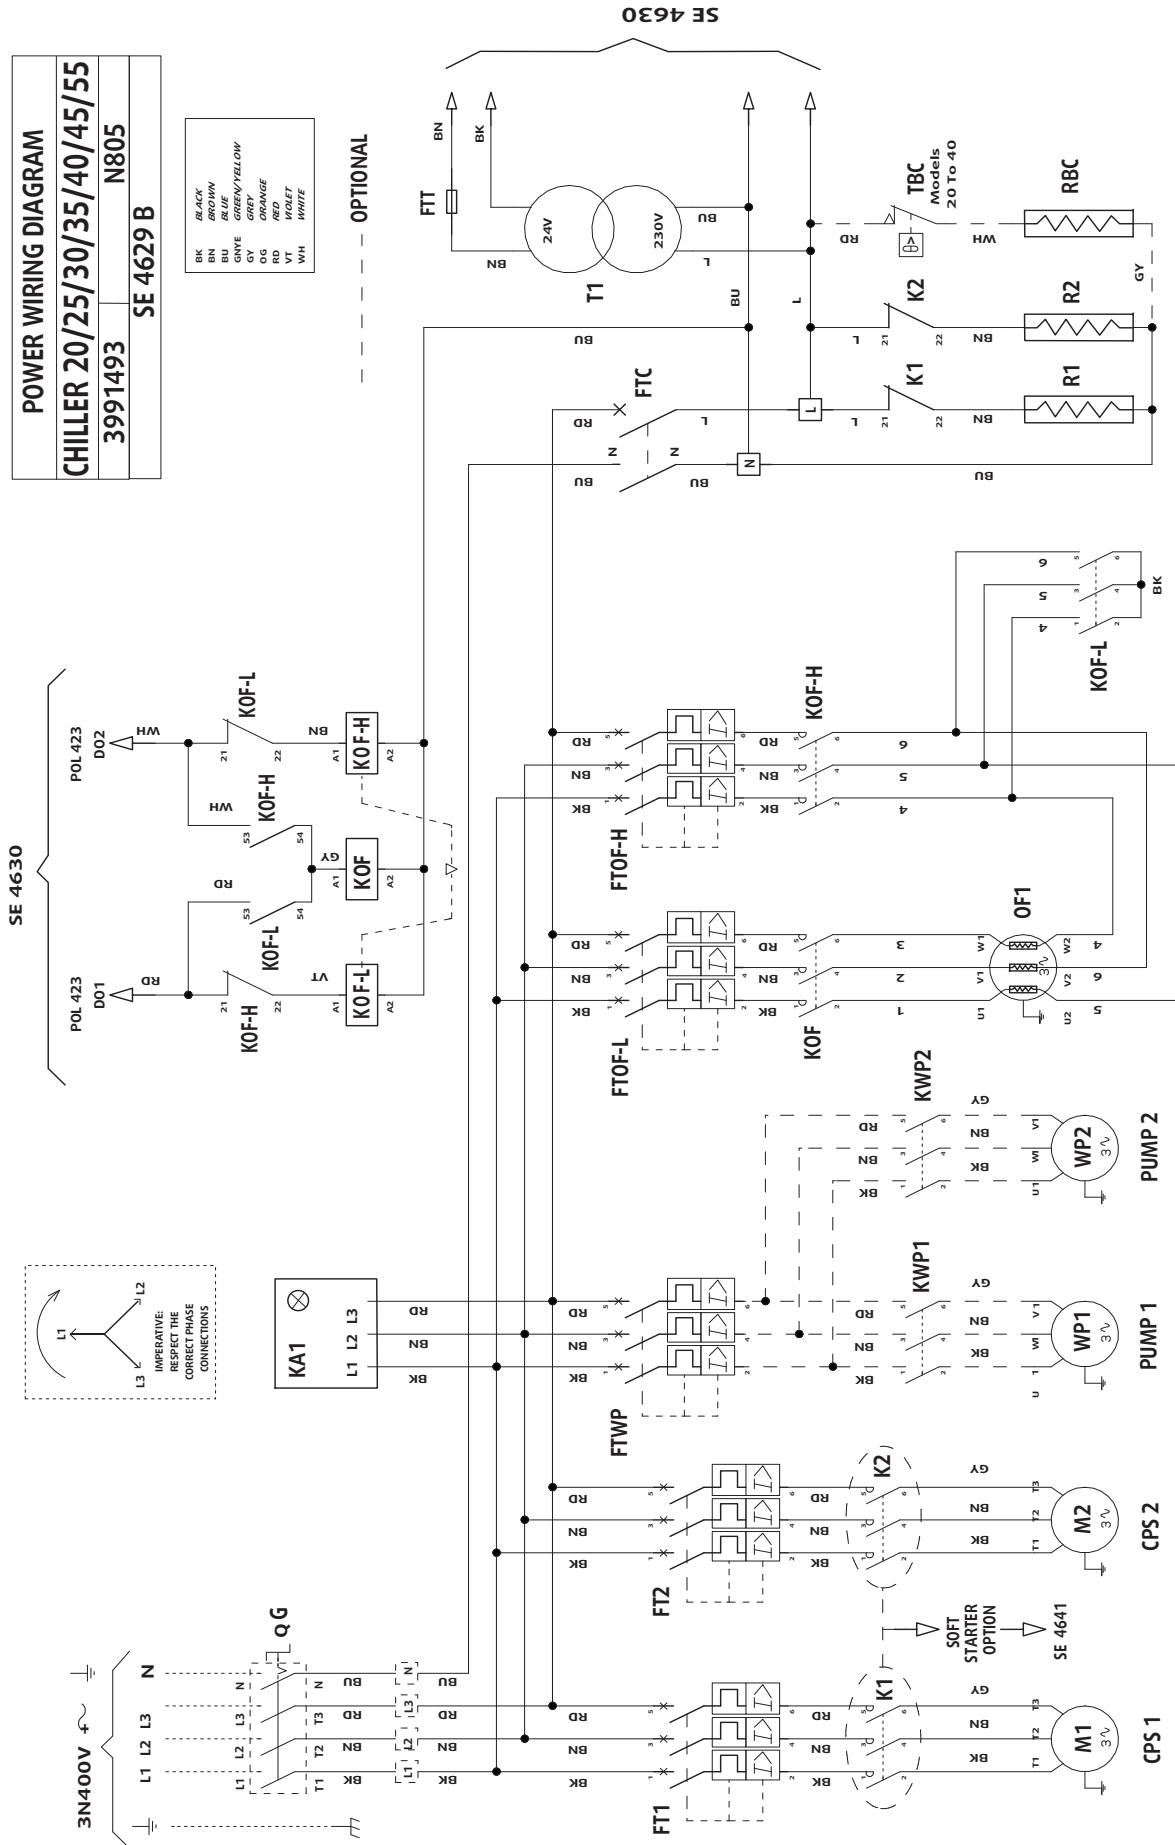


CONTROL - POL688

CONTROL WIRING DIAGRAM	
CHILLER 20/25/30/35/40/45/55	
J581620	N805
SE 4746 A	

BK	BLACK
BN	BROWN
BU	BLUE
GY	GREY
OG	ORANGE
RD	RED
WH	WHITE
WK	YELLOW

WIRING BY INSTALLER  
OPTIONAL

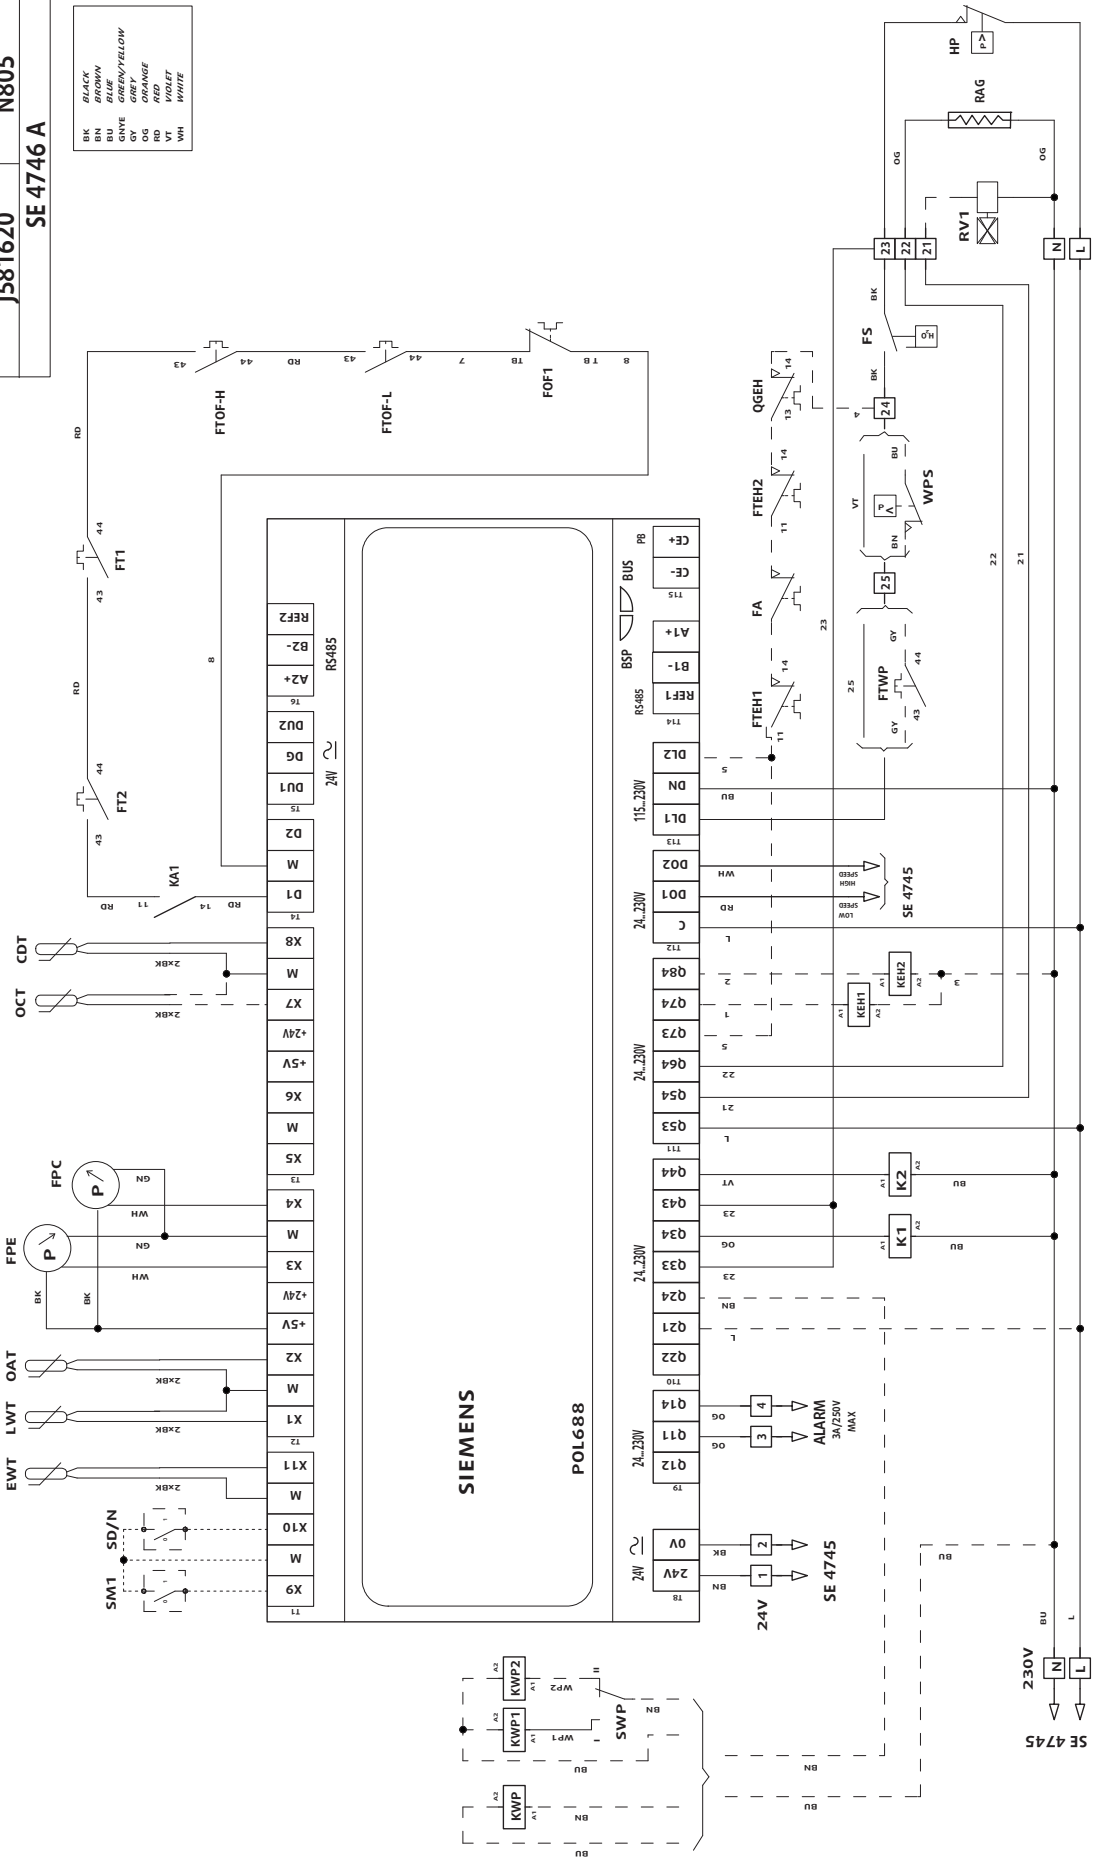

# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO



POWER - POL688

**POWER WIRING DIAGRAM**  
**CHILLER 20/25/30/35/40/45/55**  
**J581619 N805**  
**SE 4745**


BK	BLACK
BN	BROWN
GN	GREEN/YELLOW
GY	GREY
OG	ORANGE
VT	VIOLET
WH	WHITE

OPTIONAL

SE 4746

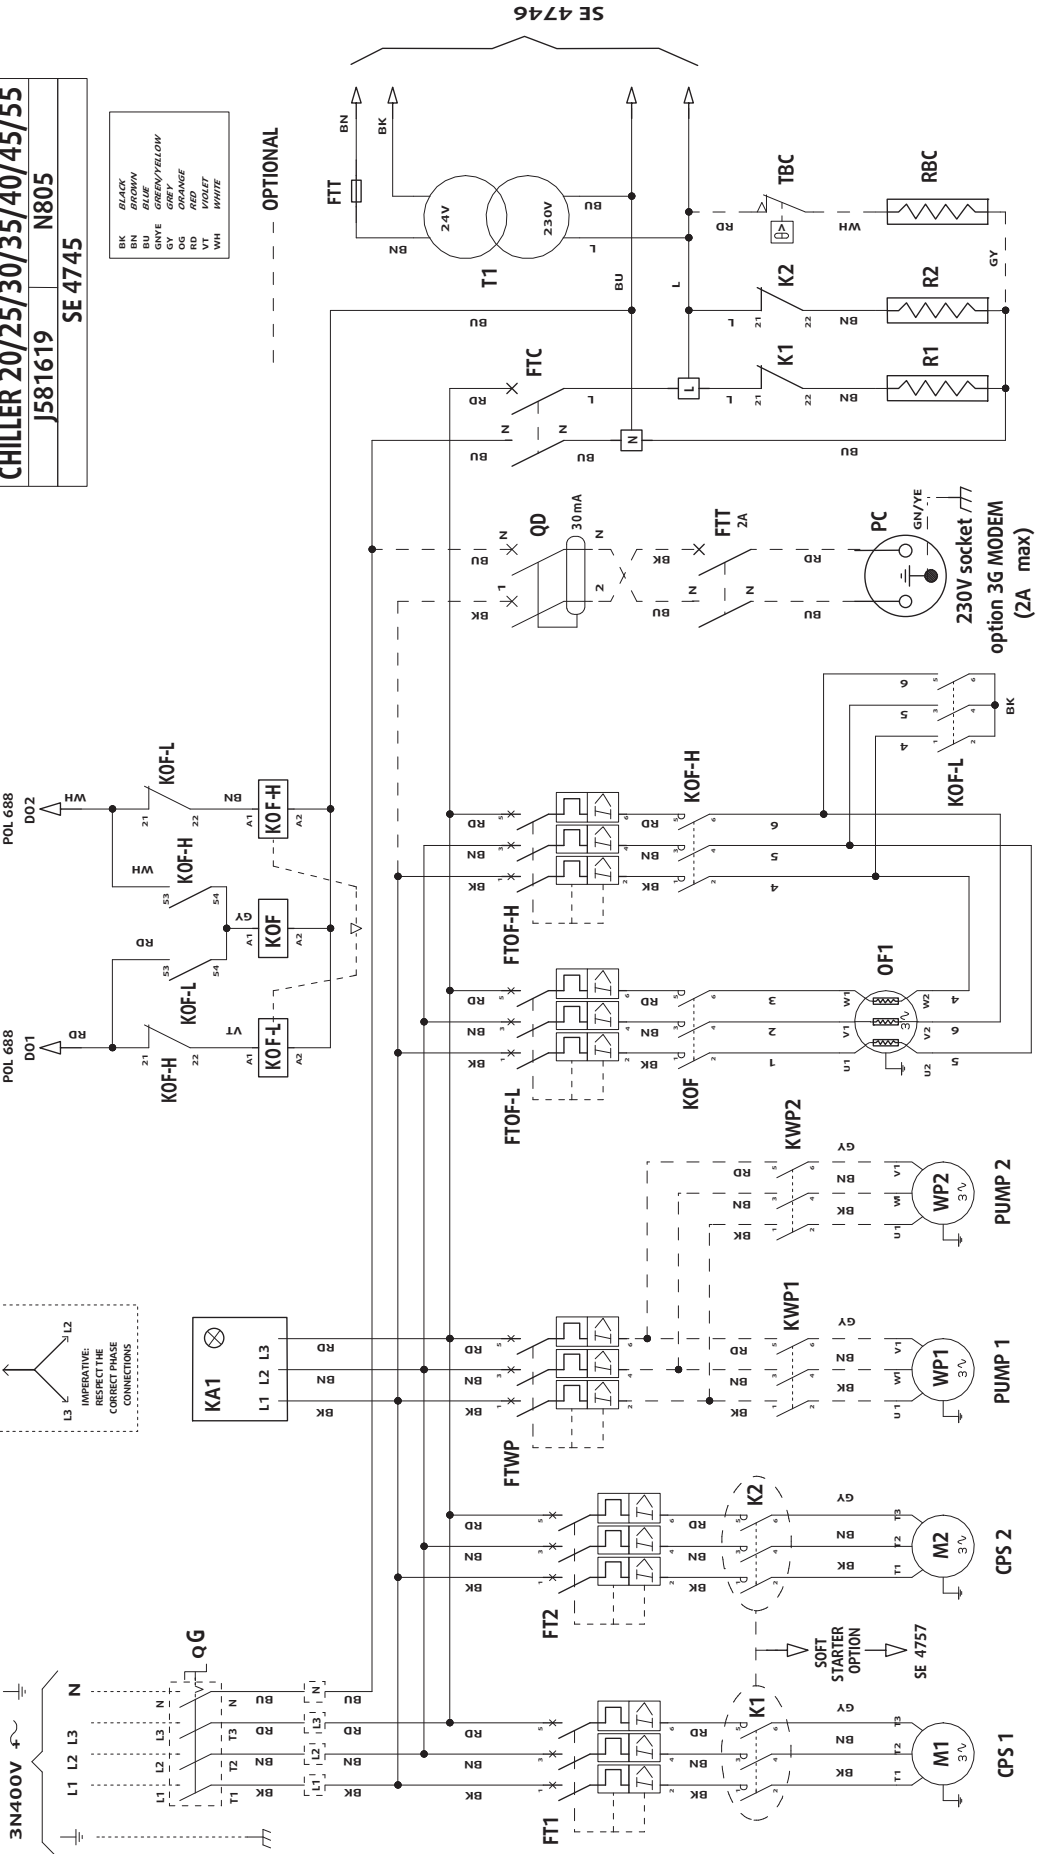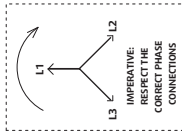

TTS - CONTROL - POL423

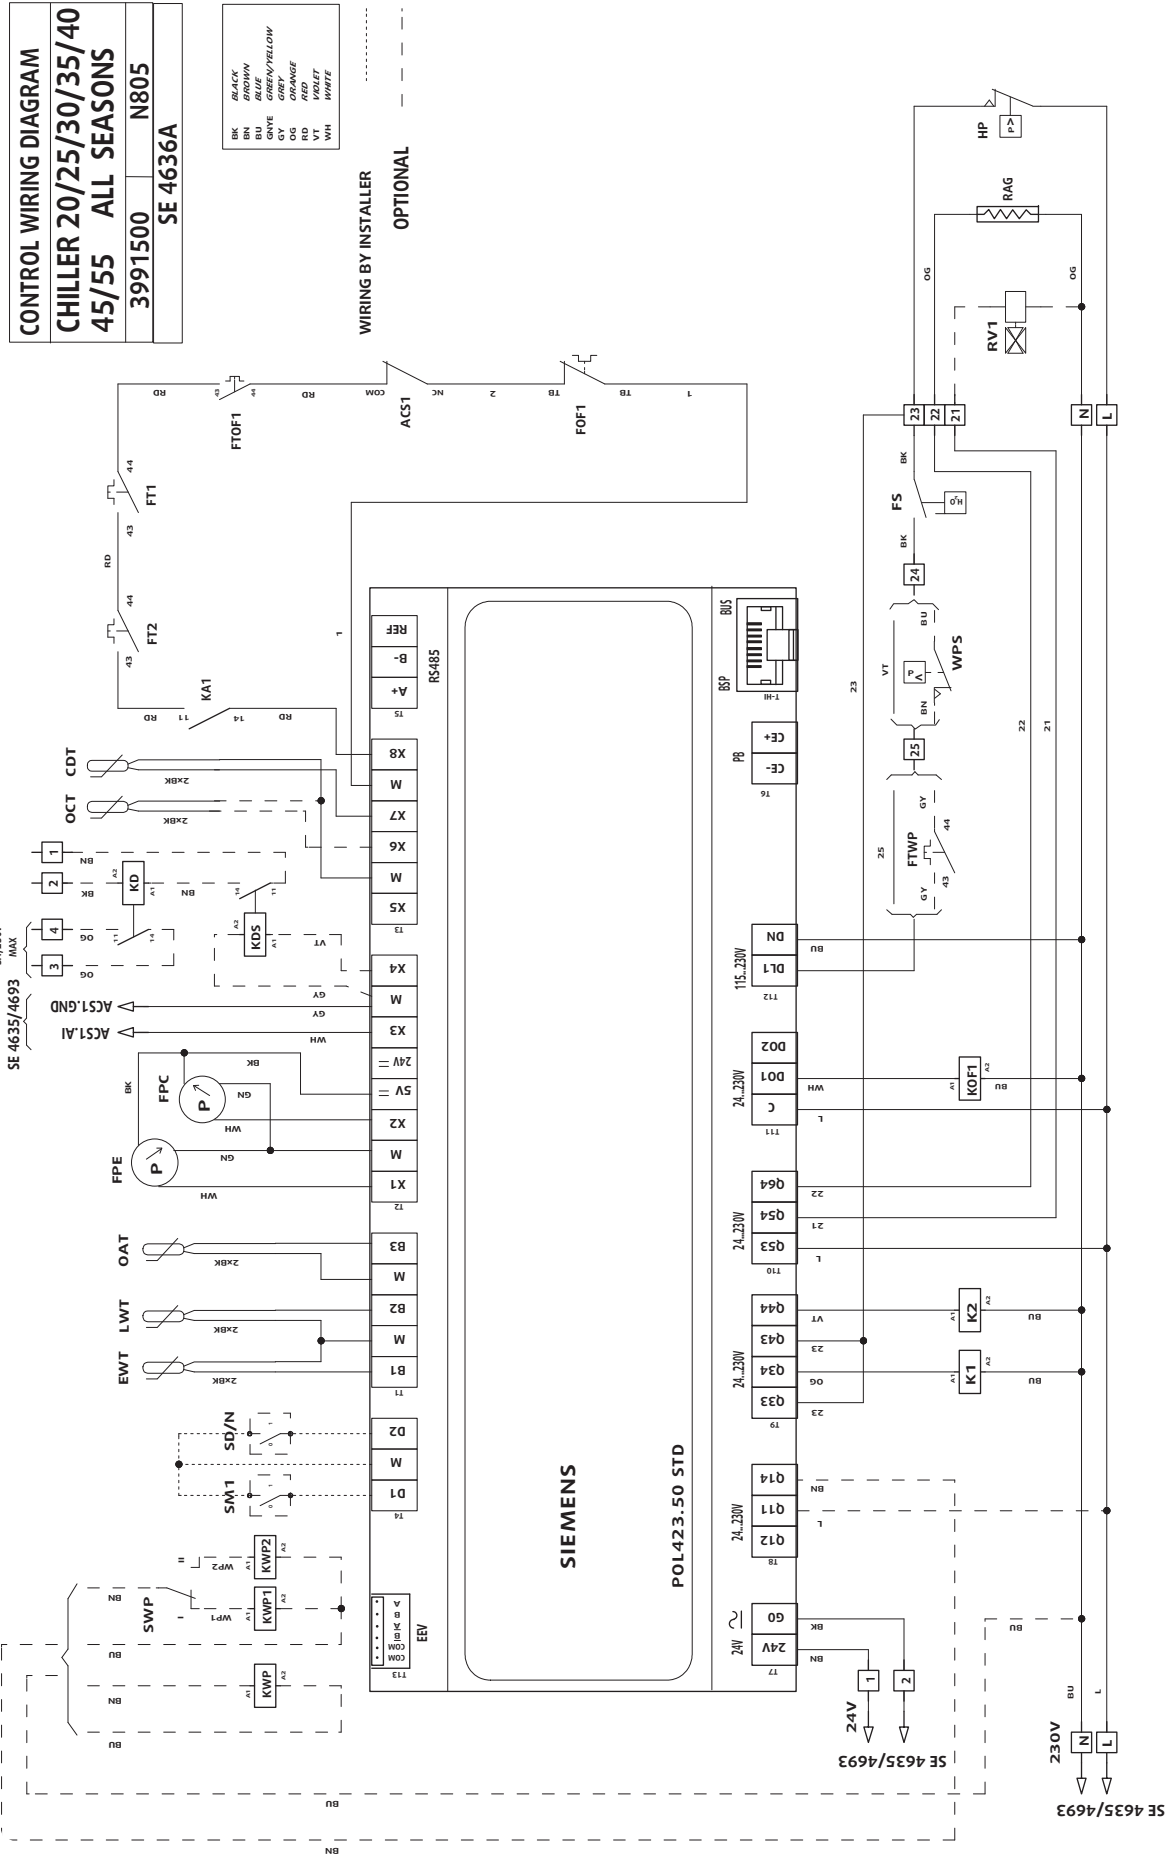


# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

TTS - POWER - POL423

<b>POWER WIRING DIAGRAM</b>	
<b>CHILLER 20/25/30/35/40/45/55 ALL SEASONS</b>	
<b>3991499</b>	<b>N805</b>
<b>SE 4635 B</b>	

BK	BLACK
BN	BROWN
BU	BLUE
GY	GREEN/YELLOW
OG	ORANGE
VT	VIOLET
WH	WHITE

OPTIONAL

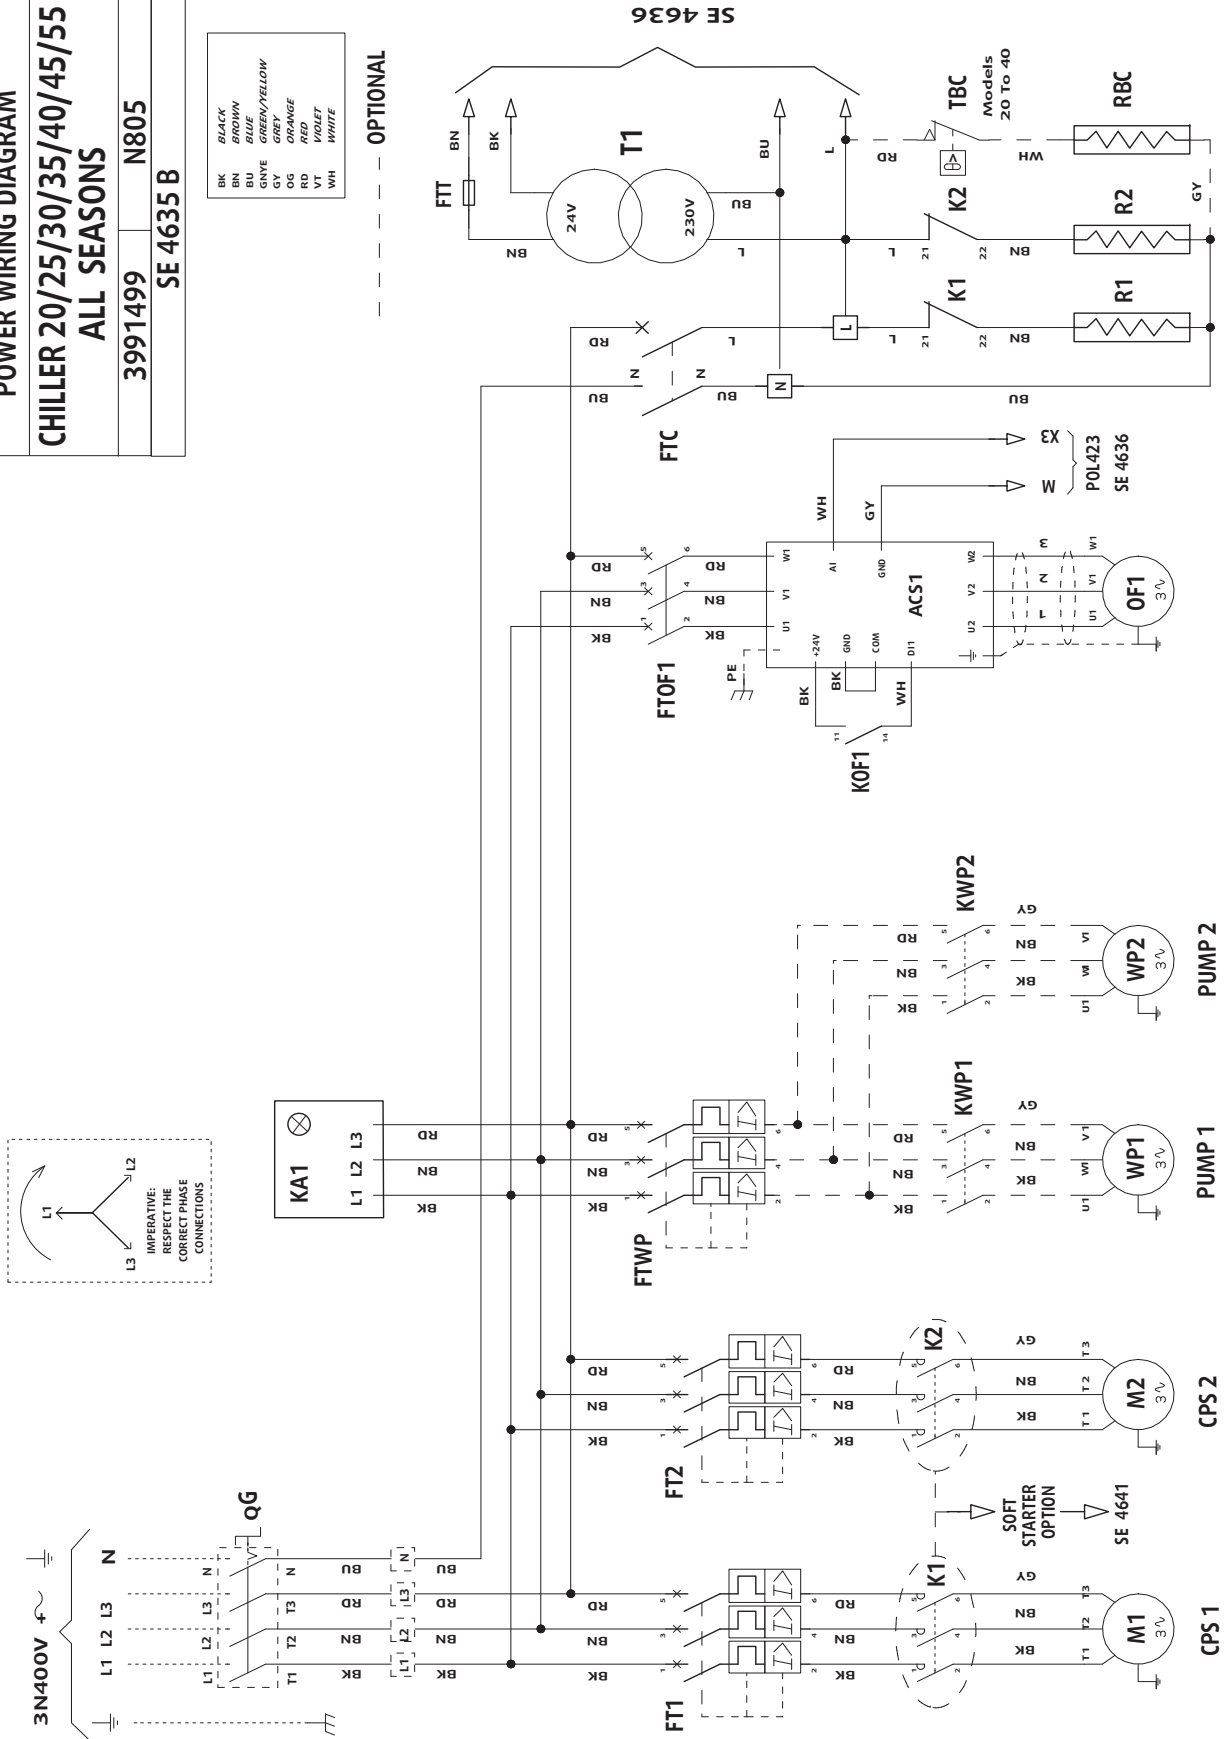


TTS - CONTROL - POL688

**CONTROL WIRING DIAGRAM**  
**CHILLER 25/30/35/40/45/55**  
**ALL SEASONS**  
**J581626 N805**  
**SE 4752 A**

BK	BLACK
BN	BROWN
GN	GREEN
GY	GREY
OG	ORANGE
RD	RED
VT	VIOLET
WH	WHITE
WY	YELLOW

..... WIRING BY INSTALLER  
 - - - - - OPTIONAL

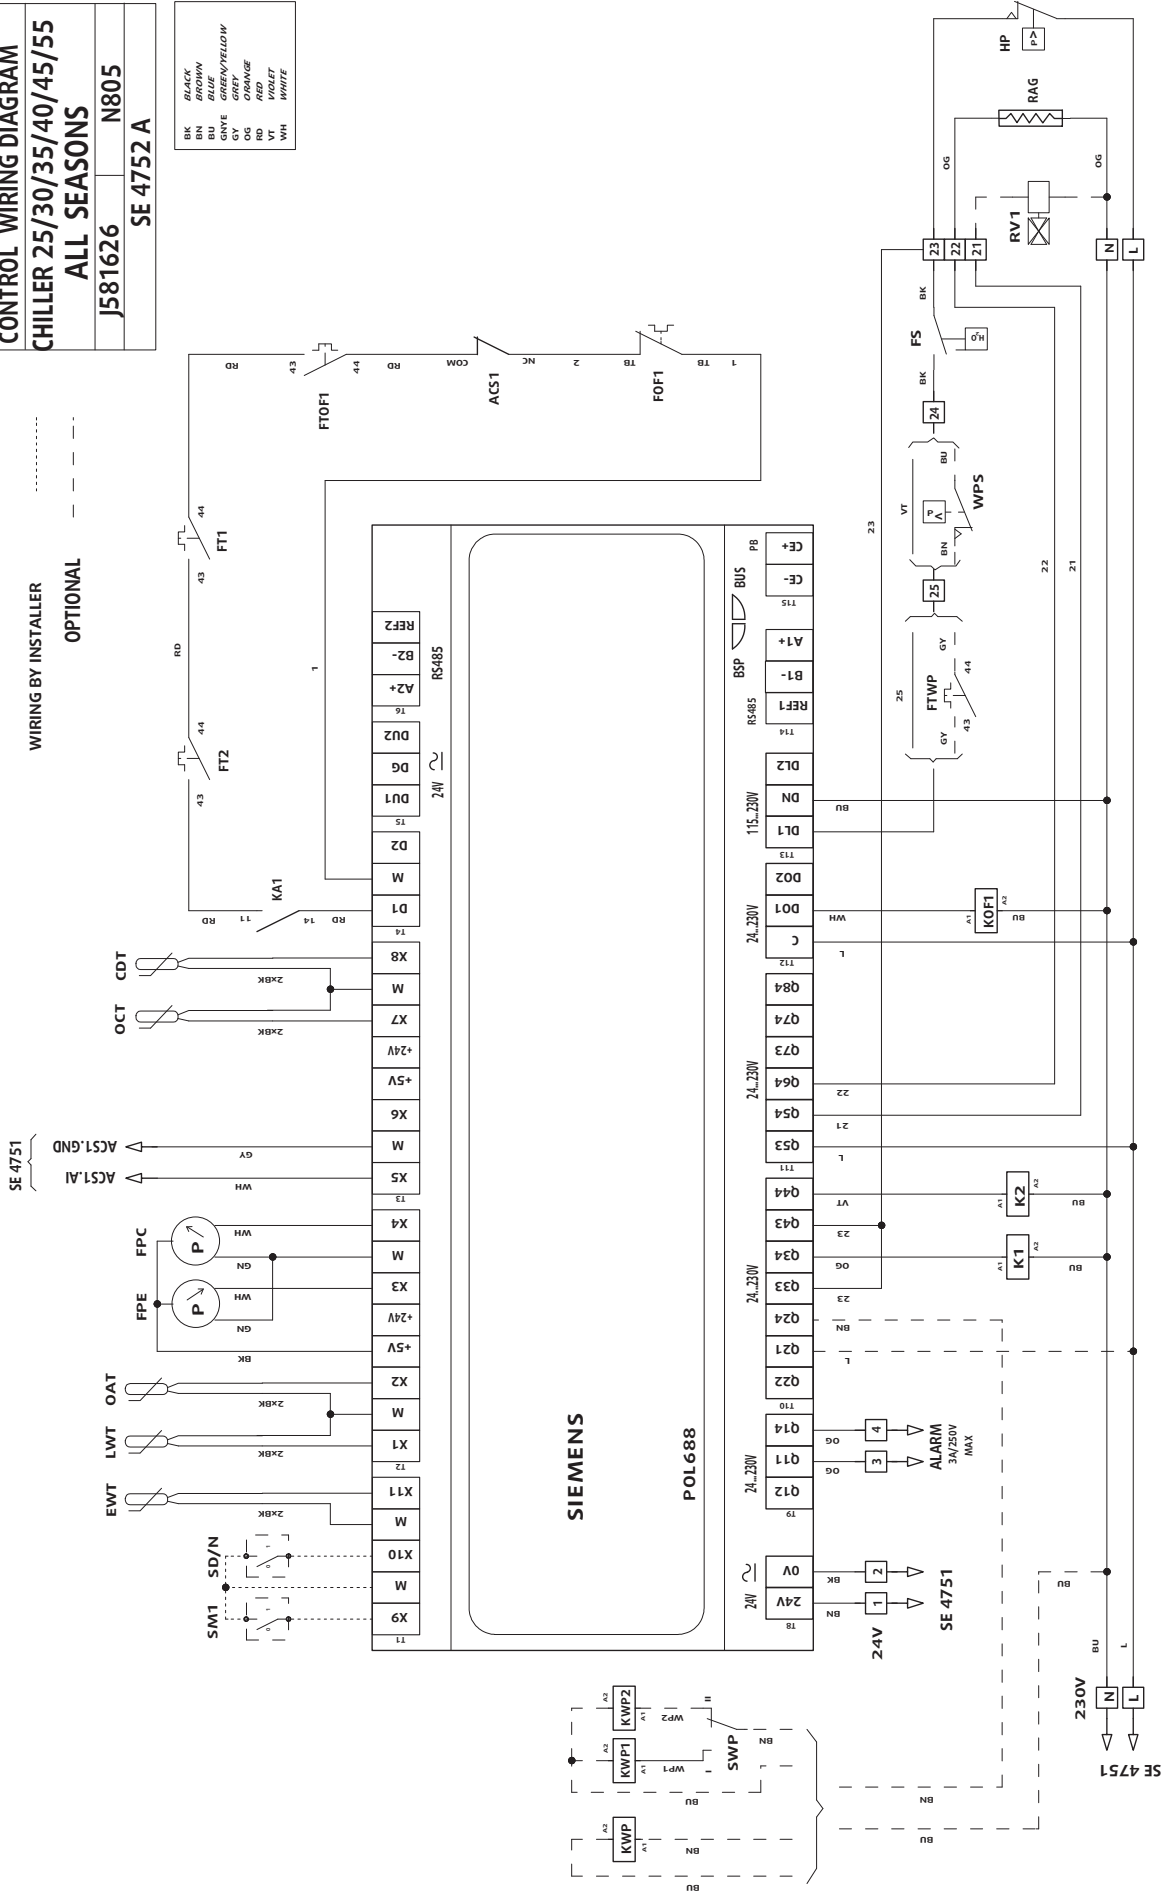


# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

TTS - POWER - POL688

<b>POWER WIRING DIAGRAM</b>	
<b>CHILLER 20/25/30/35/40/45/55</b>	
<b>ALL SEASONS</b>	
<b>J581625</b>	<b>N805</b>
<b>SE 4751 A</b>	

BK	BLACK
BN	BROWN
BR	BLUE
GY	GREEN/YELLOW
GR	GREY
OG	ORANGE
RD	RED
VT	VIOLET
WH	WHITE

OPTIONAL


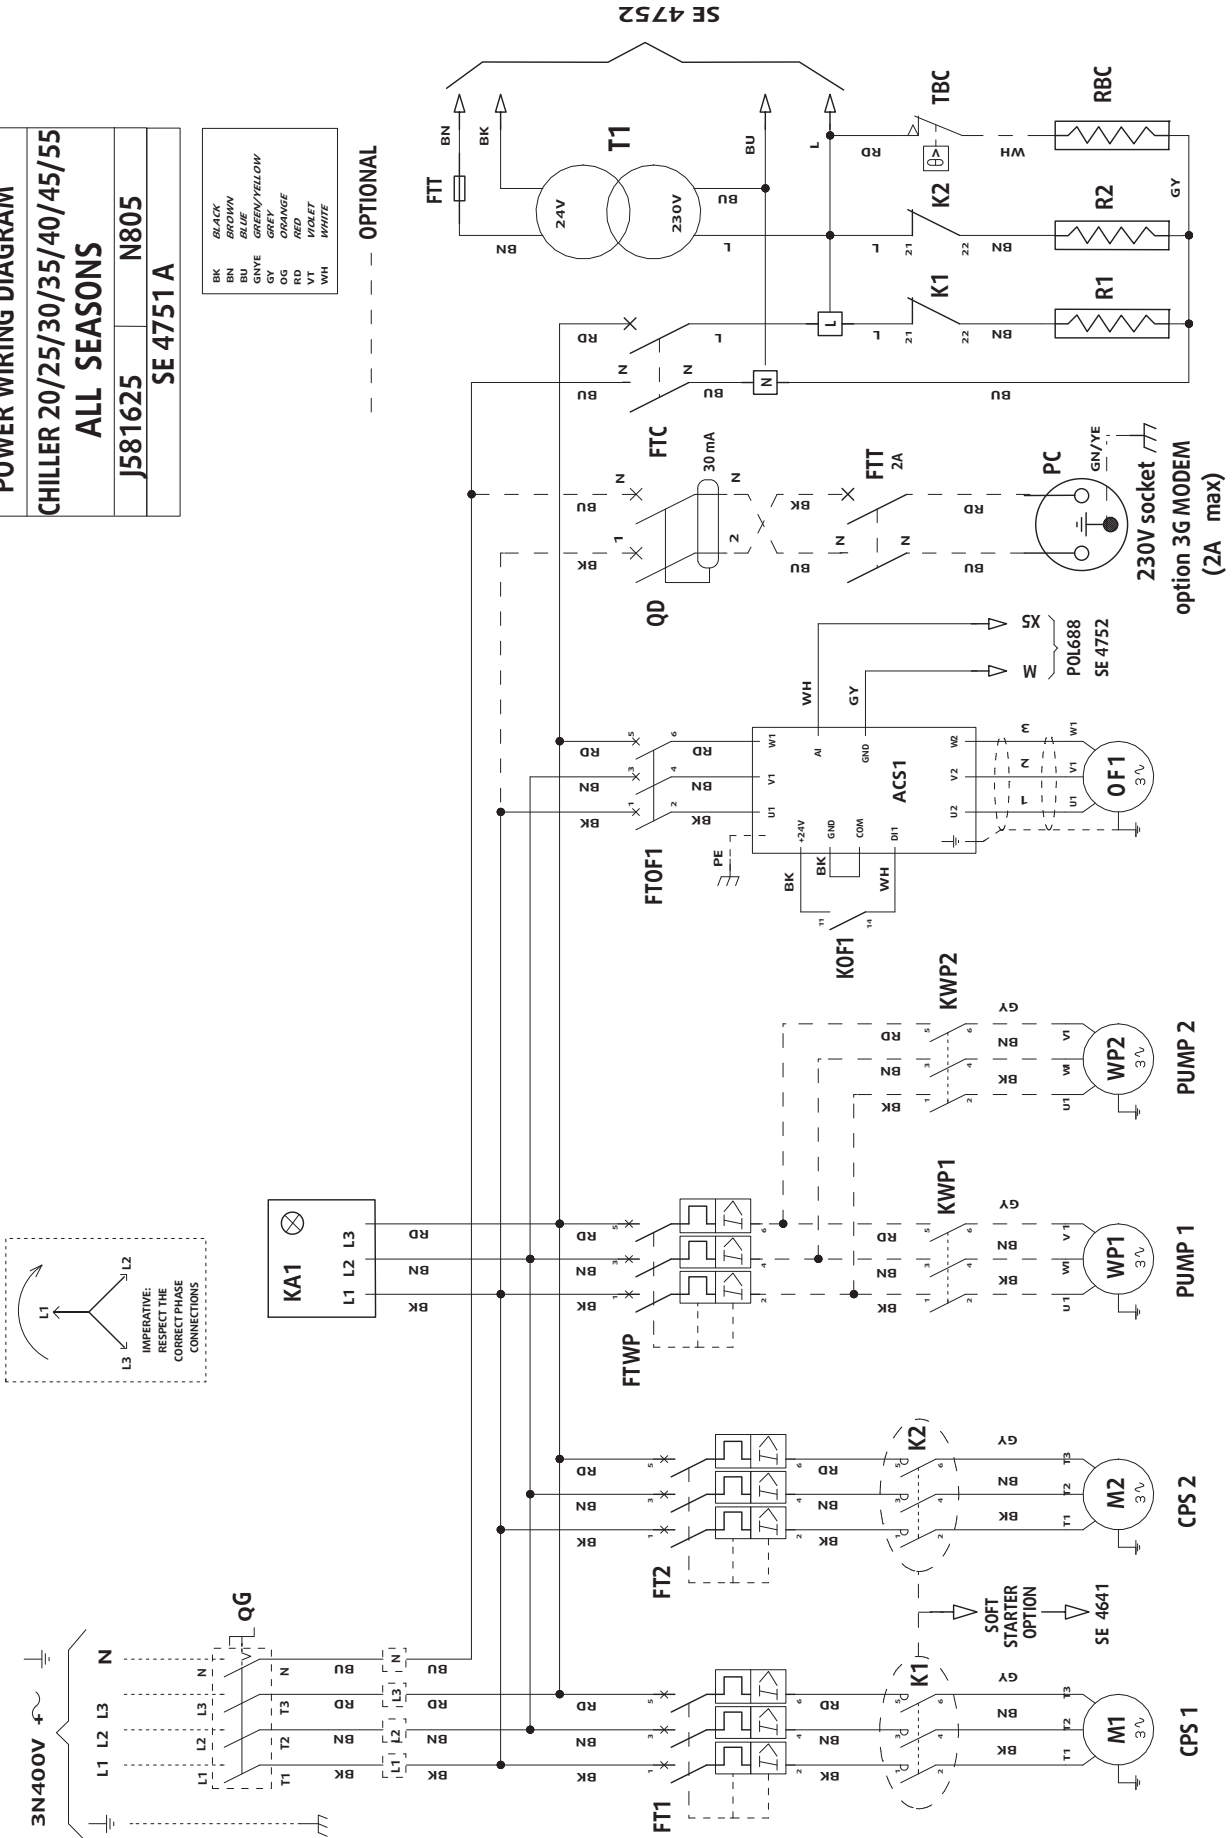




SOFT STARTER  
POL423

POWER WIRING DIAGRAM	
CHILLER 20/25/30/35/40/45/ 55/65/75/90/105/125 SOFT STARTER OPTION	
3991505	N805
SE 4641 A	

BK	BLACK
BN	BROWN
BU	BLUE
GNVE	GREEN/YELLOW
GY	GREY
OG	ORANGE
RD	RED
VT	VIOLET
WH	WHITE

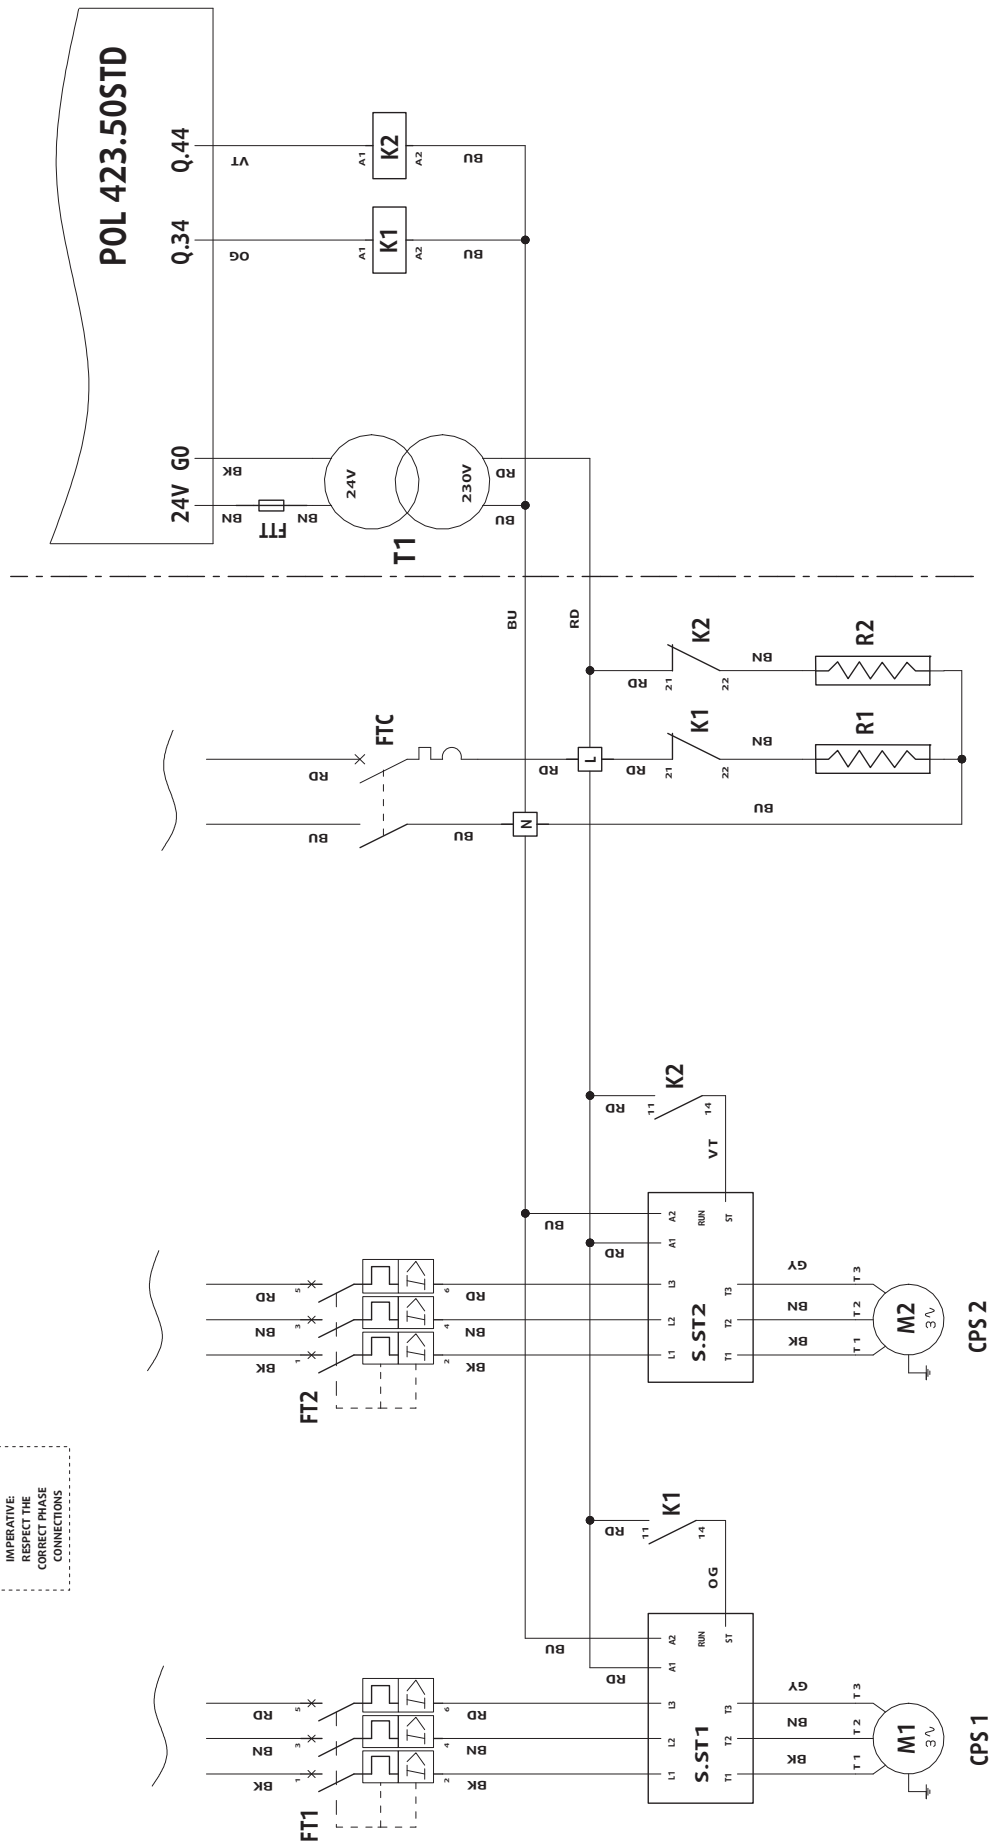
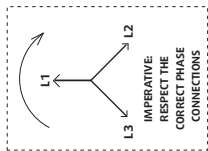


# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

POL688

<b>POWER WIRING DIAGRAM</b>	
<b>CHILLER 20/25/30/35/40</b>	
<b>45/50/65/75/90/105/125</b>	
<b>SOFT STARTER OPTION</b>	
<b>J581629</b>	<b>N805</b>
<b>SE 4757 A</b>	



BK	BLACK
BRN	BROWN
BU	BLUE
GY	GREEN/YELLOW
OG	GREY
RD	ORANGE
VT	RED
WH	VIOLET
	WHITE

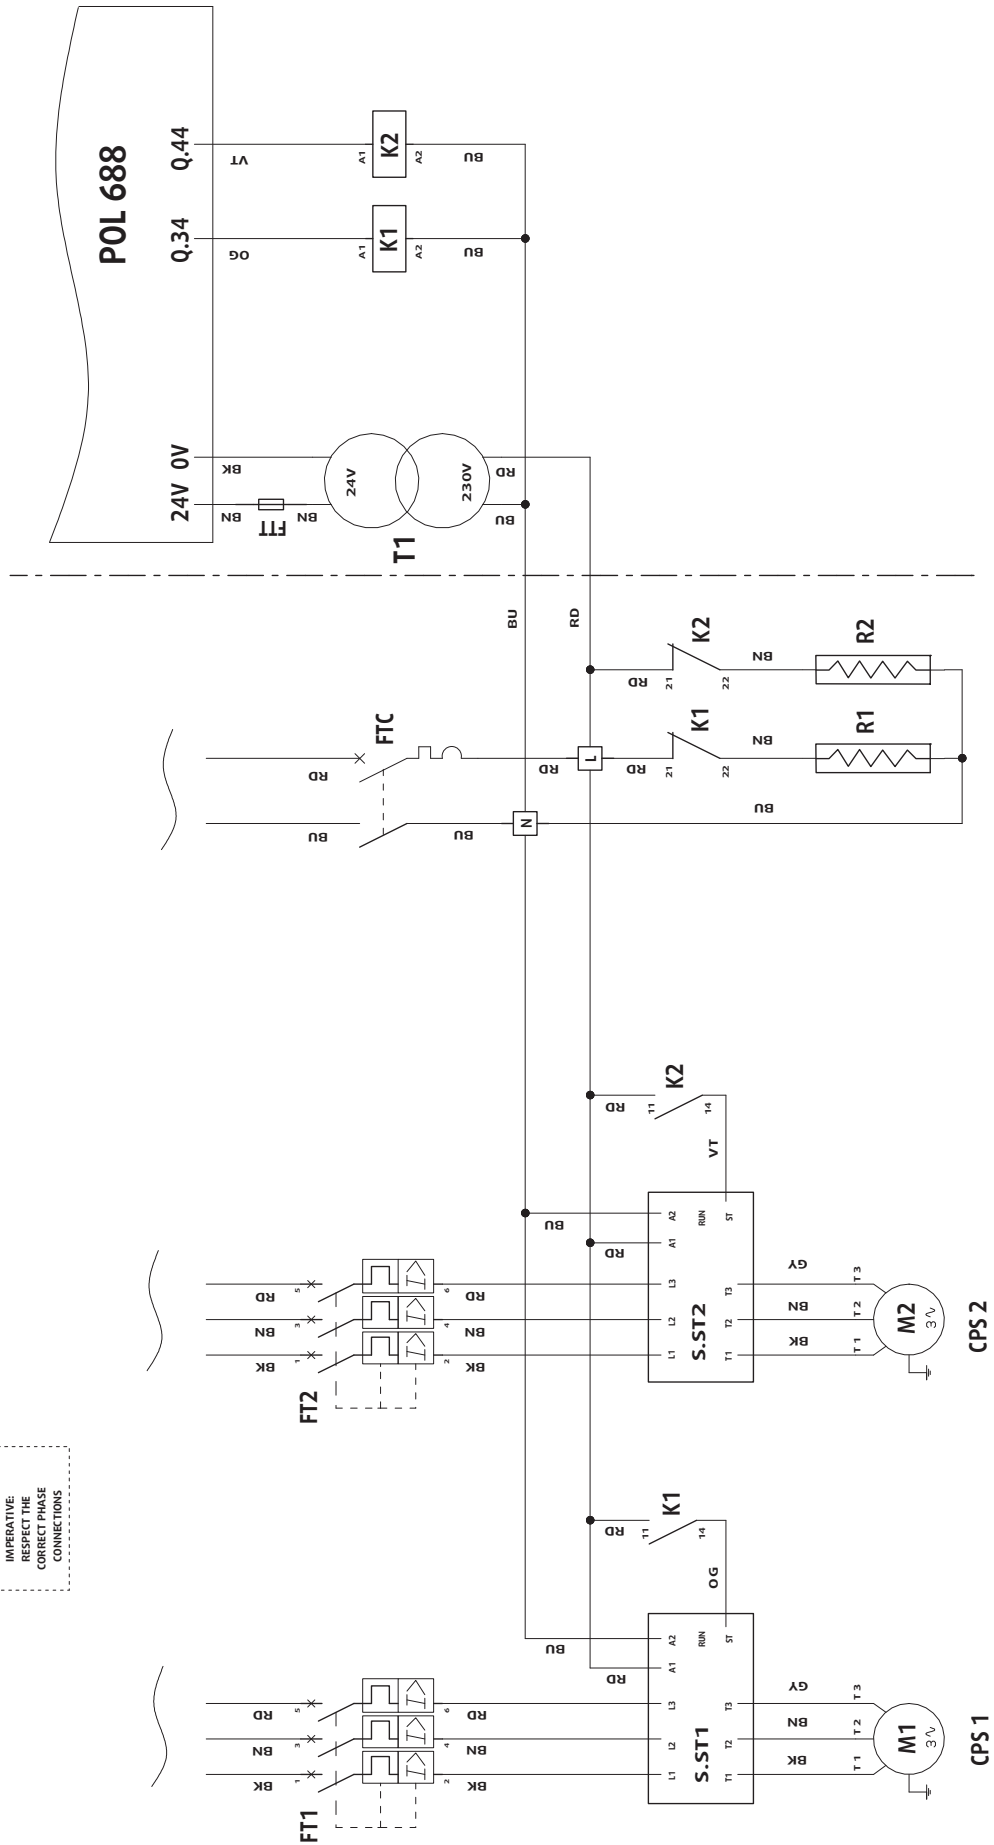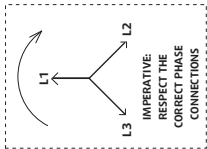

VARIABLE FLOW SIMPLE PUMP  
POL423

<b>POWER WIRING DIAGRAM</b>	
<b>CHILLER 20 TO 125</b>	
<b>VARIABLE FLOW SIMPLE</b>	
<b>PUMP OPTION</b>	
<b>J581524</b>	<b>N805</b>
<b>SE 4711 A</b>	

BK	BLACK
BN	BROWN
BU	BLUE
GNVE	GREEN/YELLOW
OG	ORANGE
RD	RED
VT	VIOLET
WH	WHITE

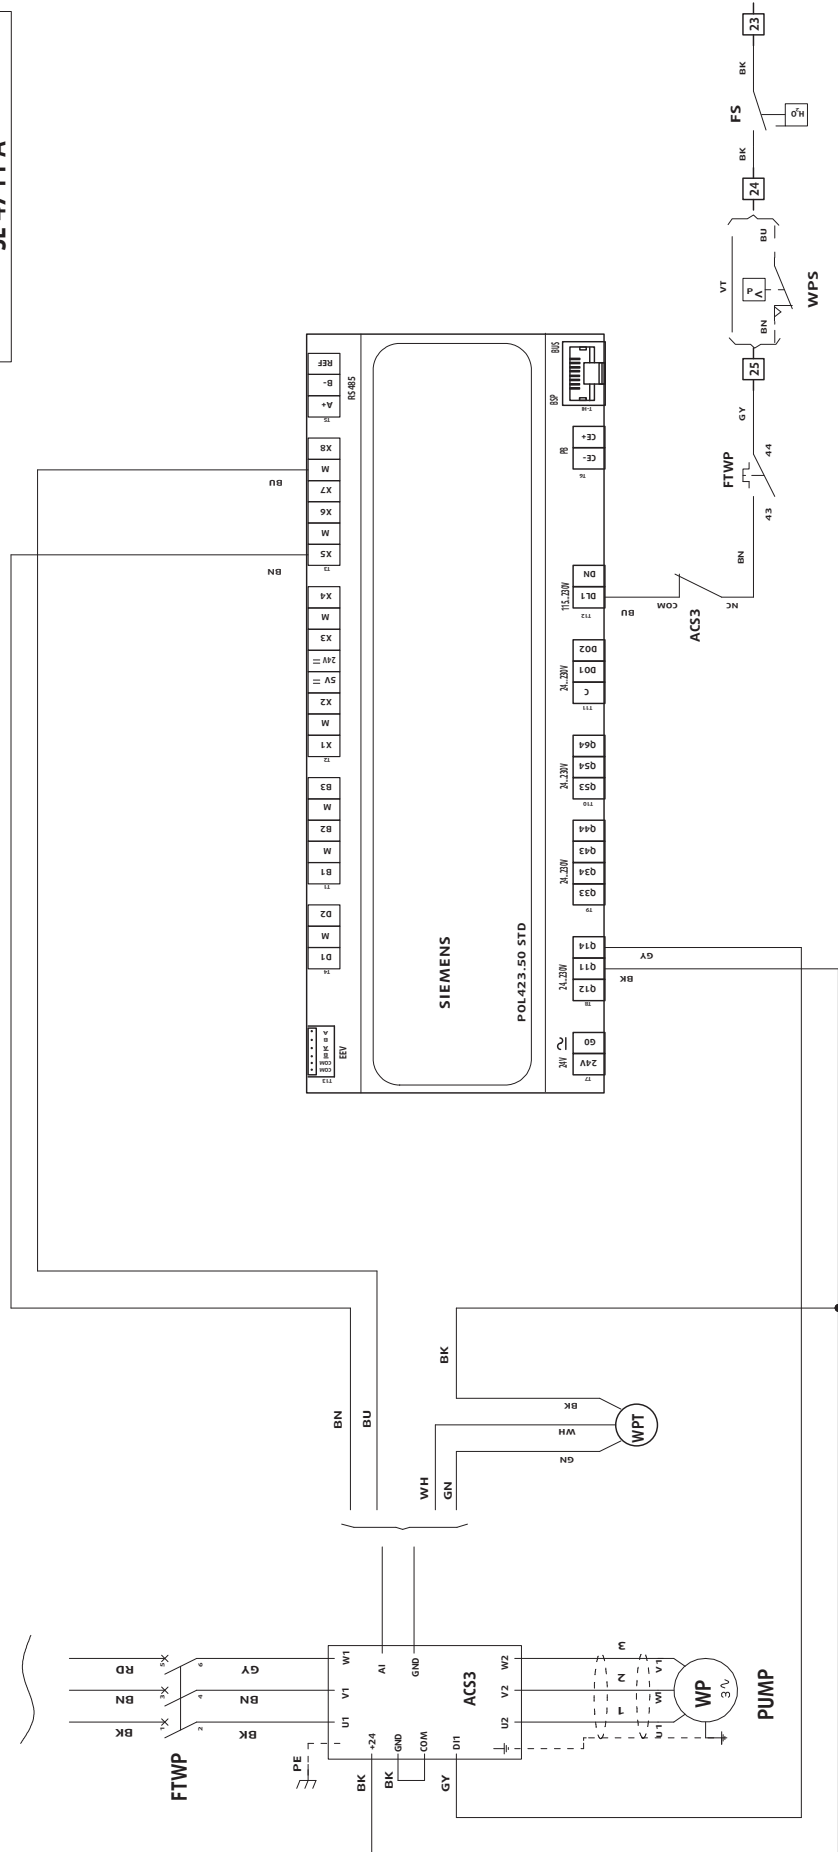
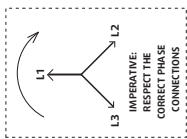


# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

POL688

<b>POWER WIRING DIAGRAM</b>	
<b>CHILLER 25 TO 125</b>	
<b>VARIABLE FLOW SIMPLE</b>	
<b>PUMP OPTION</b>	
<b>J581594</b>	<b>N805</b>
<b>SE 4758A</b>	

BK	BLACK
BN	BROWN
BU	BLUE
GY	GREEN/YELLOW
GN	GREEN
OG	ORANGE
OD	OLIVE
VT	VIOLET
WH	WHITE

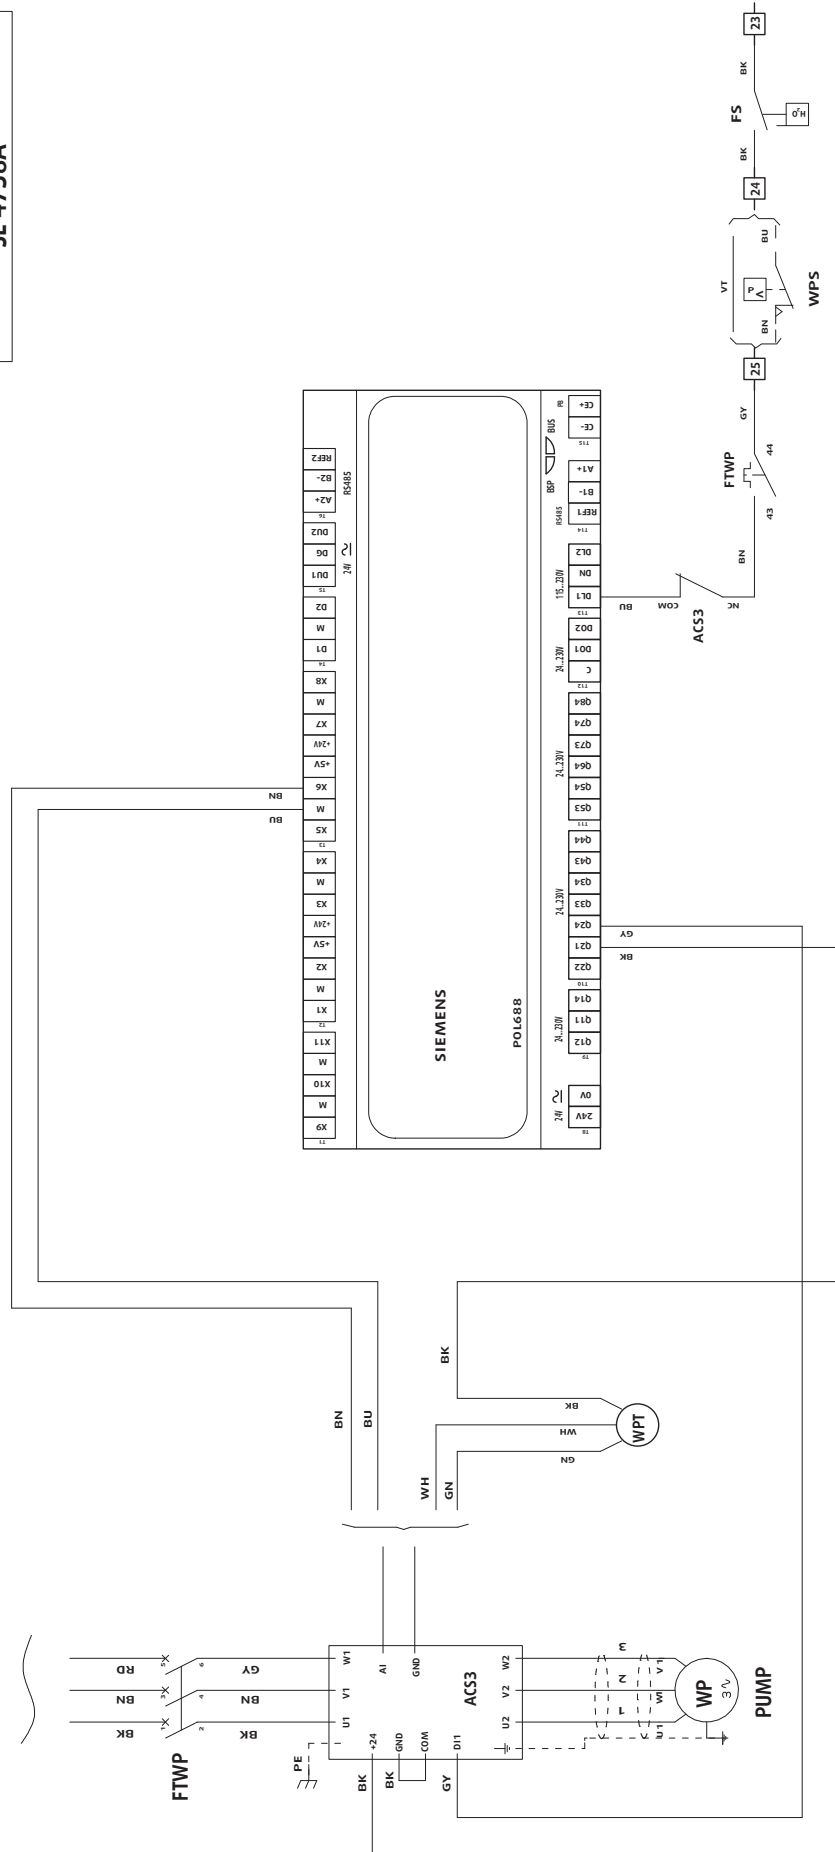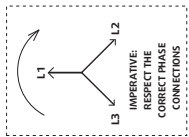

# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

## START UP FORM / FICHE DE MISE EN SERVICE

**CUSTOMER INFORMATION:**

Order number: ..... Job name: .....

Contractor: ..... Installation address: .....

Contact: ..... ☎: .....

**INSTALLER INFORMATION:**

Company: ..... Address: .....

Contact: ..... ☎: .....

**COMMISSIONING INFORMATION:**

Company: ..... Address: .....

Contact: ..... ☎: .....

**UNIT IDENTIFICATION:**

	20	25	30	35	40
SYSAQUA.L					
SYSAQUA.H					

Unit serial number: .....

	YES	NO		YES	NO		YES	NO
Simple pump	<input type="checkbox"/>	<input type="checkbox"/>	All seasons kit	<input type="checkbox"/>	<input type="checkbox"/>	XLN	<input type="checkbox"/>	<input type="checkbox"/>
Buffer tank	<input type="checkbox"/>	<input type="checkbox"/>	HPF	<input type="checkbox"/>	<input type="checkbox"/>	Soft Starter	<input type="checkbox"/>	<input type="checkbox"/>

Compressor 1 serial number: ..... Compressor 2 serial number: .....

**INSTALLATION CHECKING:**

	YES	NO		YES	NO
Recommended free clearance	<input type="checkbox"/>	<input type="checkbox"/>	Water connection, cleaning, rinsing, air bleed	<input type="checkbox"/>	<input type="checkbox"/>
Level installation	<input type="checkbox"/>	<input type="checkbox"/>	Anti-frost protection of the water loop	<input type="checkbox"/>	<input type="checkbox"/>
Unit correctly mounted on supplied dampers	<input type="checkbox"/>	<input type="checkbox"/>	Installation thermal load reaches at least 50%	<input type="checkbox"/>	<input type="checkbox"/>
Power supply compatible with unit specifications	<input type="checkbox"/>	<input type="checkbox"/>	Mesh filter at the inlet of the unit	<input type="checkbox"/>	<input type="checkbox"/>
State-of-art power cable section and wiring to the unit	<input type="checkbox"/>	<input type="checkbox"/>	Minimum water flowrate available	<input type="checkbox"/>	<input type="checkbox"/>
Ground cable is wired	<input type="checkbox"/>	<input type="checkbox"/>	Flowswitch cut-out checked	<input type="checkbox"/>	<input type="checkbox"/>
Main electrical protection suits the unit	<input type="checkbox"/>	<input type="checkbox"/>	Crankcases heaters are energized since 12 hours	<input type="checkbox"/>	<input type="checkbox"/>
All electrical connections are correctly tightened	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>
Ground continuity on all pipes	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>

**OBSERVATIONS:**

.....

.....

.....

.....

.....

.....

.....

.....

.....

.....

# APPENDIX / ANNEXE / ANLAGE / ALLEGATO / ANEXO

## INSTALLATION MEASUREMENTS:

Ambient temperature: ..... Ambient humidity: .....

## ELECTRICAL MEASUREMENTS:

Voltage L1-N: ..... Voltage L1-L2:: .....

Voltage L1-L3: ..... Voltage L2-L3:: .....

Voltage unbalance less than 2 %      YES      NO  
     

**Never start the unit if the voltage unbalance is over 2 %. Please, contact your electricity supplier for help.**

	VOLTAGE			NOMINAL CURRENT		
	L1-L2	L1-L3	L2-L3	L1	L2	L3
Comp. 1						
Comp. 2						
Fan 1						
Pump 1						

## THERMODYNAMICS MEASUREMENTS:

% of capacity		%	%	%	%
Evaporating pressure		bar	bar	bar	bar
Evaporating temperature		°C	°C	°C	°C
Suction temperature		°C	°C	°C	°C
Condensing pressure		bar	bar	bar	bar
Condensing temperature		°C	°C	°C	°C
Liquid line temperature		°C	°C	°C	°C
Discharge temperature		°C	°C	°C	°C
High pressure switch cut-out		bar	bar	bar	bar

## HYDRAULICS MEASUREMENTS:

Inlet temperature	°C	Vmax (VARIABLE PRIMARY FLOW)	%
Outlet temperature	°C	Vmin (VARIABLE PRIMARY FLOW)	%
BPHE inlet pressure	kPa	Vstdby (VARIABLE PRIMARY FLOW)	%
BPHE outlet pressure	kPa	Water pressure setpoint	bar
Glycol type & contents	%		

## REMARKS:

.....  
 .....  
 .....  
 .....  
 .....

Date:
TECNICIAN:
Name:
Sign-in:

Date:
CLIENT:
Name:
Sign-in:



As part of our ongoing product improvement programme, our products are subject to change without prior notice. Non contractual photos.

## **Systemair AC SAS**

Route de Verneuil  
27570 Tillières-sur-Avre  
FRANCE

☎ : +33 (0)2 32 60 61 00

📠 : +33 (0)2 32 32 55 13



**IOM AQA 04-N-4GB**  
Part number : **J581665GB**  
Supersedes : **IOM AQA 04-N-3GB**