


Original instructions

SWXRT35

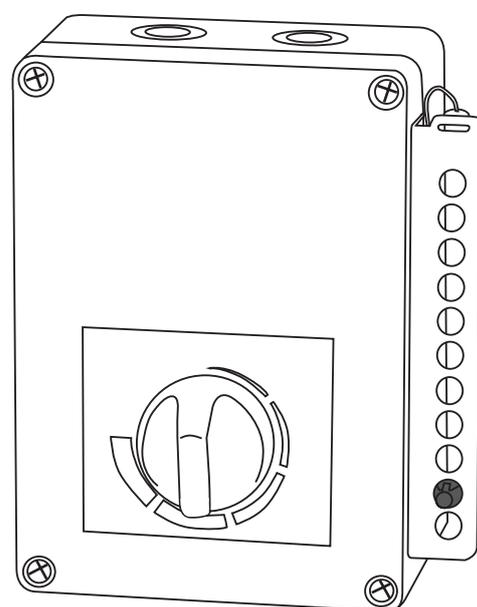

SE ... 3

EN ... 4

ES ... 5

FR ... 6

NL ... 7


NO ... 8

PL ... 9

DE ... 10

RU ... 11

A

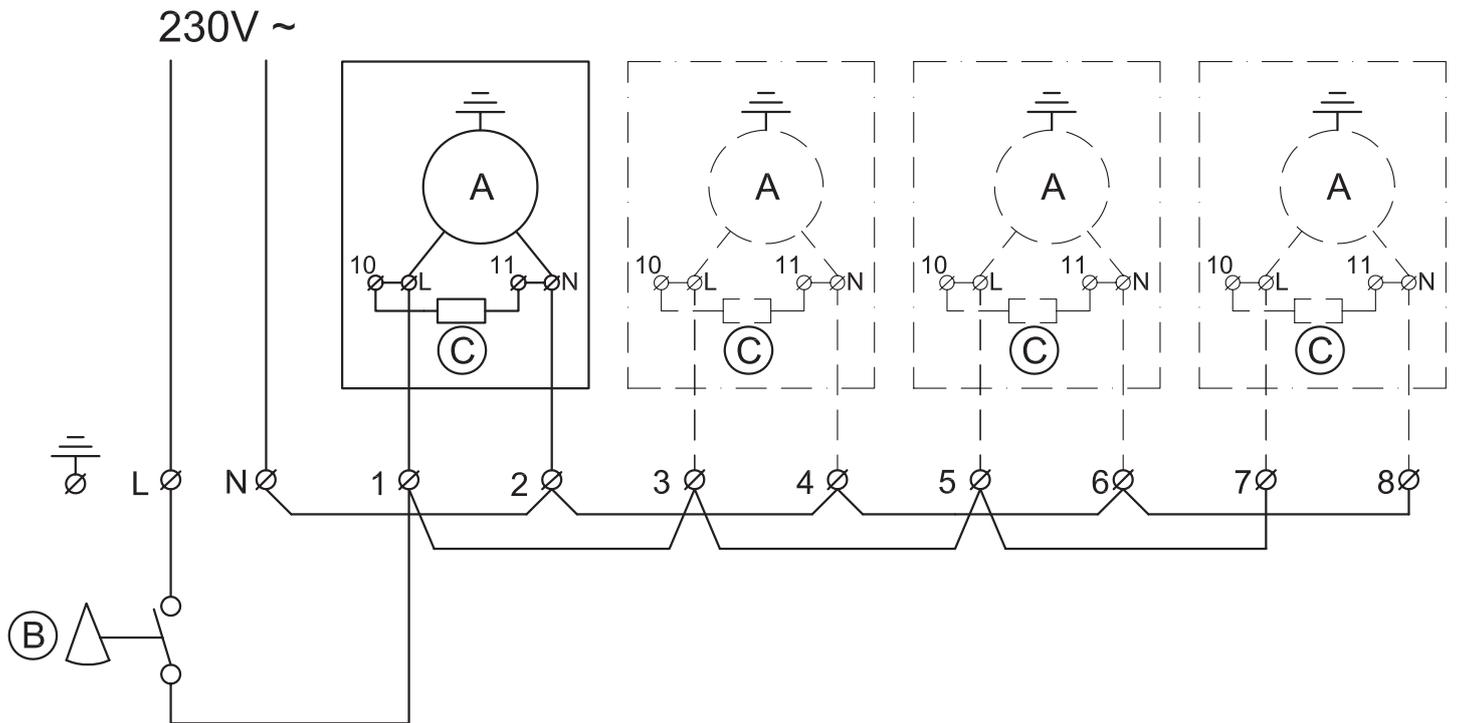

SE
 A Värmebläkt
 B Termostat
 C Ventil

GB
 A Fan heater
 B Thermostat
 C Valve

ES
 A Aerotermino
 B Termostat
 C Válvula

FR
 A Aérotherme
 B Thermostat
 C Vanne de
 régulation

NL
 A Luchtverhitter
 B Termostat
 C Ventiel

NO
 A Varmluftsvifte
 B Termostat
 C Ventil

PL
 A Nagrzewnica
 B Termostat
 C Valve

DE
 A Heizlüfter
 B Thermostat
 C Ventil

RU
 A Тепловой вентилятор
 B Термостат
 C клапаны

Safety

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

General Instructions

Read these instructions carefully prior to installation and use. Keep this manual for future reference. *The product may only be used as set out in the assembly and operating instructions. The guarantee is only valid should the product be used in the manner intended and in accordance with the instructions.*

Model SWXRT35

Thermostat SWXRT35 is a sealed thermostat for temperature regulation of heater fan SWX C for corrosive environments. The sealed casing is manufactured from polycarbonate plastic with metric knock outs and has an IP65 protection rating.

Temperature range: 0-35 °C

Voltage: 230VAC

Current load: 2,7A AC3

Installation

- The work must be done by a qualified electrician.
- Electrical connection to the mains requires fixed wiring. A multi-pole breaker with a minimum 3 mm length of break must be used for the permanent installation.
- Frico recommends that both the fan motor and the hot water supply are turned off when there is no demand for heat. This minimises contamination of the water battery and any filters, and minimises the heating costs.
- Position the thermostat such that it remains unaffected by any drafts from opened doors or windows, by sunlight, by the fan heater exhaust air, etc. If more than one fan heater is to be connected, position the thermostat such that it senses more than one heater.
- Number of fan heaters that may be connected to:
 - One thermostat is capable of regulating at most:
 - 2 SWXCS/CE22, or
 - 1 SWXCS/CE22 and 2 SWXCS/CE12, or
 - 4 SWXCS/CE12
- In order to avoid large temperature differences within the space, no more than two heaters should be connected to each thermostat.
- For a wiring diagram for thermostat SWXRT, see A.



Main office

Frico AB

Industrivägen 41

SE-433 61 Sävedalen

Sweden

Tel: +46 31 336 86 00

mailbox@frico.se

www.frico.net

**For latest updated information and information
about your local contact: www.frico.net**