

Montasjeanvisning

Boréa 125 mm

Art.nr.: 68872

Tilluft ved veggmontasje:

Rist åpen – plate lukket (fabrikkinnstilling)

Rist åpen – plate halvåpen (posisjon 1) eller helt åpen (posisjon 2)

Justerbar plate
lukket /åpen (+/-)



Plasser ventil slik at tilluft
blåses oppover (vinklede
lameller i rist).


Rist
åpen (+)

Tilluft ved himlingsmontasje:

Rist lukket – plate halvåpen (posisjon 1)

eller helt åpen (posisjon 2)

Justerbar plate
Posisjon 1 eller 2 (+)

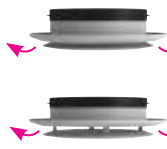


Panel posisjon 1
med sektorblender



Panel posisjon 2
med sektorblender

Rist
lukket (-)

Ventilen er utstyrt med sektorblender (A) som gjør
det mulig å styre luftretninger på tilluften. (Se figur).
For 360° innblåsning – fjern sektorblender.

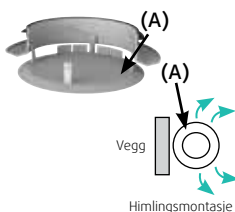

Vegg
Himlingsmontasje

Ventilen skal aldri stenges helt!

www.systemair.no



Installation instructions

Boréa 125 mm


Art.no.: 68872

Supply air wall mounting:

Grille open – panel closed (factory setting)

Grille open – panel half open (position 1) or completely opened (position 2)

Adjustable panel
closed/open (+/-)

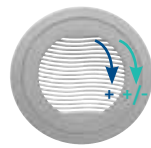

Place diffuser so that air
discharge upwards
(angled grille)



Sealable grille
open (+)

Supply air ceiling mounting:

Grille closed – panel half open (position 1)

or completely opened (position 2)

Adjustable panel
Position 1 or 2 (+)

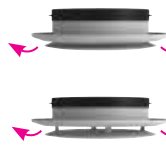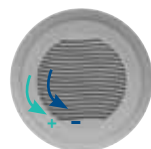


Panel position 1
with deflectors



Panel position 2
with deflectors

Sealable grille
closed (-)

The diffuser is equipped with separable deflectors (A)
which enable a specific air discharge direction (see
adjacent figure). For 360° discharge or for extract air
– remove the deflectors.

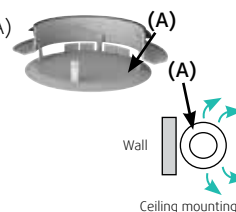

Wall
Ceiling mounting

Never close the diffuser completely!

www.systemair.no



Montasjeanvisning

Boréa 125 mm


Art.nr.: 68872

Tilluft ved veggmontasje:

Rist åpen – plate lukket (fabrikkinnstilling)

Rist åpen – plate halvåpen (posisjon 1) eller helt åpen (posisjon 2)

Justerbar plate
lukket /åpen (+/-)

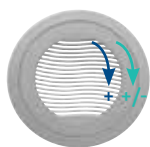

Plasser ventil slik at tilluft
blåses oppover (vinklede
lameller i rist).


Rist
åpen (+)

Tilluft ved himlingsmontasje:

Rist lukket – plate halvåpen (posisjon 1)

eller helt åpen (posisjon 2)

Justerbar plate
Posisjon 1 eller 2 (+)

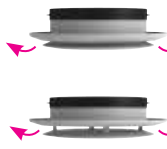


Panel posisjon 1
med sektorblender



Panel posisjon 2
med sektorblender

Rist
lukket (-)

Ventilen er utstyrt med sektorblender (A) som gjør
det mulig å styre luftretninger på tilluften. (Se figur).
For 360° innblåsning – fjern sektorblender.

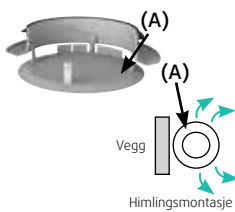

Vegg
Himlingsmontasje

Ventilen skal aldri stenges helt!

www.systemair.no



Installation instructions

Boréa 125 mm

Art.no.: 68872

Supply air wall mounting:

Grille open – panel closed (factory setting)

Grille open – panel half open (position 1) or completely opened (position 2)

Adjustable panel
closed/open (+/-)



Place diffuser so that air
discharge upwards
(angled grille)



Sealable grille
open (+)

Supply air ceiling mounting:

Grille closed – panel half open (position 1)

or completely opened (position 2)

Adjustable panel
Position 1 or 2 (+)

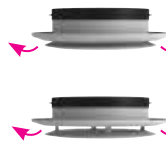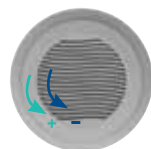


Panel position 1
with deflectors



Panel position 2
with deflectors

Sealable grille
closed (-)

The diffuser is equipped with separable deflectors (A)
which enable a specific air discharge direction (see
adjacent figure). For 360° discharge or for extract air
– remove the deflectors.

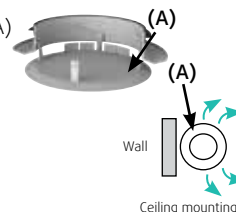

Wall
Ceiling mounting

Never close the diffuser completely!

www.systemair.no



Installasjon

Ventil:

Ventilen monteres i kanal/lydfelle.



Installation

Diffuser only:

The diffuser is inserted into the duct/silencer.



Installasjon

Ventil:

Ventilen monteres i kanal/lydfelle.



Installation

Diffuser only:

The diffuser is inserted into the duct/silencer.

