


## **Components**

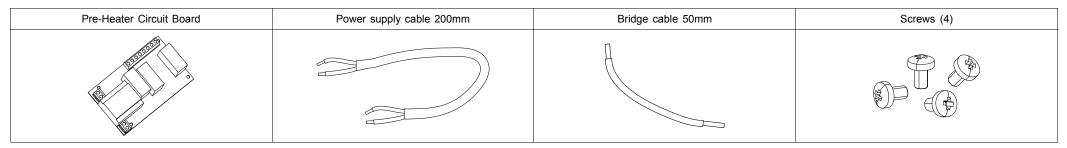

## **Installation process**



## Warning

- Make sure that the Mains supply to the unit is disconnected before performing any maintenance or electrical work!
- All electrical connections and maintenance work must be carried out by an authorized installer and in accordance with local rules and regulations.
- 1. Attach the pre-heater circuit board to the print card via connector (pos 1).
- 2. Secure the board in place using screws in each corner (pos 2)
- 3. Connect the power supply cable: connect both ends of blue wire (pos 3) to "N" connections on the print card and pre-heater board; connect both ends of brown wire (pos 4) to "L" connecions on the print card and pre-heater board.
- Bridge "SR and "12V" terminals with bridge cable (pos 5) if emergency thermostat is not being used.
- Connect Electrical pre-heater battery (ELH) cables, brown cable (pos 6) to the "N" connection, blue calbe (pos 7) to the "L" connection on pre-heater board.

