


Connection diagram **AES-SS2M**

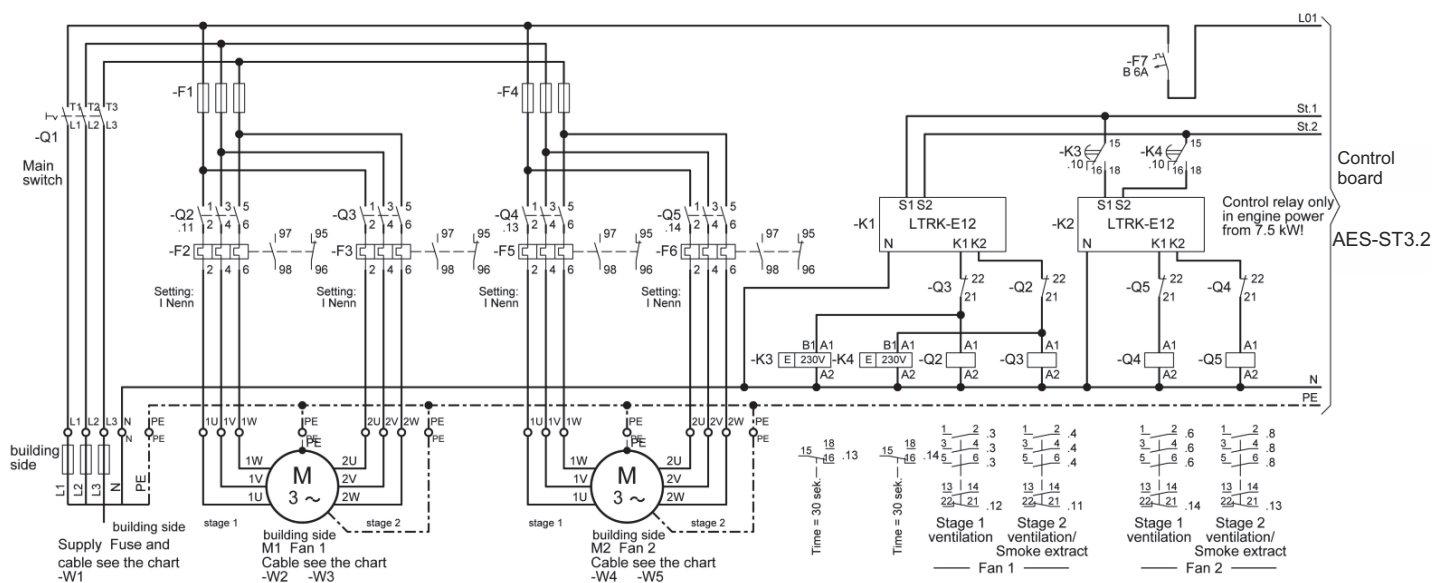

KW	Fuse	Fuse F1, F4	Supply -W1	Smoke extract fan -W2, W3, W4, W5
4	T 35 A	T 20 A	* 5x2,5 qmm	* 4x2,5 qmm
5,5	T 50 A	T 25 A	* 5x10 qmm	* 4x4 qmm
7,5	T 50 A	T 25 A	* 5x10 qmm	* 4x4 qmm

★ All specifications, minimum cross-sections without consideration of layout, cable length and network type for cables in the functional integrity design E90 or layout F90.

The connection of the auxiliary contacts of F1 and the cables L01, unit 1, N see data sheet AES-ST3.2

The current value of the motor protection relay has to be set before placing in operation.