

Topvex SoftCooler TR/SR

Mounting of droplet eliminator



Installation instructions

Contents

1 Safety instructions	1
2 Mounting of droplet eliminator	1

1 Safety instructions

Warning

Before performing any work do as followed to avoid injuries:

- Stop the operation through the control panel of the air handling unit.
- Break and lock the safety switch for the air handling unit.
- Break and lock the safety switch for the cooling unit.

Note:

The images show mounting in a right handed unit. In left handed units the procedure is mirrored.

2 Mounting of droplet eliminator

1

Losen the upper carrier

The upper carrier is located in the roof above the droplet tray, a plate that will keep the droplet eliminator in place against the cooling coil.

Losen the screw (1pcs 8mm hex) that fasten the carrier and pull out the carrier from the inner bracket.




2

Mount the droplet eliminator with the opened gable downwards. Make sure that the arrow on top of the eliminator is in the air direction. Place the first eliminator in the droplet trays inner part and pull it against the service side, then place the second eliminator.



3

Fasten the upper carrier. Complete the mounting by pushing the upper carrier into the inner bracket. Fasten with the screw (1pcs 8mm hex) in the brackets outer end. Close the service doors and start the unit according to the "Air handling units Installation and operating instructions".

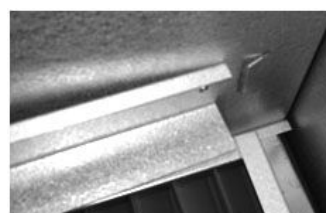

Systemair AB reserves the right to make changes and improvements to the contents of this manual without prior notice.



Systemair AB
Industrivägen 3
SE-739 30 Skinnkatteberg, Sweden

Phone +46 222 440 00

Fax +46 222 440 99

www.systemair.com